

## DISASSEMBLY

### 1. REMOVE REAR WHEEL


**Torque: 103 N·m ( 1,050 kgf·cm, 76 ft·lbf)**

### 2. REMOVE REAR DISC BRAKE ASSEMBLY

- (a) Remove the 2 mounting bolts and remove the disc brake assembly.

**Torque: 103 N·m ( 1,050 kgf·cm, 76 ft·lbf)**

- (b) Suspend the disc brake securely. Ensure that the hose is not stretched.

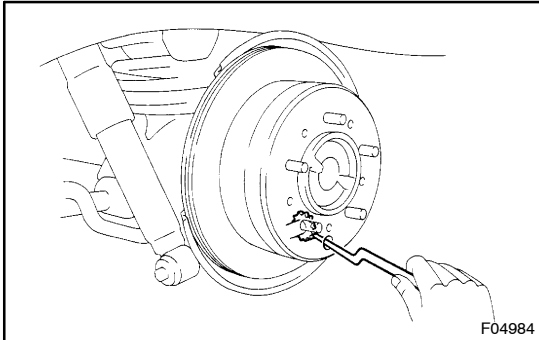


### 3. REMOVE DISC

- (a) Place matchmarks on the disc and rear hub.
- (b) Remove the disc.


#### HINT:

If the disc cannot be removed easily, turn the shoe adjuster until the wheel turns freely.

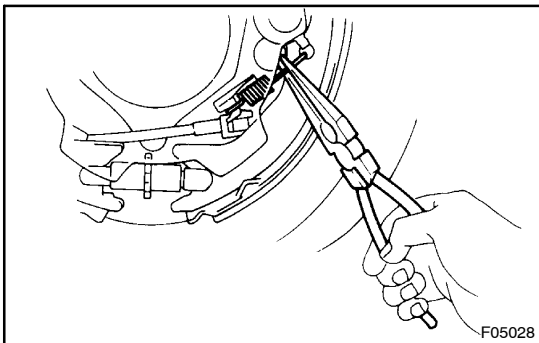

### 4. REMOVE TENSION SPRING

- (a) Using needle –nose pliers, remove the spring from the rear shoe and backing plate.
- (b) Remove the lower side tension spring.

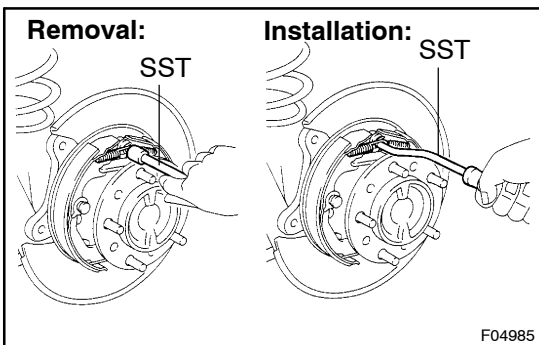

### 5. REMOVE SHOE RETURN SPRINGS


Using SST, remove the 2 shoe return springs.

SST 097 17-20010

#### HINT:

At the time of installation, using SST, install the rear shoe return spring and then install the front shoe return spring.


SST 097 18-20010

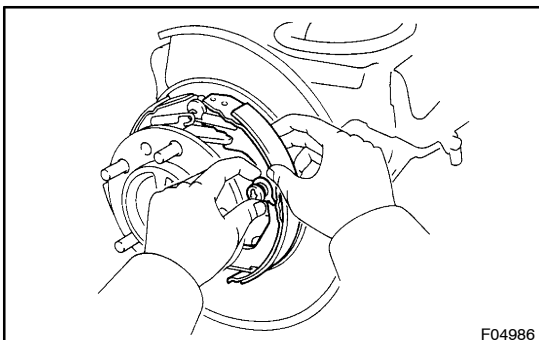


### 6. REMOVE SHOE STRUT WITH SPRING

### 7. REMOVE REAR SHOE, ADJUSTER AND TENSION SPRING


- (a) Slide out the rear shoe and remove the adjuster.
- (b) Remove the shoe hold –down spring, 2 cups and pin.

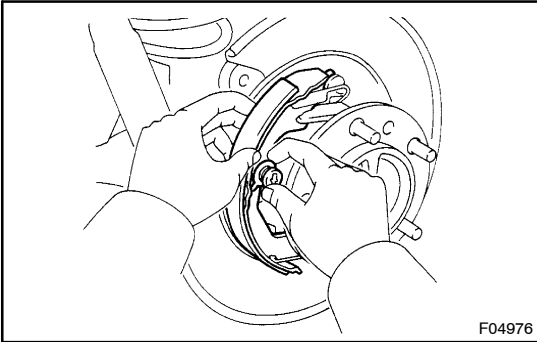**8. REMOVE FRONT SHOE**

- (a) Slide out the front shoe.
- (b) Disconnect the parking brake cable No. 2 from the parking brake shoe lever.
- (c) Remove the shoe hold -down spring, 2 cups and pin.

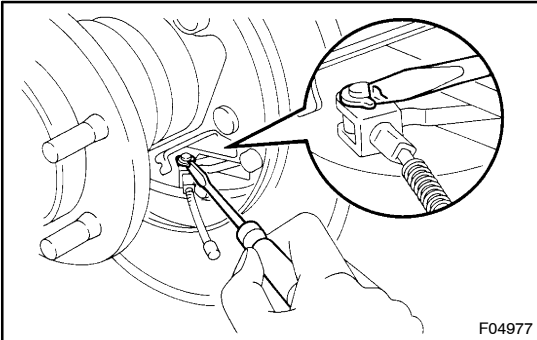
**9. IF NECESSARY, REMOVE AND DISASSEMBLE PARKING BRAKE BELLCRANK ASSEMBLY**

- (a) Using a screwdriver, remove the C -washer.
- (b) Remove the pin and disconnect the parking brake cable No. 2 from the bellcrank.
- (c) Remove the clip and pin.
- (d) Disconnect the parking brake cable and remove the clip.
- (e) Remove the 2 tension springs.

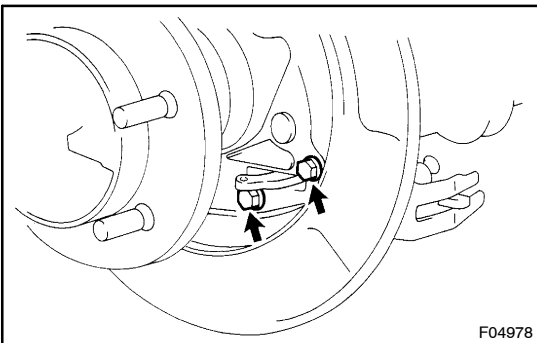

- (f) Remove the 2 bolts and parking brake bellcrank assembly.

**Torque: 13 N·m ( 130 kgf·cm, 9 ft·lbf)**

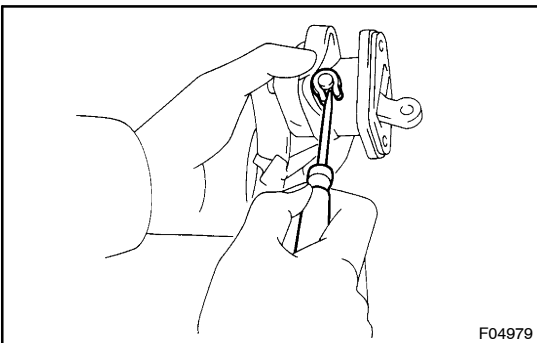

- (g) Turn the boot over from parking brake bellcrank bracket.
- (h) Using a screwdriver, remove the C -washer and pin.
- (i) Remove the parking brake bellcrank from the bellcrank bracket.
- (j) Remove the bellcrank boot from the bellcrank.