


CIRCUIT INSPECTION

Speed Sensor Circuit

CIRCUIT DESCRIPTION


Speed of 3km/h or more is detected in this circuit, auto –controlled operation will be stopped.

WIRING DIAGRAM

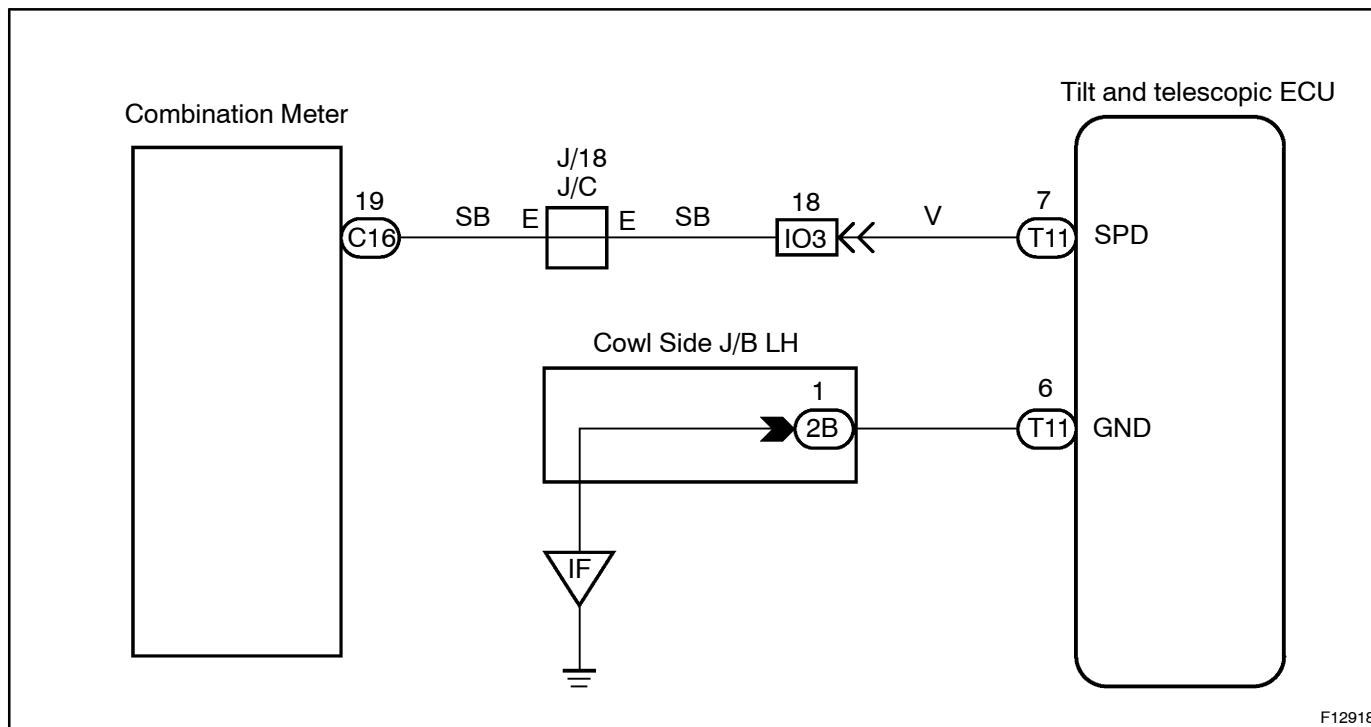

INSPECTION PROCEDURE

- 1 Check voltage between terminals SPD and GND of ECU connector.

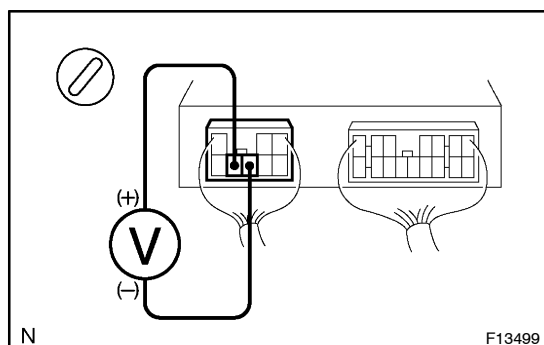

PREPARATION:

Power the ECU with connectors still connected.

CHECK:

Turn the ignition switch ON and measure the voltage between terminals SPD and GND of ECU connector.

OK:

Voltage: below 1.5 V or 8 – 16 V

OK

Check and replace the tilt and telescopic ECU.

NG

2	Check for open or short circuit in harness between terminals combination meter and SPD of ECU connector.
----------	---

NG**Repair or replace harness or connector.****OK**

Check the combination meter (See Pub. No. RM616E on page BE -78).
--