



DISASSEMBLY

1. REMOVE NO. 2 SIDE DEFROSTER NOZZLE DUCT
2. REMOVE NO. 1 SIDE DEFROSTER NOZZLE DUCT
3. REMOVE DEFROSTER NOZZLE
4. REMOVE CENTER BRACKET
5. REMOVE NO. 1 HEATER TO REGISTER DUCT
6. REMOVE INSTRUMENT PANEL WIRE HARNESS
7. REMOVE NO. 5 HEATER TO REGISTER DUCT

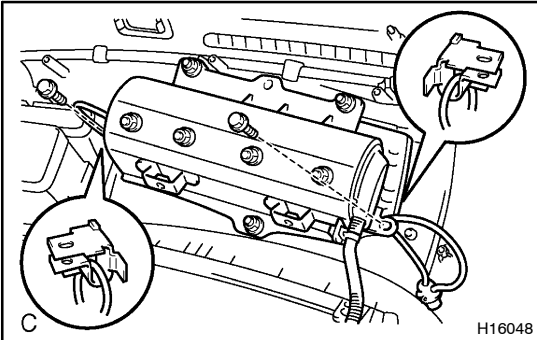

8. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Remove the 2 bolts and straps.
Torque: 6.0 N·m (6 1 kgf·cm, 53 in.·lbf)

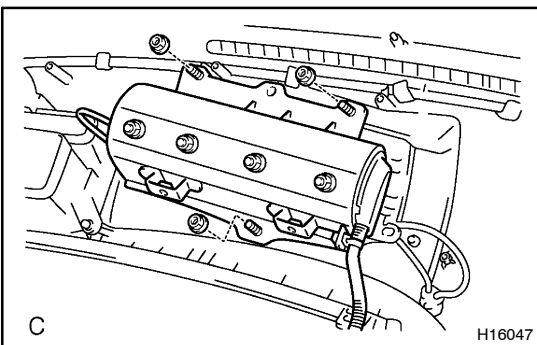

- (b) Remove the 3 nuts and front passenger airbag assembly.
Torque: 6.0 N·m (6 1 kgf·cm, 53 in.·lbf)

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing down.
- Never disassemble the front passenger airbag assembly.

NOTICE:

At the time of reassembly, please refer to the following items.

- Pass the straps of the front passenger airbag door through the brackets on the right and left sides securely.
- Install the straps so that they are not pinched between the airbag and instrument panel.
- When installing the front passenger airbag assembly, make sure that the straps are not distorted and installed to the brackets securely.
- Make sure that the front passenger airbag assembly is installed to the specified torque.
- If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.
- When installing the front passenger airbag assembly, take care that the wiring does not interfere with other parts and is not pinched between other parts.

9. REMOVE NO. 1 REGISTER

10. REMOVE NO. 4 REGISTER