


## VEHICLE LIFT AND SUPPORT LOCATIONS

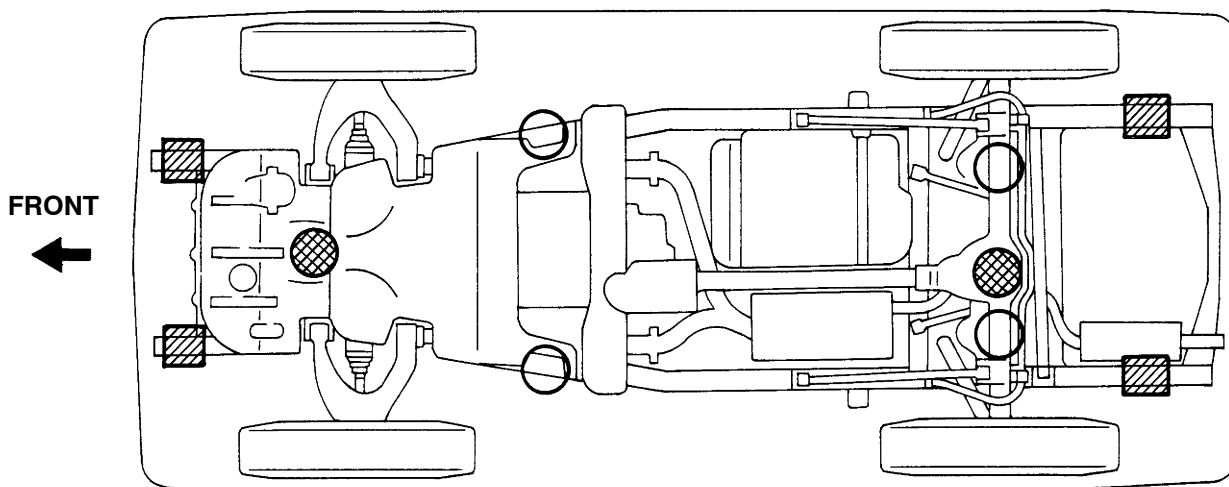

**JACK POSITION** \_\_\_\_\_



Front ..... Engine under cover

Rear ..... Rear differential carrier

**CAUTION :** When jacking –up the front and rear, make sure the car is not carrying any extra weight.

**SCREW TYPE JACK POSITION** \_\_\_\_\_



**SUPPORT POSITION**

Safety stand .....




**NOTICE:**

(w/ Active Height Control Suspension)  
When jacking up the vehicle with the engine running, turn off the active height control suspension with the height control switch pushed.


B04208

**SWING ARM TYPE LIFT**

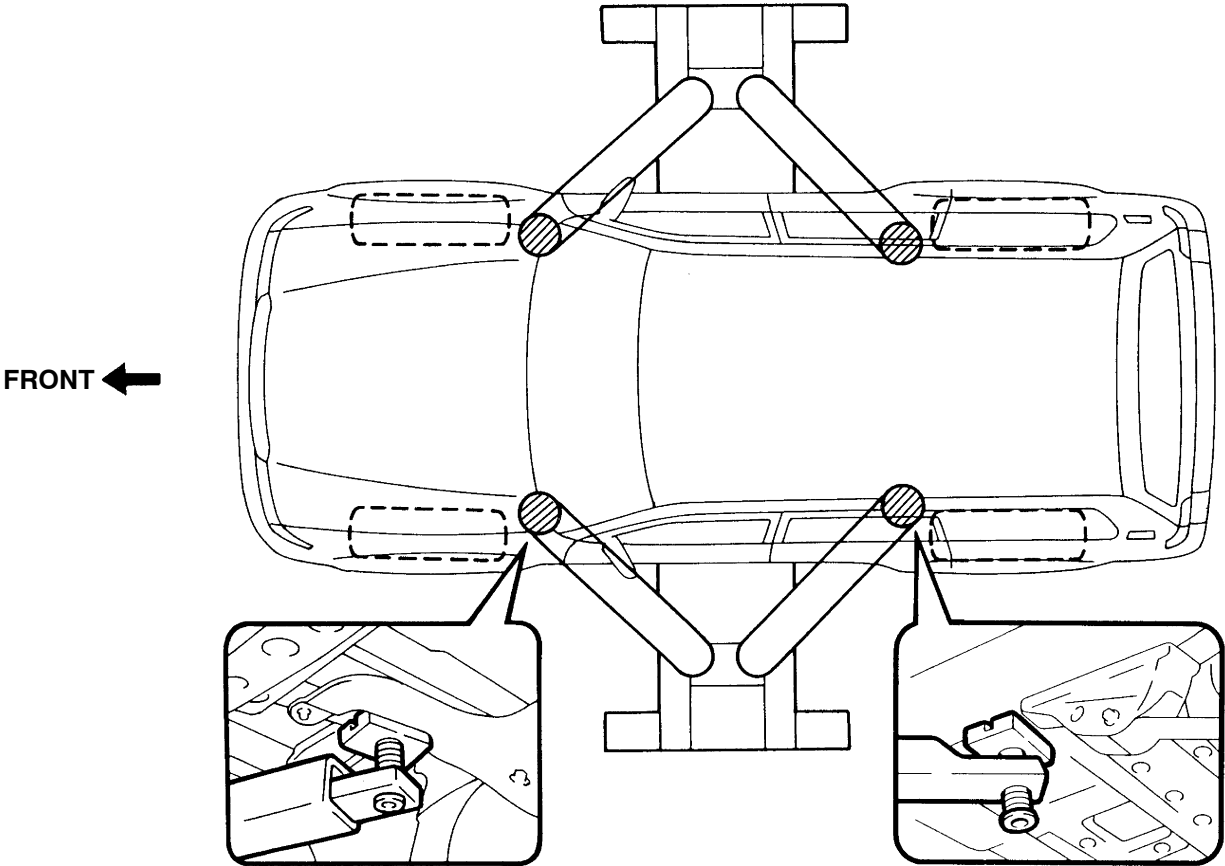

**NOTICE:** When lifting the vehicle, place the supports correctly at the positions shown above.

**PLATE TYPE LIFT (DO NOT USE.)**

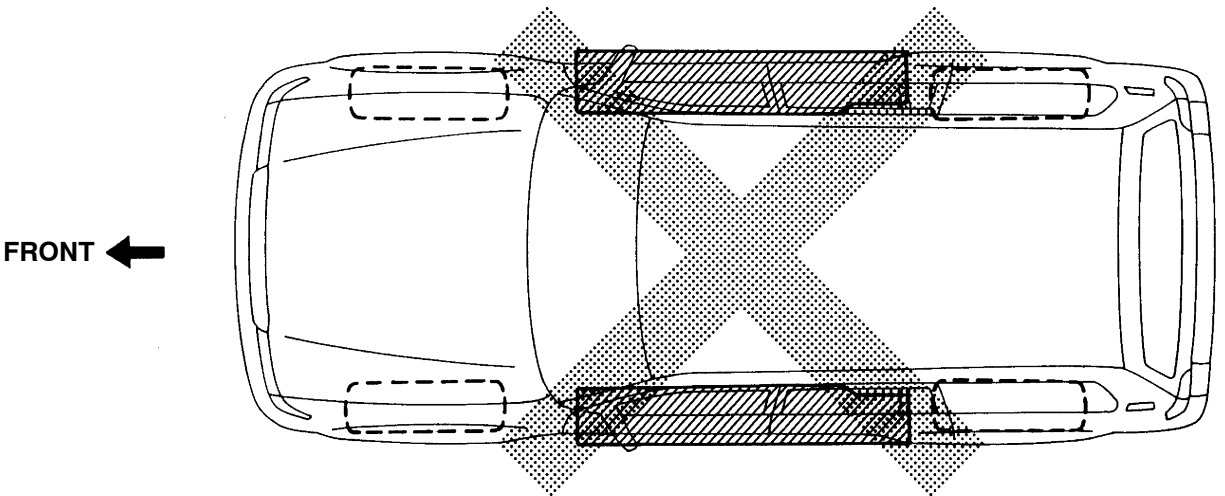

**NOTICE:** Never use the plate type lift - using it to lift up the vehicle will cause the body shape to warp.

B04209