


DISASSEMBLY

1. REMOVE HEADREST

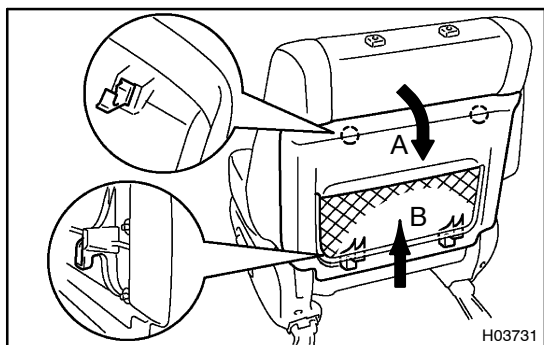

2. REMOVE SEATBACK BOARD

Remove the seatback board as shown in the illustration.

HINT:

Remove the seatback board in the order of "A" and "B" as shown in the illustration.



3. REMOVE SEAT CUSHION OUTER SHIELD

- (a) Using a screwdriver, remove the power seat switch knobs.


HINT:

Tape up the screwdriver tip before use.

- (b) Remove the 4 screws.
- (c) Disconnect the connectors.
- (d) Remove the seat cushion outer shield.

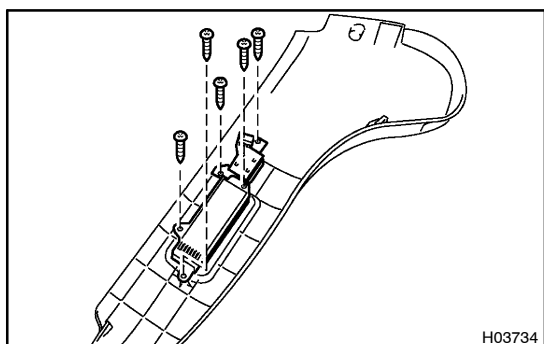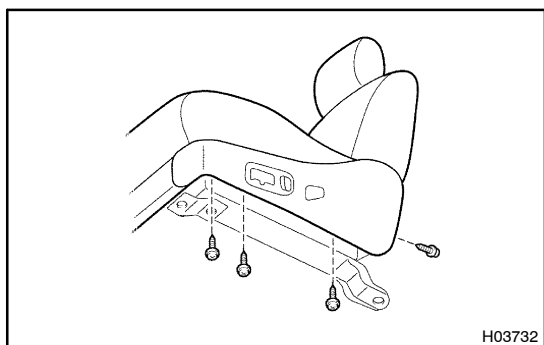


- (e) Remove the 3 screws and the power seat switch from the seat cushion outer shield.
- (f) Remove the 2 screws and lumbar support switch from the seat cushion outer shield.

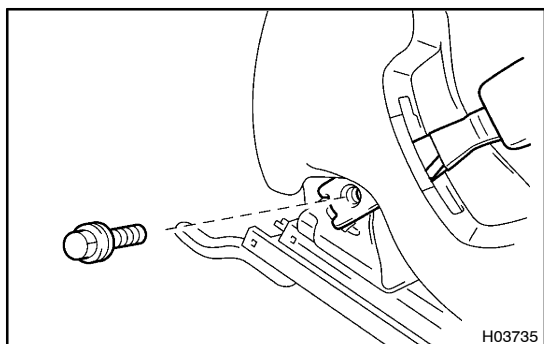


4. REMOVE FRONT SEAT INNER BELT


- (a) Remove the clamp, then disconnect the connector.
- (b) Remove the bolt and the inner belt.

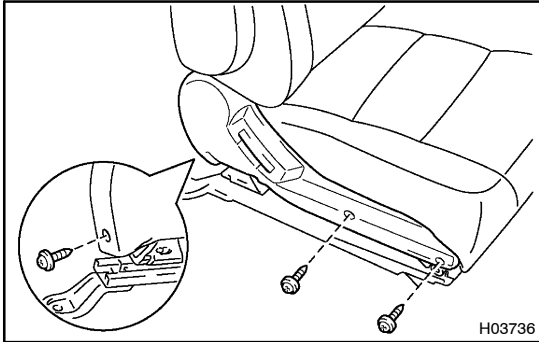**5. REMOVE SEAT CUSHION INNER SHIELD**


Remove the 3 screws and the seat cushion inner shield.

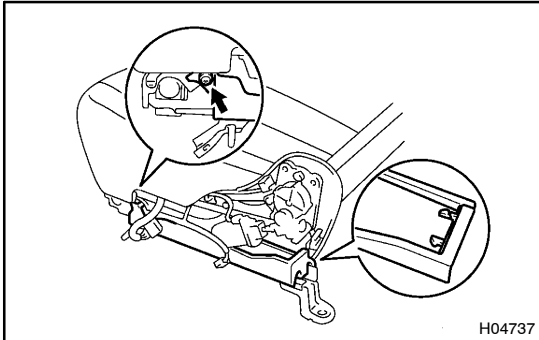**6. REMOVE LOWER SEAT CUSHION SHIELD**

Remove the screw and the lower seat cushion shield as shown in the illustration.

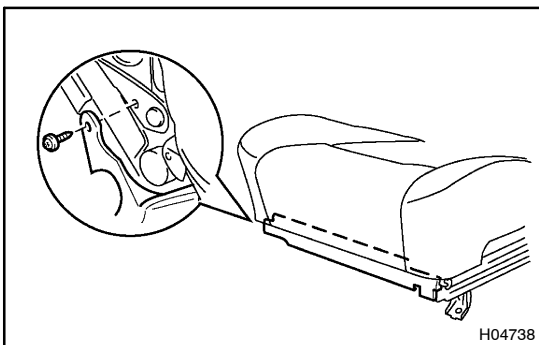**7. REMOVE FRONT SEAT CUSHION SHIELD**

Remove the screw and the front seat cushion shield.

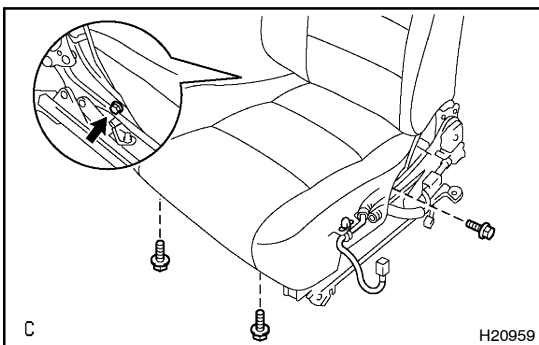**8. REMOVE SEAT CUSHION ASSEMBLY**


- (a) Remove the 4 bolts.
- (b) Remove the clamps from the seat cushion assembly.


9. REMOVE SEAT CUSHION FRAME

- (a) Disengage the hook.
- (b) Remove the hog rings and the seat cushion frame from the seat cushion cover with pad.

10. REMOVE SEAT CUSHION COVER (See page BO-105)**11. IF NECESSARY, REPLACE SEAT CUSHION HEATER (See page BO-105)****12. REMOVE SEATBACK ASSEMBLY**

- (a) Remove the hog rings.
- (b) Disengage the hook as shown in the illustration.
- (c) Disconnect the connectors.

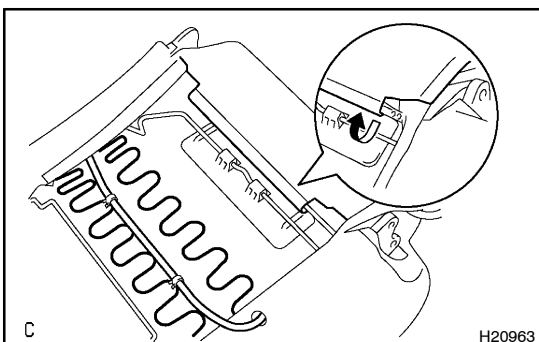

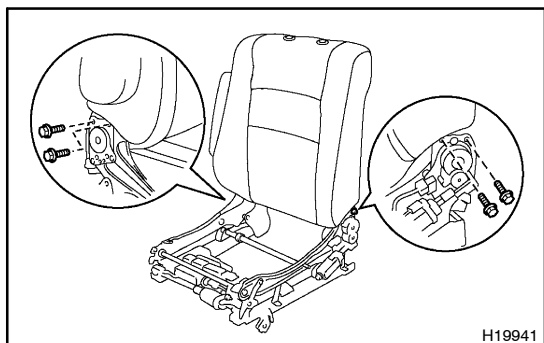

H19941

- (d) Remove the 4 bolts and the seatback assembly.

NOTICE:


When handling the airbag connector take care not to damage the airbag wire harness.

- (e) Remove the screw and the RH reclining adjuster inside shield.
 (f) w/ Side Airbag:
 Disconnect the side airbag connector.

NOTICE:

When handling the airbag connector take care not to damage the airbag wire harness.

- (g) Remove the screw and the LH reclining adjuster inside shield.

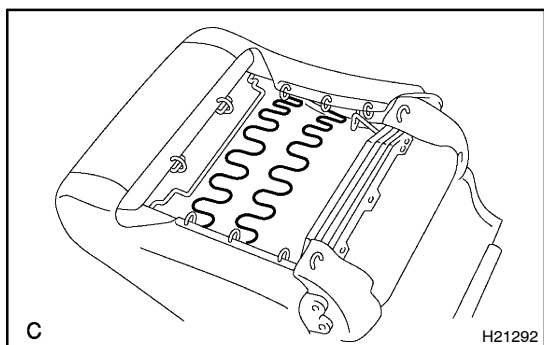


C

H21292

13. w/o Side Airbag:

REMOVE SEATBACK FRAME

- (a) Remove the hog rings.
 (b) Remove the 2 headrest supports.
 (c) Remove the seatback frame from the seatback cover with pad.

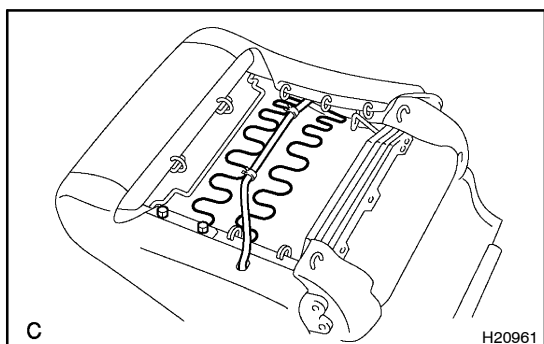


C

H20961

14. w/ Side Airbag:

REMOVE SEATBACK FRAME


- (a) Remove the hog rings, the clamps and the 2 bolts.
 (b) Remove the 2 headrest supports.
 (c) Remove the seatback frame from the seatback cover with pad.

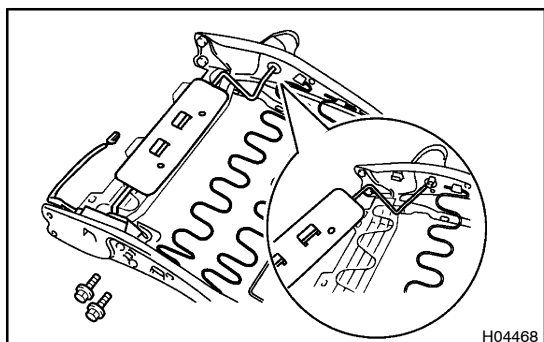

H04468

15. REMOVE LUMBER SUPPORT


Remove the 2 bolts, the lumbar support and the spacer.

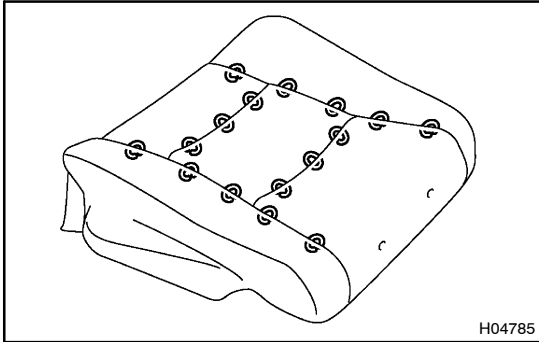**16. REMOVE SEATBACK COVER**

Remove the hog rings and the seatback cover from the seatback pad.

17. IF NECESSARY, REPLACE SEATBACK HEATER
(See page BO-105)**18. REMOVE SEAT POSITION CONTROL RELAY**

- (a) Disconnect the connectors.
- (b) Remove the 2 bolts and the seat position control relay.

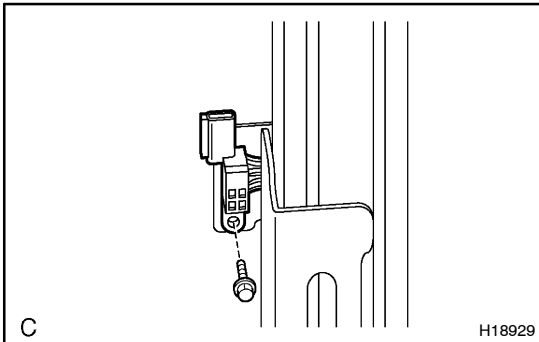**19. w/ Dual Stage Airbag Type (Driver's Side):**
REMOVE SEAT POSITION SENSOR

Remove the bolt and the seat position sensor, then disconnect the connector.