


## Open door warning light circuit

### WIRING DIAGRAM

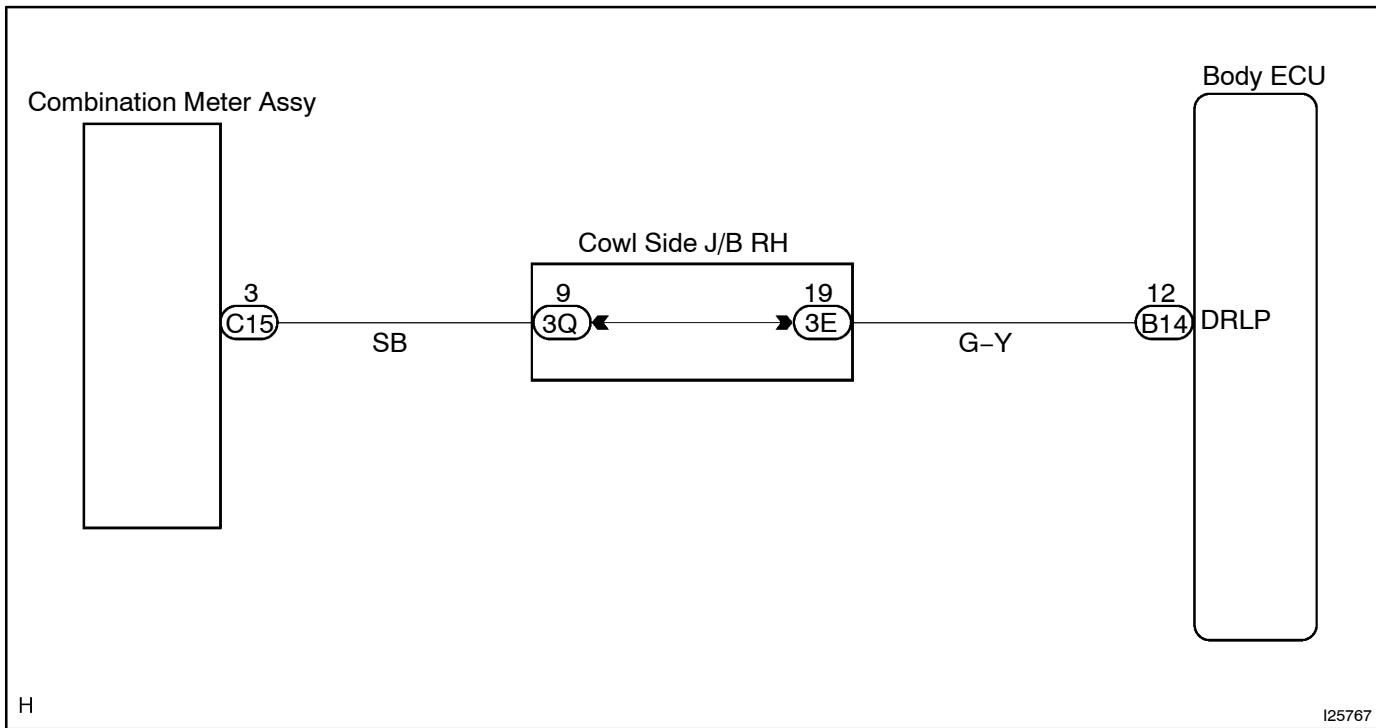

### INSPECTION PROCEDURE

#### HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

- 1 Check open door warning light using hand-held tester.

#### PREPARATION:

Connect the hand-held tester to DLC 3.

#### CHECK:

Check that the open door warning light operate in ACTIVE TEST ([See page DI-981](#)).



Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).

NG

2 Check the combination meter circuit ([See page BE-41](#)).

NG

Replace the combination meter.

OK

3 Check wire harness and connector between combination meter and Body ECU  
([See page IN-38](#)).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on  
problem symptoms table  
([See page DI-992](#)).