


DTC	4 1	Front Air Mix Damper Control Servomotor Circuit
------------	------------	--

CIRCUIT DESCRIPTION

The front air mix damper control servomotor is controlled by the A/C amplifier and moves the air mix damper to the desired position.

DTC No.	Detection Item	Trouble Area
41	Air mix damper position sensor value does not change even if A/C control assembly operates air mix damper control servomotor.	<ul style="list-style-type: none"> Front air mix damper control servomotor. Harness or connector between front air mix damper control servomotor and A/C amplifier A/C Amplifier

WIRING DIAGRAM

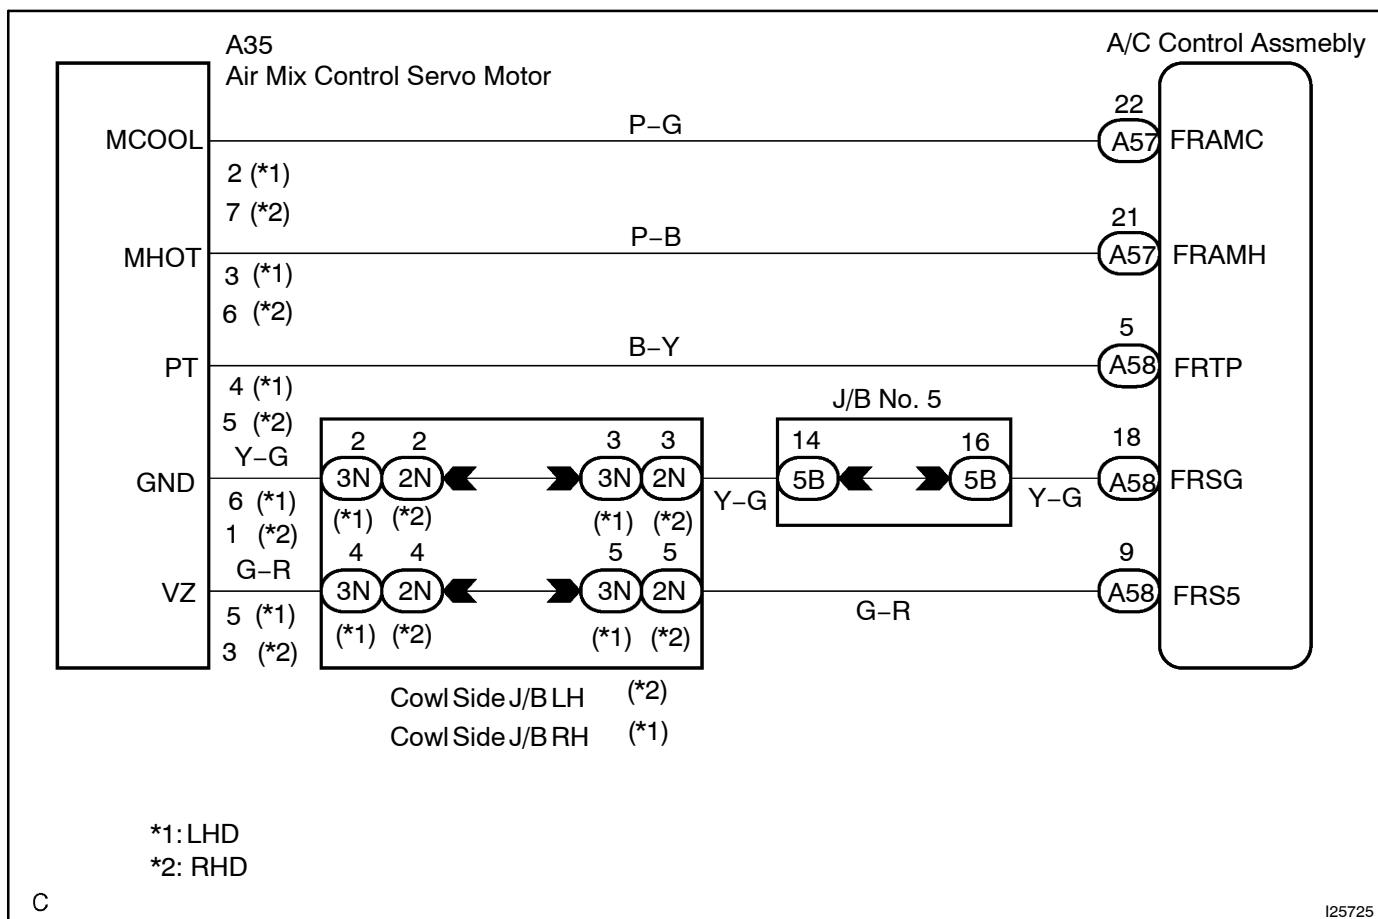

INSPECTION PROCEDURE

1 Actuator check.

PREPARATION:

- Warm up the engine.
- Set to actuator check mode ([See page DI-1226](#)).
- Press the DEF switch and change it to step operation.

CHECK:

Press the DEF switch and check the operation of the air mix damper and the condition of the blower.

OK:

Display Code	Air Mix Damper	Condition
0 - 2	0 % (Fully closed)	Cool air comes out
3 - 4	50 %	
5 - 7	100 % (Full opened)	Warm air comes out


OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1238](#)).


NG

2 Check front air mix damper control servomotor.

LHD Models:

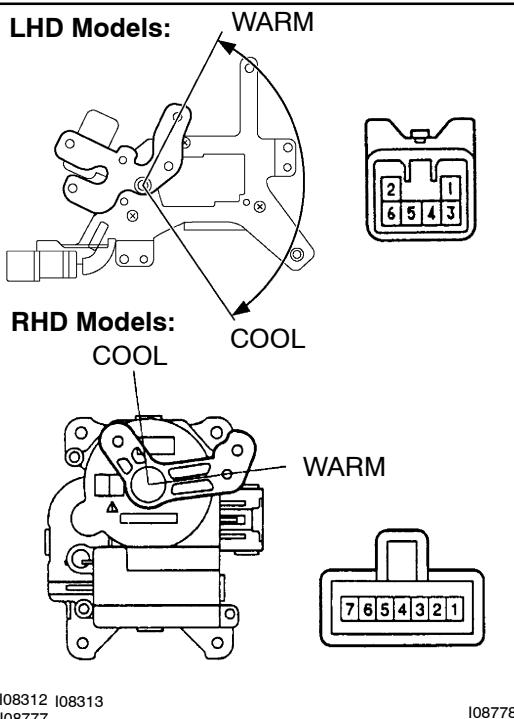

RHD Models:

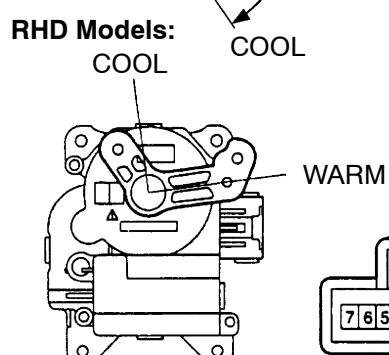

PREPARATION:

Remove front air mix servomotor.

CHECK:

Connect positive (+) lead to terminal 3 (6) and negative (-) lead to terminal 2 (7).

(): RHD Models

OK:

The lever turns smoothly to WARM side.

CHECK:

Connect positive (+) lead to terminal 2 (7) and negative (-) lead to terminal 3 (6).

(): RHD Models

OK:

The lever turns smoothly to COOL side.

NG


Replace front air mix damper control servomotor assembly.

OK

- 3 Check harness and connector between front air mix damper control servomotor and A/C amplifier ([See page IN-38](#)).

 NG

Repair or replace harness or connector.

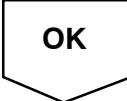 OK

Check and replace A/C amplifier.