


## REMOVAL

### NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is in ON position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.

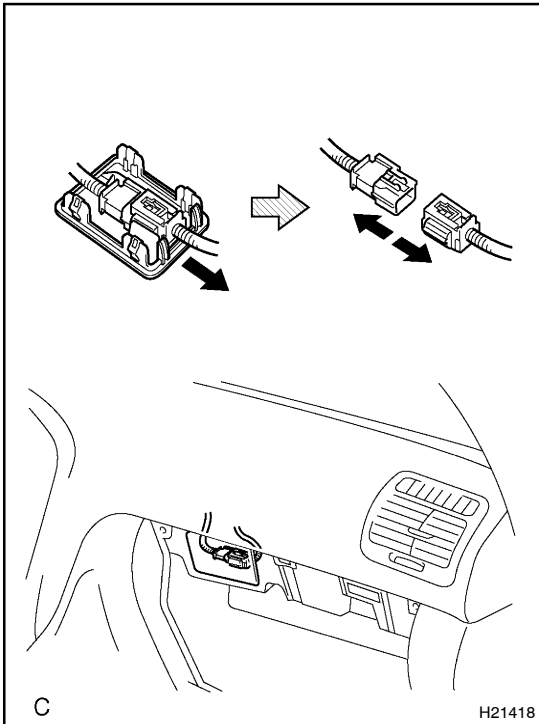

### 1. DISCONNECT AIRBAG CONNECTOR

- Remove the glove compartment door.
- Remove the No. 1 under cover from the lower No. 2 finish panel.

### NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- Slide the airbag connector to pull out from the No. 1 under cover.
- Disconnect the front passenger airbag connector.

### 2. REMOVE INSTRUMENT PANEL


(See page BO-79)

### 3. REMOVE CENTER BRACKET

### 4. REMOVE DEFROSTER NOZZLE ASSEMBLY

### 5. REMOVE NO. 5 HEATER TO REGISTER DUCT

### 6. REMOVE NO. 2 SIDE DEFROSTER NOZZLE DUCT

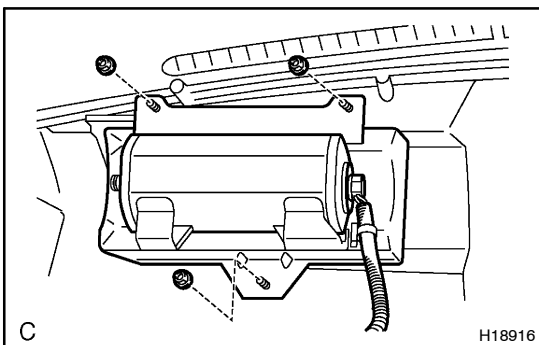

### 7. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

Remove the 3 nuts, then remove the front passenger airbag assembly.

### CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing downward.
- Never disassemble the front passenger airbag assembly.