


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON position, DTCs will be recorded.
- Never use the airbag parts from another vehicle.
When replacing parts, replace them with new parts.

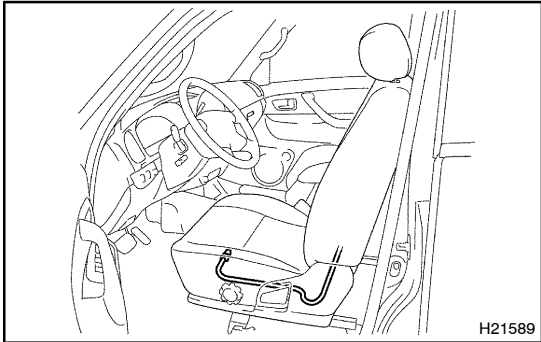

1. REMOVE FRONT SEAT

- Remove the 4 seat track covers and 4 bolts.
- Disconnect the connectors.

NOTICE:

When handling the airbag connector, be careful not to damage the airbag wire harness.

- Remove the front seat.

NOTICE:

Be careful not to damage the body.

2. REMOVE HEADREST

3. REMOVE SEATBACK BOARD



Remove the seatback board as shown in the illustration.

HINT:

Remove the seatback board in order "A" and "B" as shown in the illustration.

4. REMOVE RECLINING ADJUSTER RELEASE HANDLE


Remove the screw and reclining adjuster release handle.

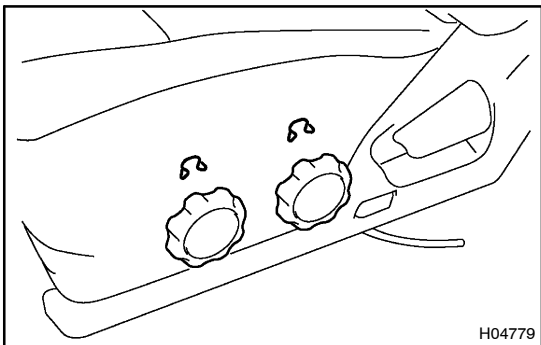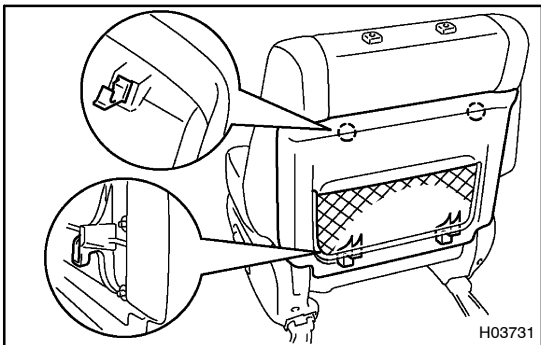

5. Vertical adjuster type:

REMOVE VERTICAL SEAT ADJUSTER KNOB


- Remove the snap ring.
- Remove the vertical seat adjuster knobs.

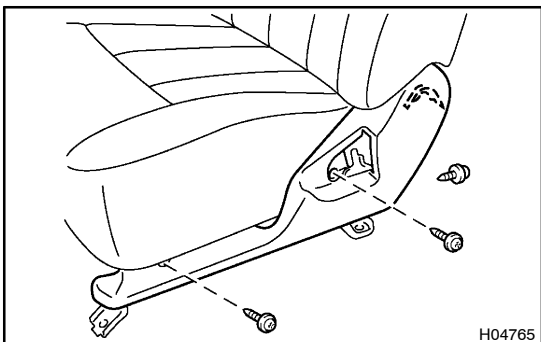

6. w/o Lumber support:


REMOVE SEAT CUSHION OUTER SHIELD

- Remove the 3 screws.
- Remove the seat cushion outer shield as shown in the illustration.

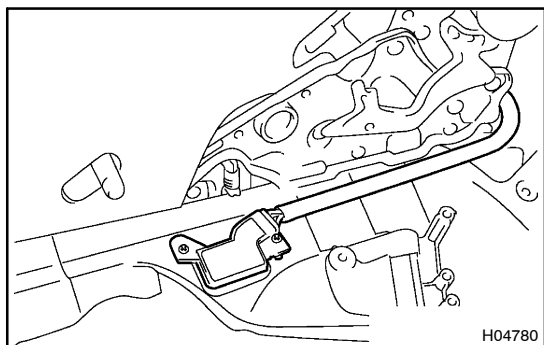


**7. w/ Lumber support:
REMOVE SEAT CUSHION OUTER SHIELD**

- (a) Remove the 3 screws.
- (b) Disconnect the connector as shown in the illustration.
- (c) Remove the seat cushion outer shield.

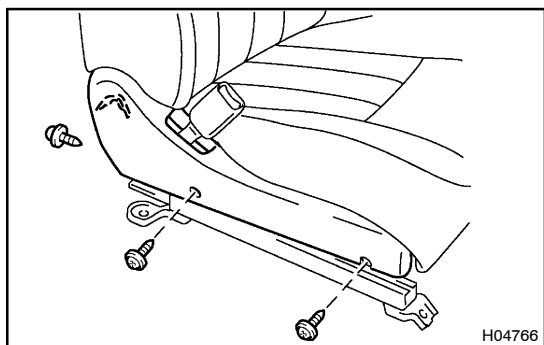


8. REMOVE SEAT CUSHION INNER SHIELD

- (a) Remove the 3 screws.
- (b) Remove the seat cushion inner shield as shown in the illustration.

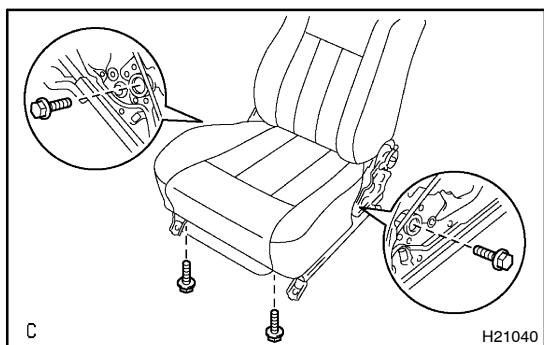


9. REMOVE SEAT CUSHION ASSEMBLY

- (a) Remove the 4 bolts.
- (b) Remove the wire harness clamps from the seat cushion assembly.

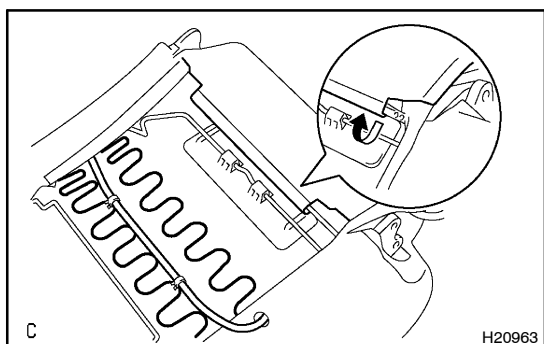

10. REMOVE SEATBACK ASSEMBLY

- (a) Remove the hog rings.
- (b) Disengage the hook as shown in the illustration.
- (c) Disconnect the connectors.

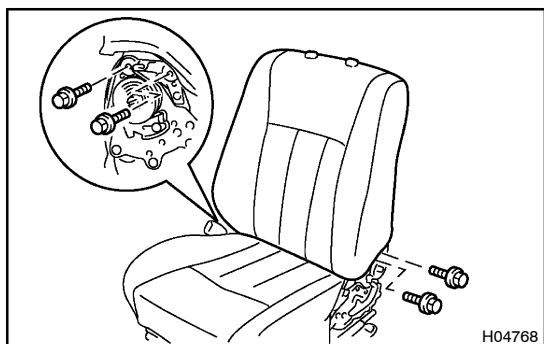


- (d) Remove the 4 bolts and seatback assembly.


NOTICE:

When handling the airbag connector take care not to damage the airbag wire harness.

- (e) Remove the screw and RH reclining adjuster inside shield, then disconnect the side airbag connector.

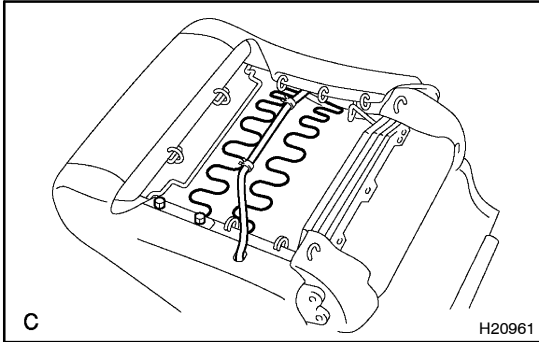**11. REMOVE SETBACK FRAME**

- (a) Remove the hog rings, clamps and 2 bolts.
- (b) Remove the 2 headrest supports.
- (c) Remove the seatback frame from the seatback cover with pad.

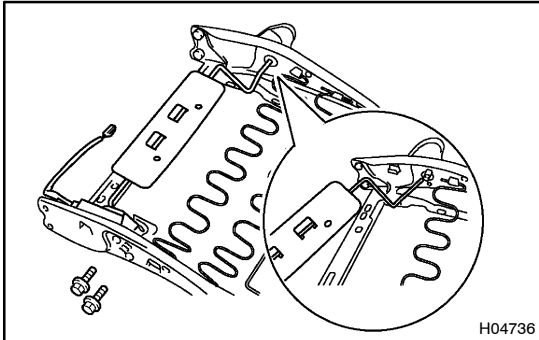**12. w/ Lumber support:****REMOVE LUMBER SUPPORT**

Remove the 2 bolts and lumber support.