

## REMOVAL


### NOTICE:

- Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary (If the IC terminals are touched, the IC may be destroyed by static electricity.).
- If the wiring connector of SRS is disconnected with the ignition switch at ON position, DTCs will be recorded.

### HINT:

For step 1 to 7, refer to [page BO-92](#).

1. REMOVE REAR DOOR SCUFF PLATE
2. REMOVE FRONT DOOR SCUFF PLATE
3. REMOVE LAP BELT OUTER ANCHOR COVER
4. REMOVE FRONT SEAT OUTER BELT FLOOR ANCHOR
5. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP
6. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP
7. REMOVE CENTER PILLAR LOWER GARNISH
8. REMOVE FRONT SEAT OUTER BELT ([See page BO-131](#))

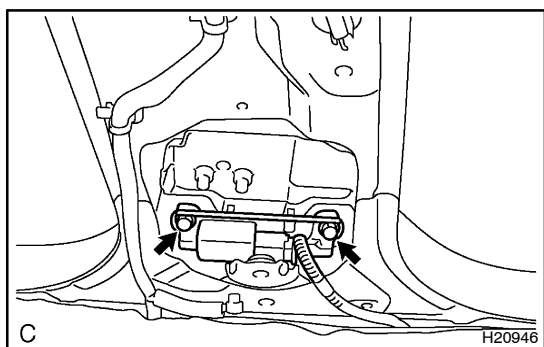

### 9. REMOVE SIDE AND CURTAIN SHIELD AIRBAG SENSOR ASSEMBLY

- (a) Remove the 2 bolts and side and curtain shield airbag sensor assembly.

### NOTICE:

**Disconnect the connector with the sensor assembly installed.**

- (b) Disconnect the connector.