


## INSTALLATION

### NOTICE:

- Never use SRS parts from another vehicle. When replacing parts, replace them with new ones.
- Never reuse the seat position sensor assembly involved in a collision when the airbag has deployed.
- Never repair a sensor in order to reuse it.

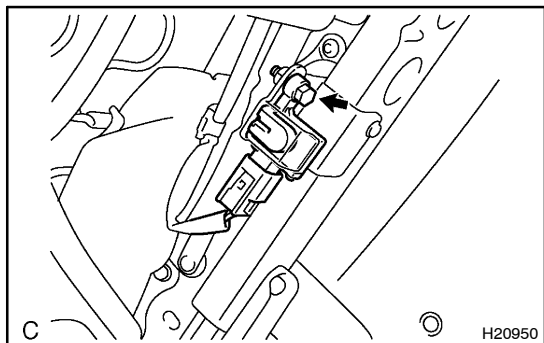

### 1. INSTALL SEAT POSITION SENSOR ASSEMBLY

- (a) Connect the connector.
- (b) Install the seat position sensor assembly with a new bolt.

#### Part No.:

**Bolt: 90119-06871**

**Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)**

### NOTICE:

- Connection of the connector is done after the sensor assembly has been installed.
  - Make sure that the sensor assembly is installed with the specified torque.
  - If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
  - When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
  - After installation, shake the sensor assembly to check that there is no looseness.
2. INSTALL FRONT SEAT ASSEMBLY (DRIVER SIDE)  
(See page [BO-112](#), [BO-130](#))
  3. INSPECT SRS WARNING LIGHT (See page [DI-432](#))