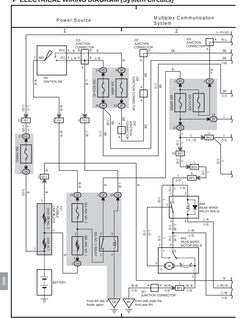
Power Source
Multiplex Communication System
1
2
IG1 NO.1 CONNECTOR
IG2 NO.1 CONNECTOR
IGNITION SW
ECU-IG NO.1 FUSE
ECU-IG NO.2 FUSE
ECU-IG NO.3 FUSE
ECU-IG NO.4 FUSE
ECU-IG NO.5 FUSE
ECU-IG NO.6 FUSE
ECU-IG NO.7 FUSE
ECU-IG NO.8 FUSE
ECU-IG NO.9 FUSE
ECU-IG NO.10 FUSE
ECU-IG NO.11 FUSE
ECU-IG NO.12 FUSE
ECU-IG NO.13 FUSE
ECU-IG