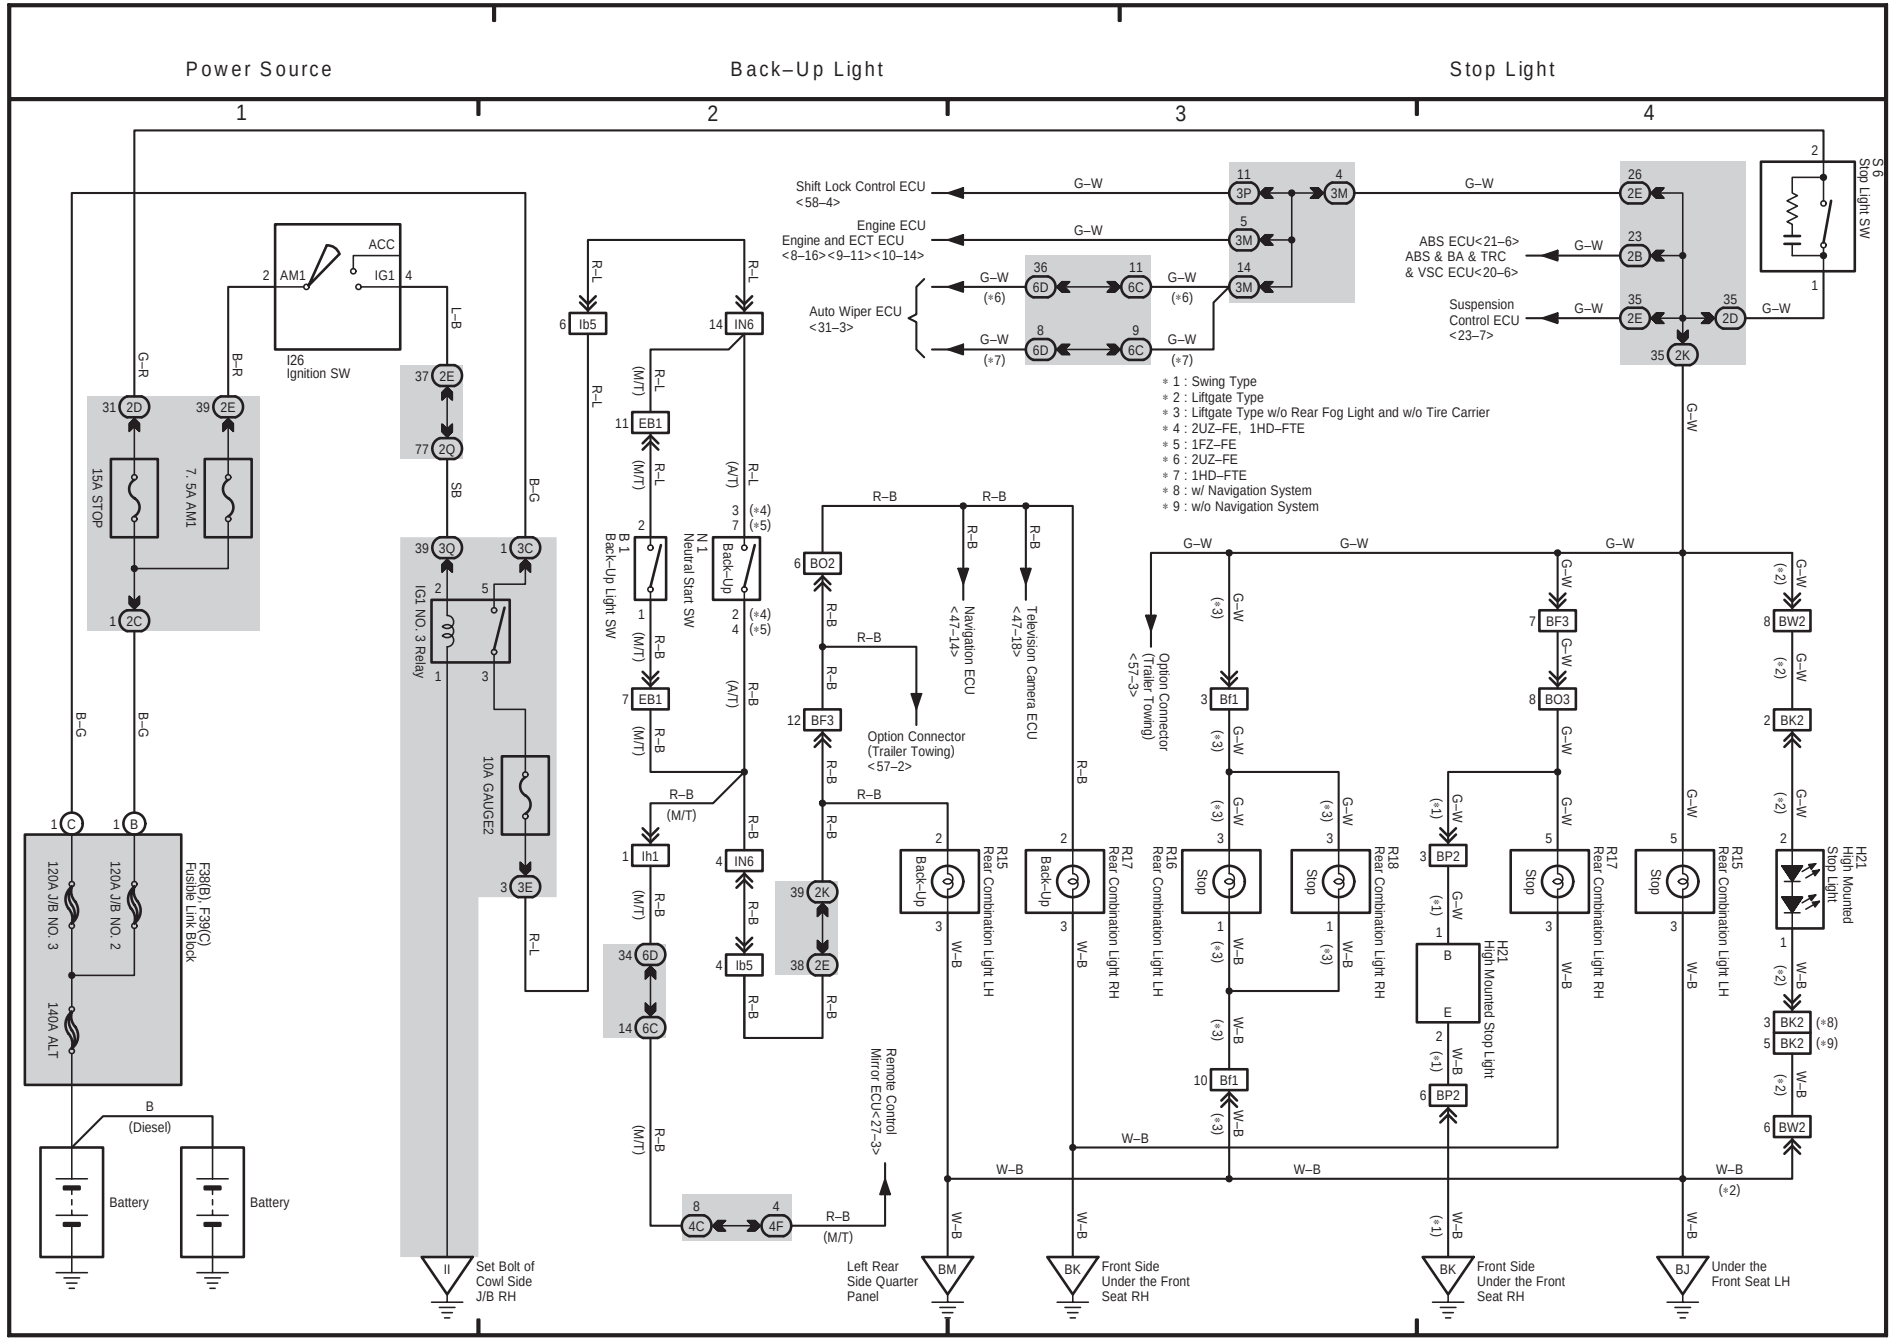
Power Source
Back–Up Light
Stop Light
1
2
3
4
I26
Ignition SW
ACC
AM1
IG1
15A STOP
7. 5A AM1
IG1 NO. 3 Relay
10A GAUGE2
F38(B) F39(C)
Fusible Link Block
120A J/B NO. 3
120A J/B NO. 2
140A ALT
B
(Diesel)
Battery
Battery
II
Set Bolt of
Cowl Side
J/B RH
B1
Back–Up Light SW
N 1
Neutral Start SW
Back–Up
Shift Lock Control ECU
<58–4>
Engine ECU
Engine and ECT ECU
<8–16><9–11><10–14>
Auto Wiper ECU
<31–3>
ABS ECU<21–6>
ABS & BA & TRC
& VSC ECU<20–6>
Suspension
Control ECU
<23–7>
S 6
Stop Light SW
∗ 1 : Swing Type
∗ 2 : Liftgate Type
∗ 3 : Liftgate Type w/o Rear Fog Light and w/o Tire Carrier
∗ 4 : 2UZ–FE, 1HD–FTE
∗ 5 : 1FZ–FE
∗ 6 : 2UZ–FE
∗ 7 : 1HD–FTE
∗ 8 : w/ Navigation System
∗ 9 : w/o Navigation System
Navigation ECU
<47–14>
Television Camera ECU
<47–18>
Option Connector
(Trailer Towing)
<57–2>
Option Connector
(Trailer Towing)
<57–3>
Remote Control
Mirror ECU<27–3>
R15
Rear Combination Light LH
R17
Rear Combination Light RH
R16
Rear Combination Light LH
R18
Rear Combination Light RH
H21
High Mounted Stop Light
H21
High Mounted Stop Light
Left Rear
Side Quarter
Panel
BM
Front Side
Under the Front
Seat RH
BK
Front Side
Under the Front
Seat RH
BK
Under the
Front Seat LH
BJ