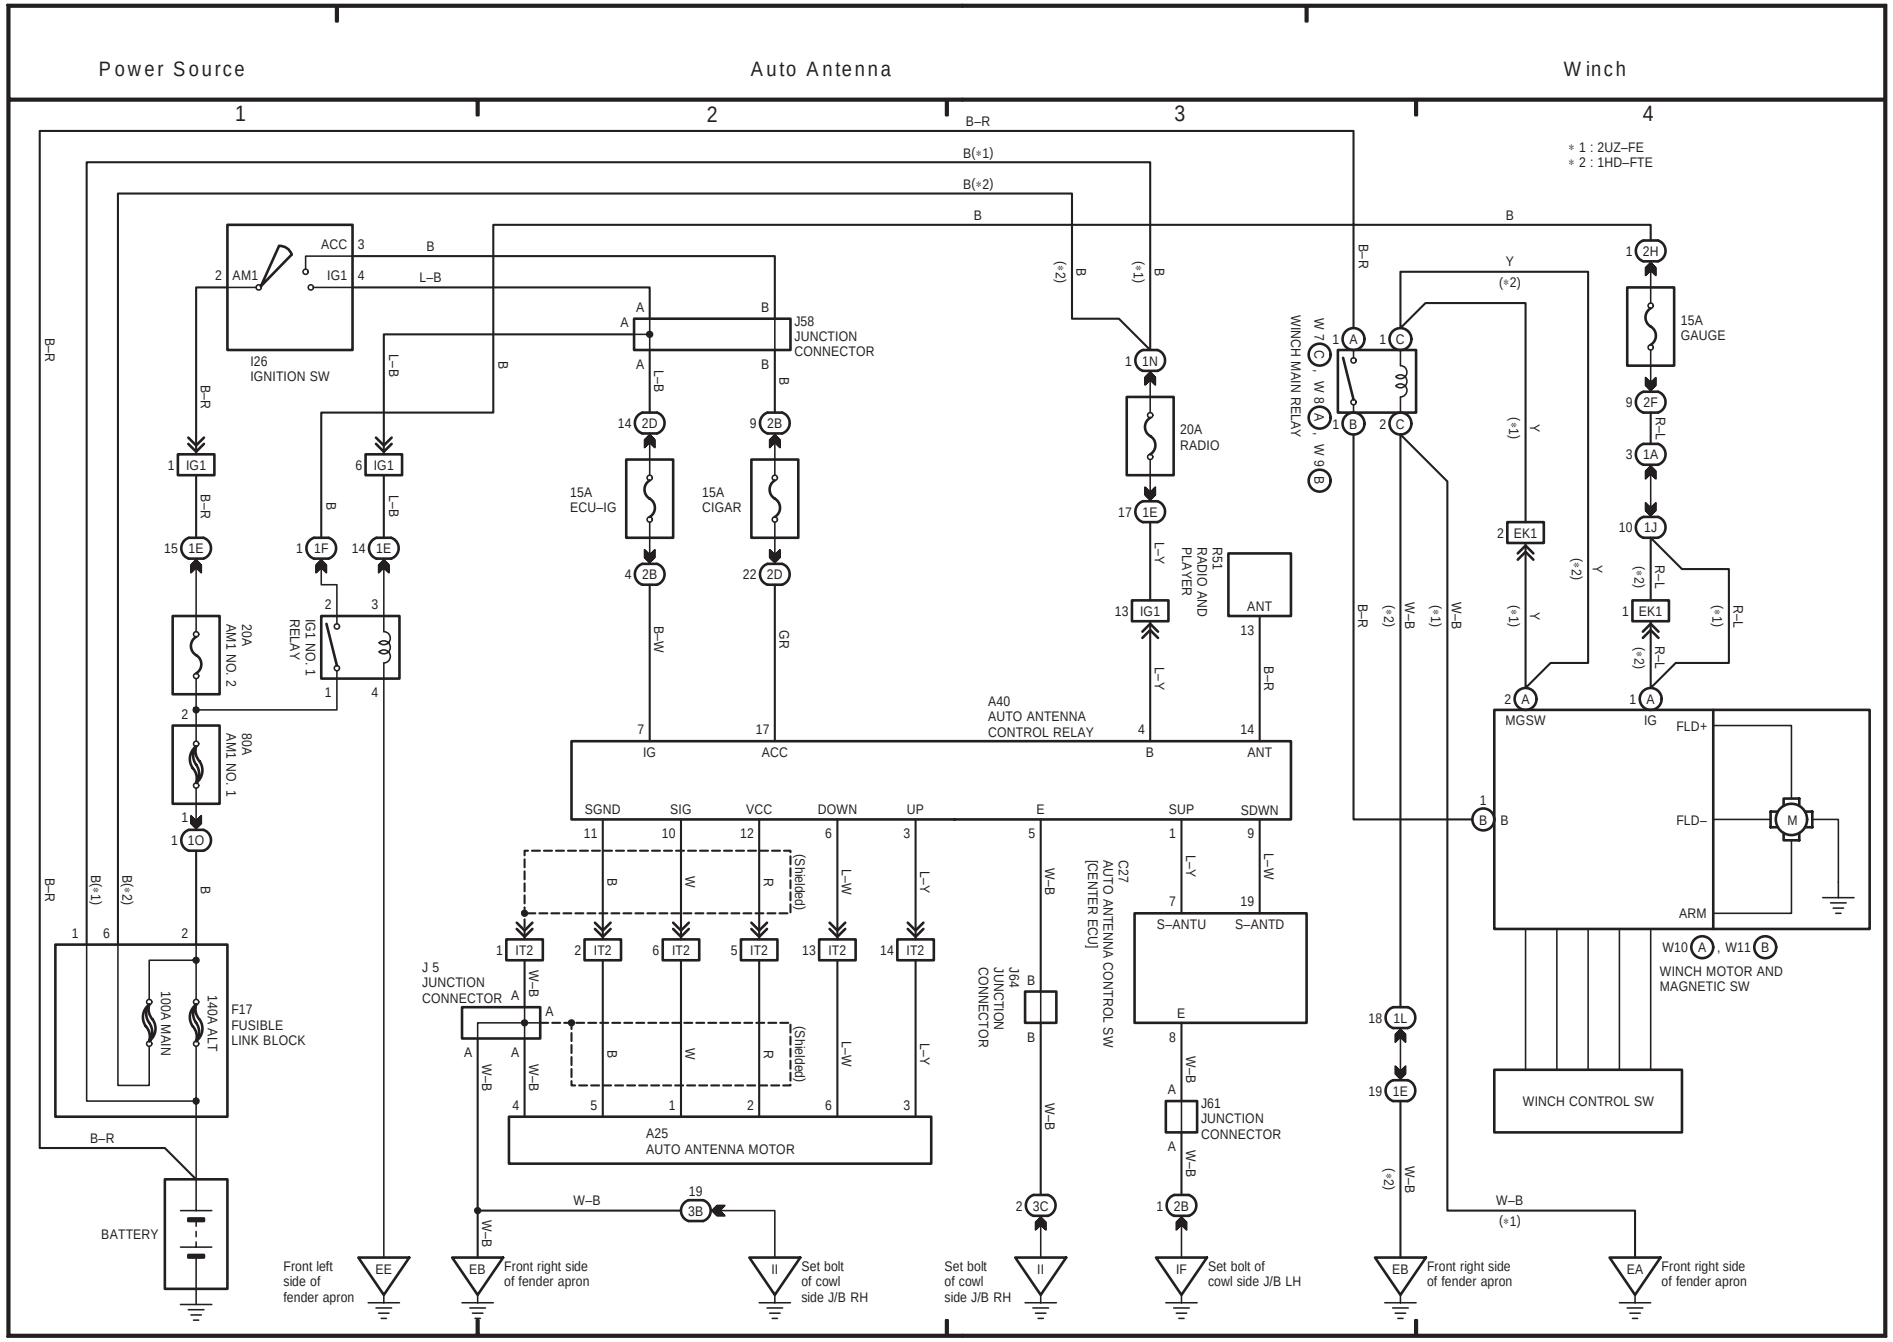
Power Source
Auto Antenna
Winch
1
2
3
4
* 1 : 2UZ–FE
* 2 : 1HD–FTE
I26
IGNITION SW
ACC
IG1
AM1
J58
JUNCTION
CONNECTOR
20A
RADIO
15A
ECU–IG
15A
CIGAR
R51
RADIO AND
PLAYER
ANT
IG1 NO. 1
RELAY
20A
AM1 NO. 2
80A
AM1 NO. 1
A40
AUTO ANTENNA
CONTROL RELAY
IG
ACC
B
ANT
SGND
SIG
VCC
DOWN
UP
E
SUP
SDWN
(Shielded)
J 5
JUNCTION
CONNECTOR
J64
JUNCTION
CONNECTOR
C27
AUTO ANTENNA CONTROL SW
[CENTER ECU]
S–ANTU
S–ANTD
J61
JUNCTION
CONNECTOR
A25
AUTO ANTENNA MOTOR
F17
FUSIBLE
LINK BLOCK
100A MAIN
140A ALT
BATTERY
WINCH MAIN RELAY
15A
GAUGE
MGSW
IG
FLD+
FLD–
ARM
W10 A , W11 B
WINCH MOTOR AND
MAGNETIC SW
WINCH CONTROL SW
Front left
side of
fender apron
Front right side
of fender apron
Set bolt
of cowl
side J/B RH
Set bolt
of cowl
side J/B RH
Set bolt of
cowl side J/B LH
Front right side
of fender apron
Front right side
of fender apron