BACK–UP LIGHT SYSTEM
LOCATION

BE0XS–01

Ignition Switch
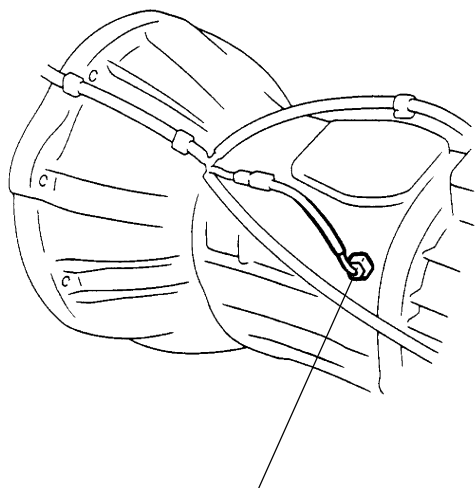
Driver Side Junction Block
☐ GAUGE Fuse

Neutral Start Switch

Back–up Light
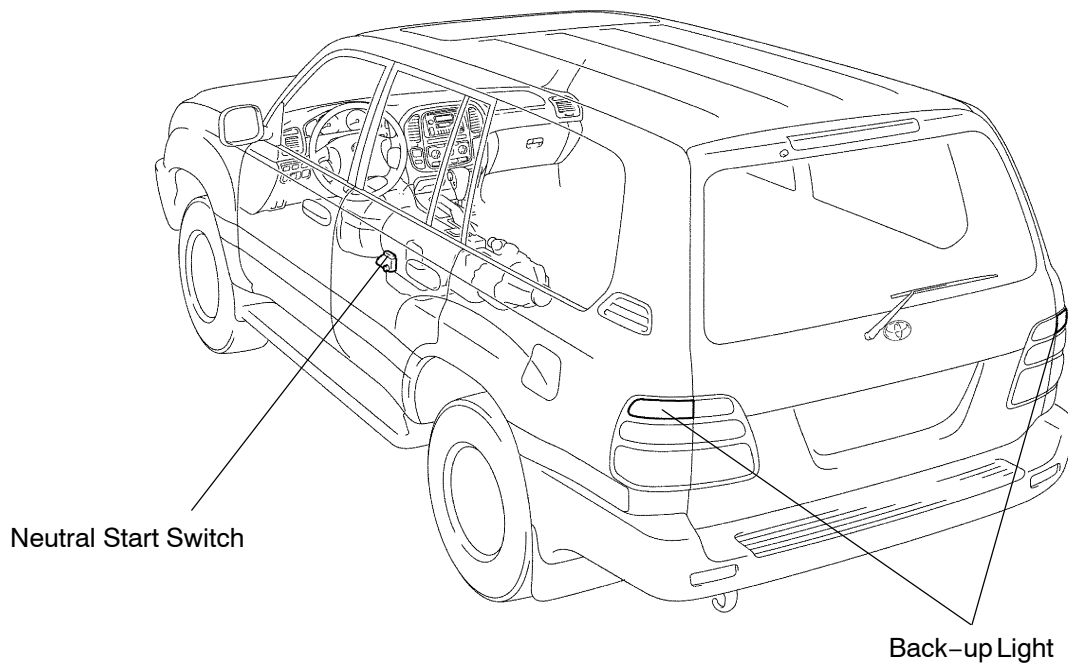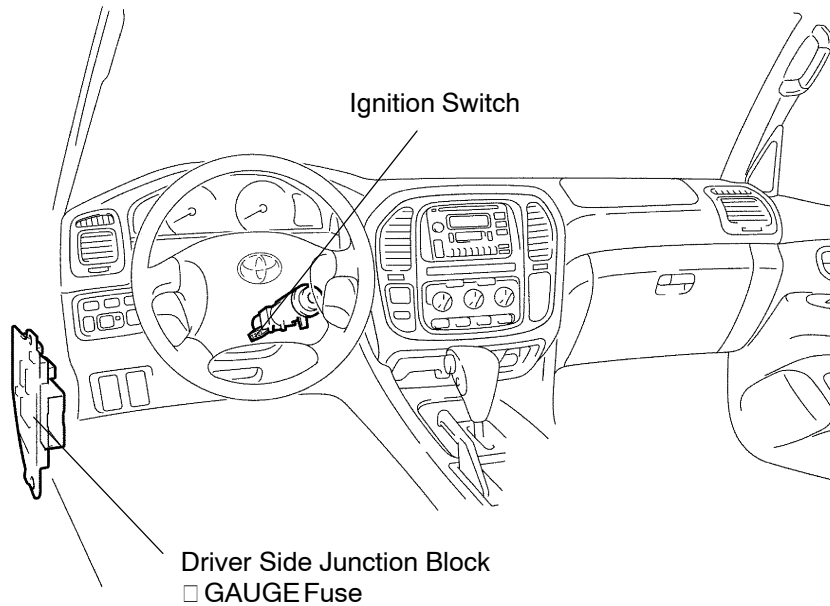
I08065

M/T Vehicle

Engine :
- □ 2UZ
- □ 1FZ
- □ 1HD

Back–Up Lamp Switch

M/T Vehicle
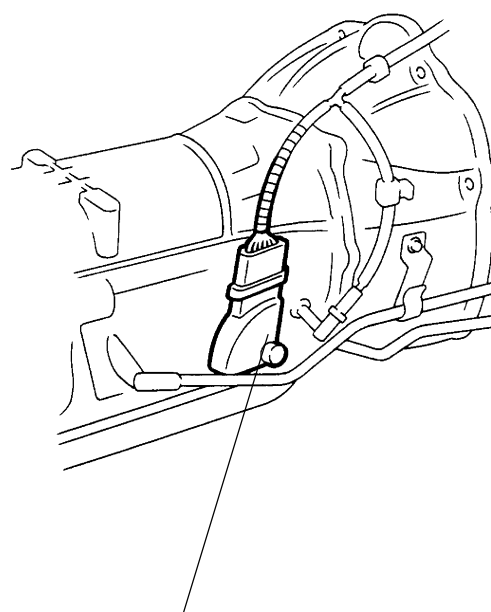
Engine :
- □ 1HZ
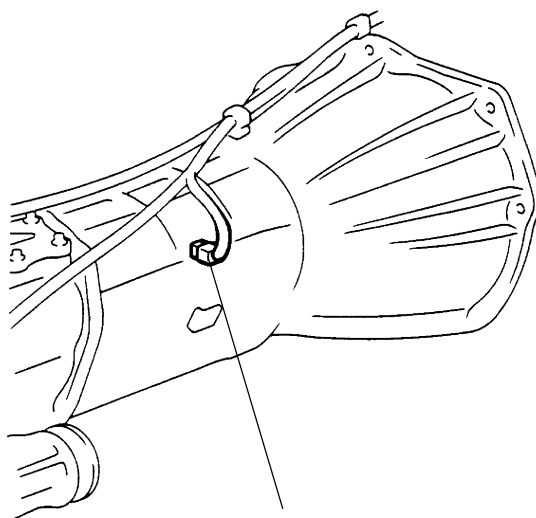
Back–Up Lamp Switch

A/T Vehicle

Engine :
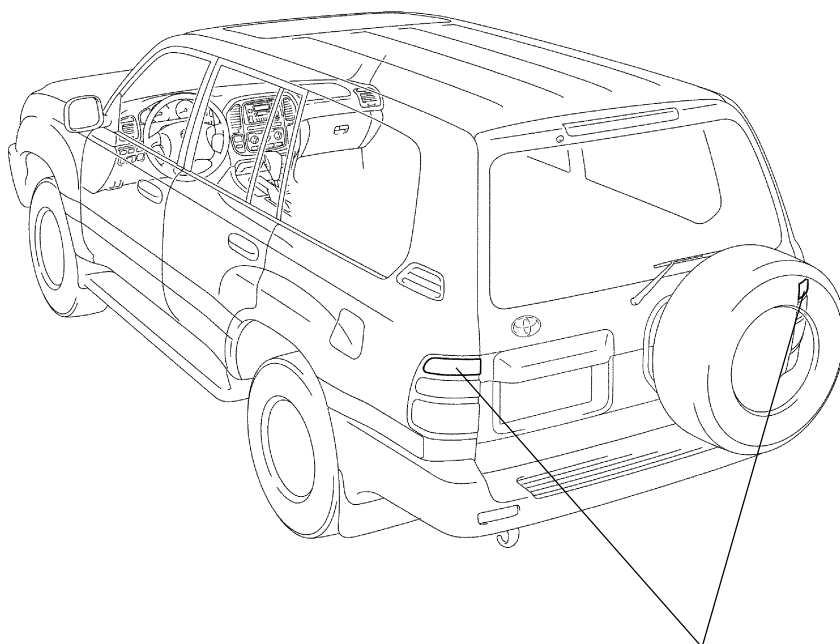- □ 2UZ (Ex. Europe Models)
- □ 1FZ
- □ 1HD–T
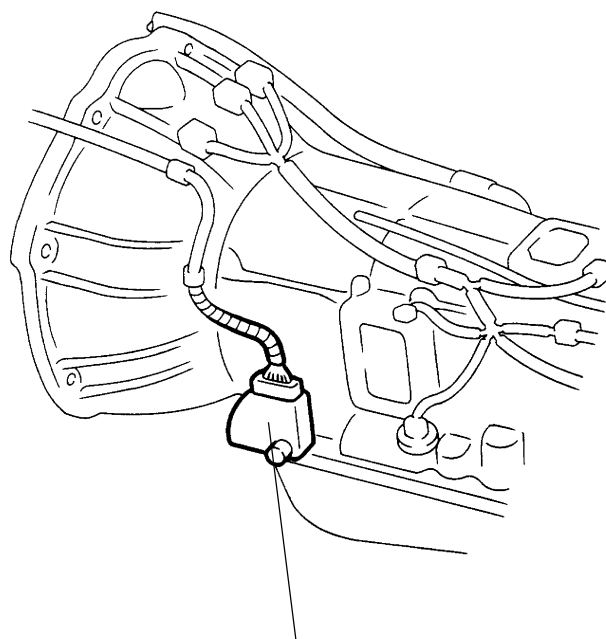
Neutral Start Switch

A/T Vehicle

Engine :
- □ 2UZ (Europe Models)

Neutral Start Switch

I08016

Liftgate Type (w/ Spair Tire Carrier)

Back–up Light

Swing Out Type

Back–up Light

I07985