DI3SQ–01
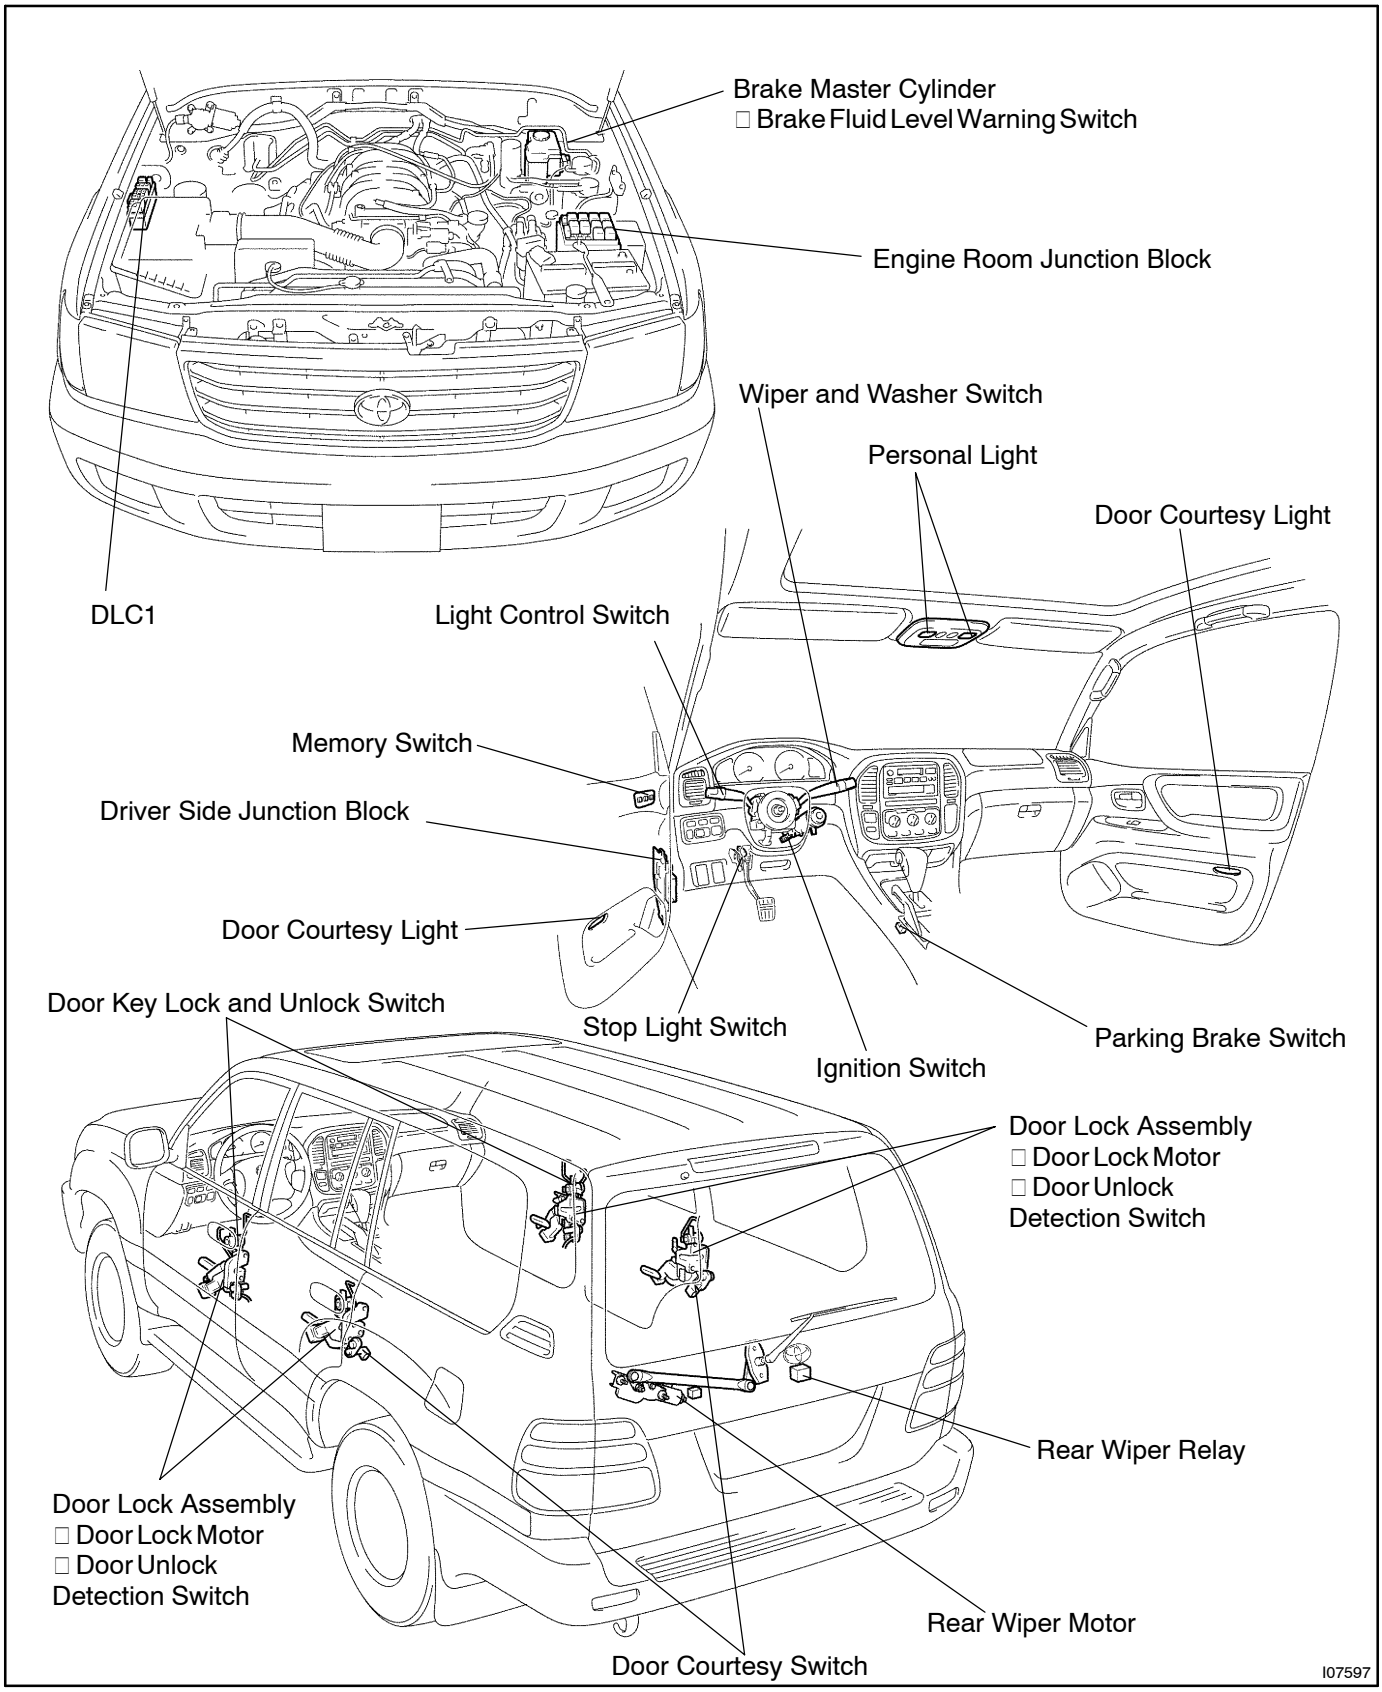
PARTS LOCATION