MANUAL TRANSMISSION ASSEMBLY

COMPONENTS

MT01A–03

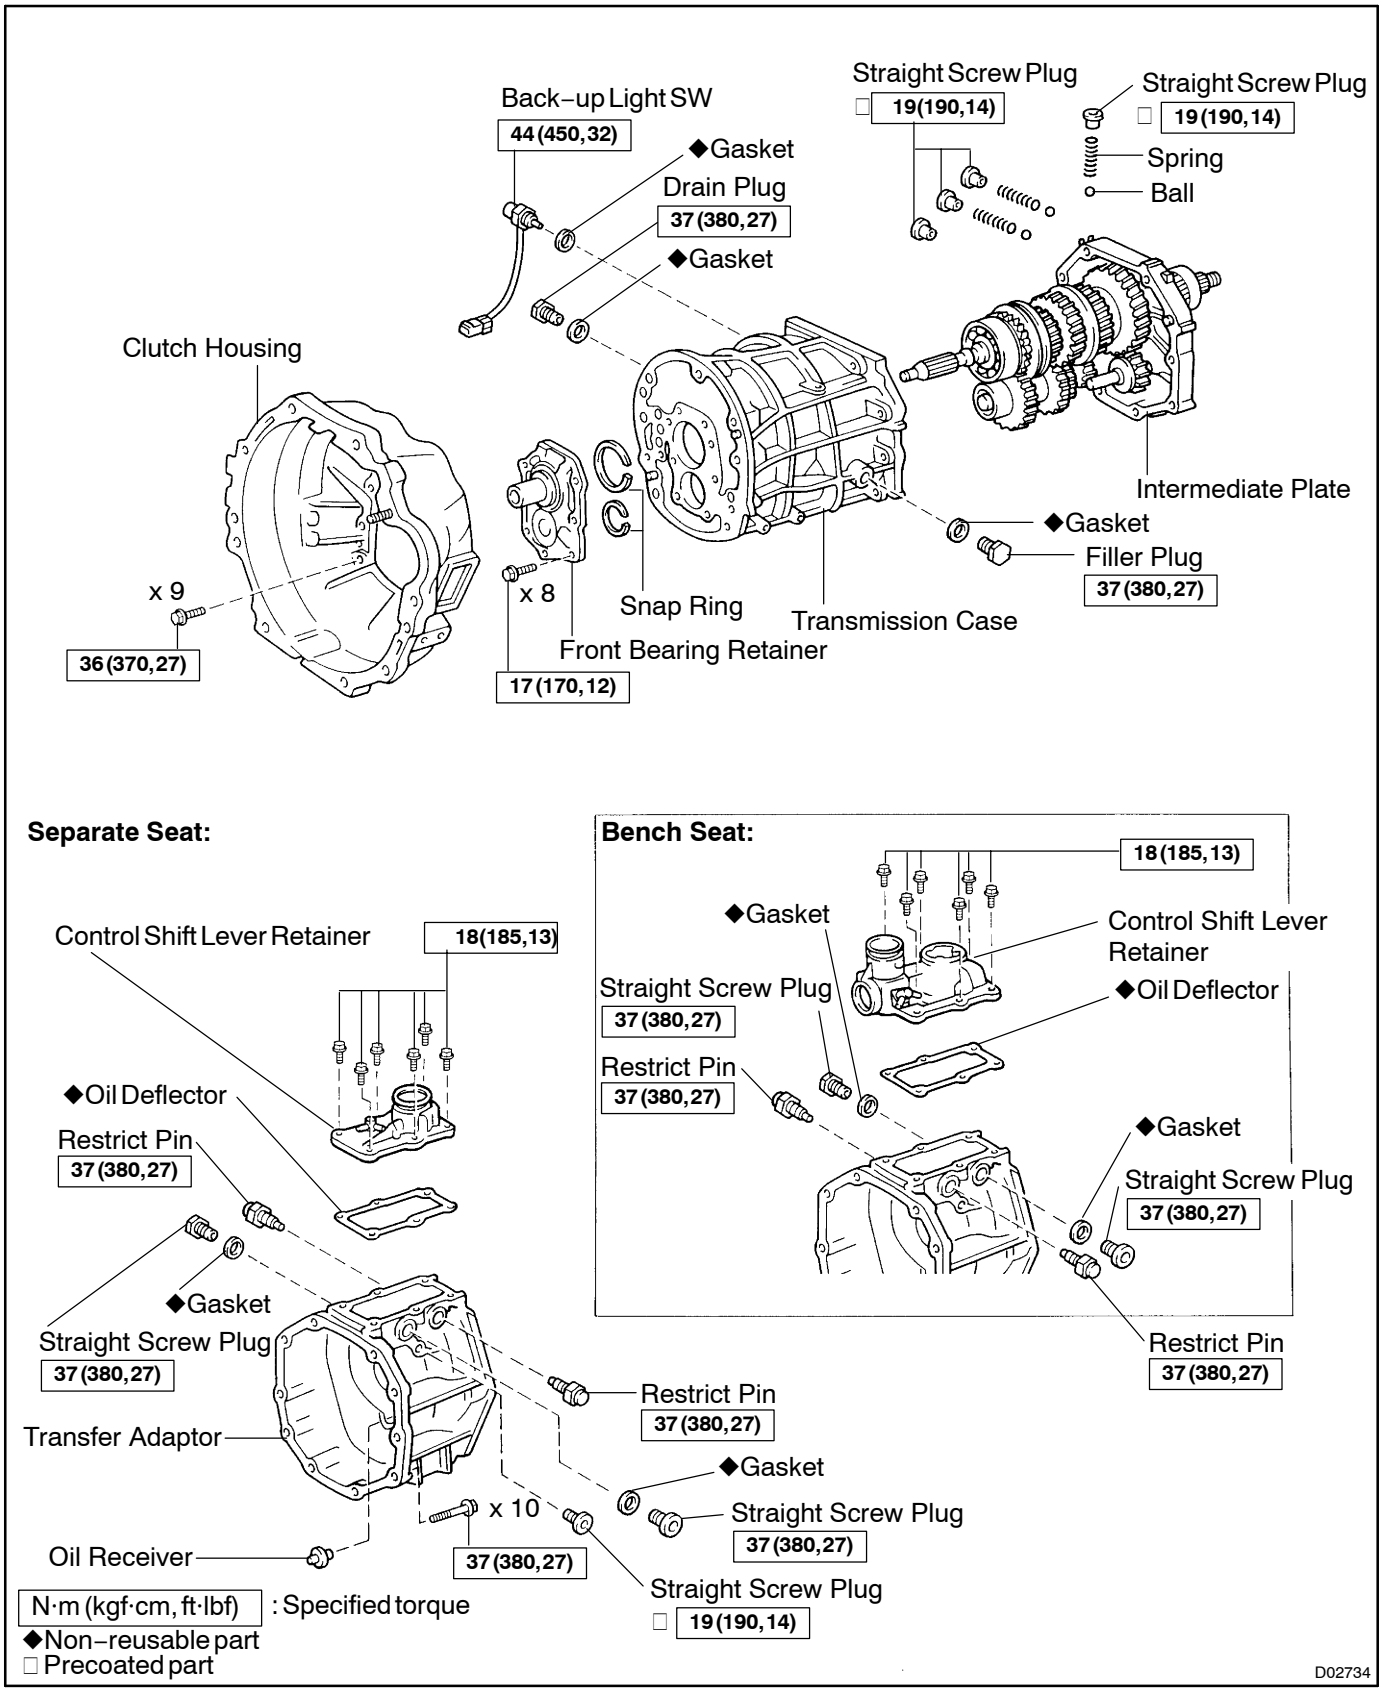

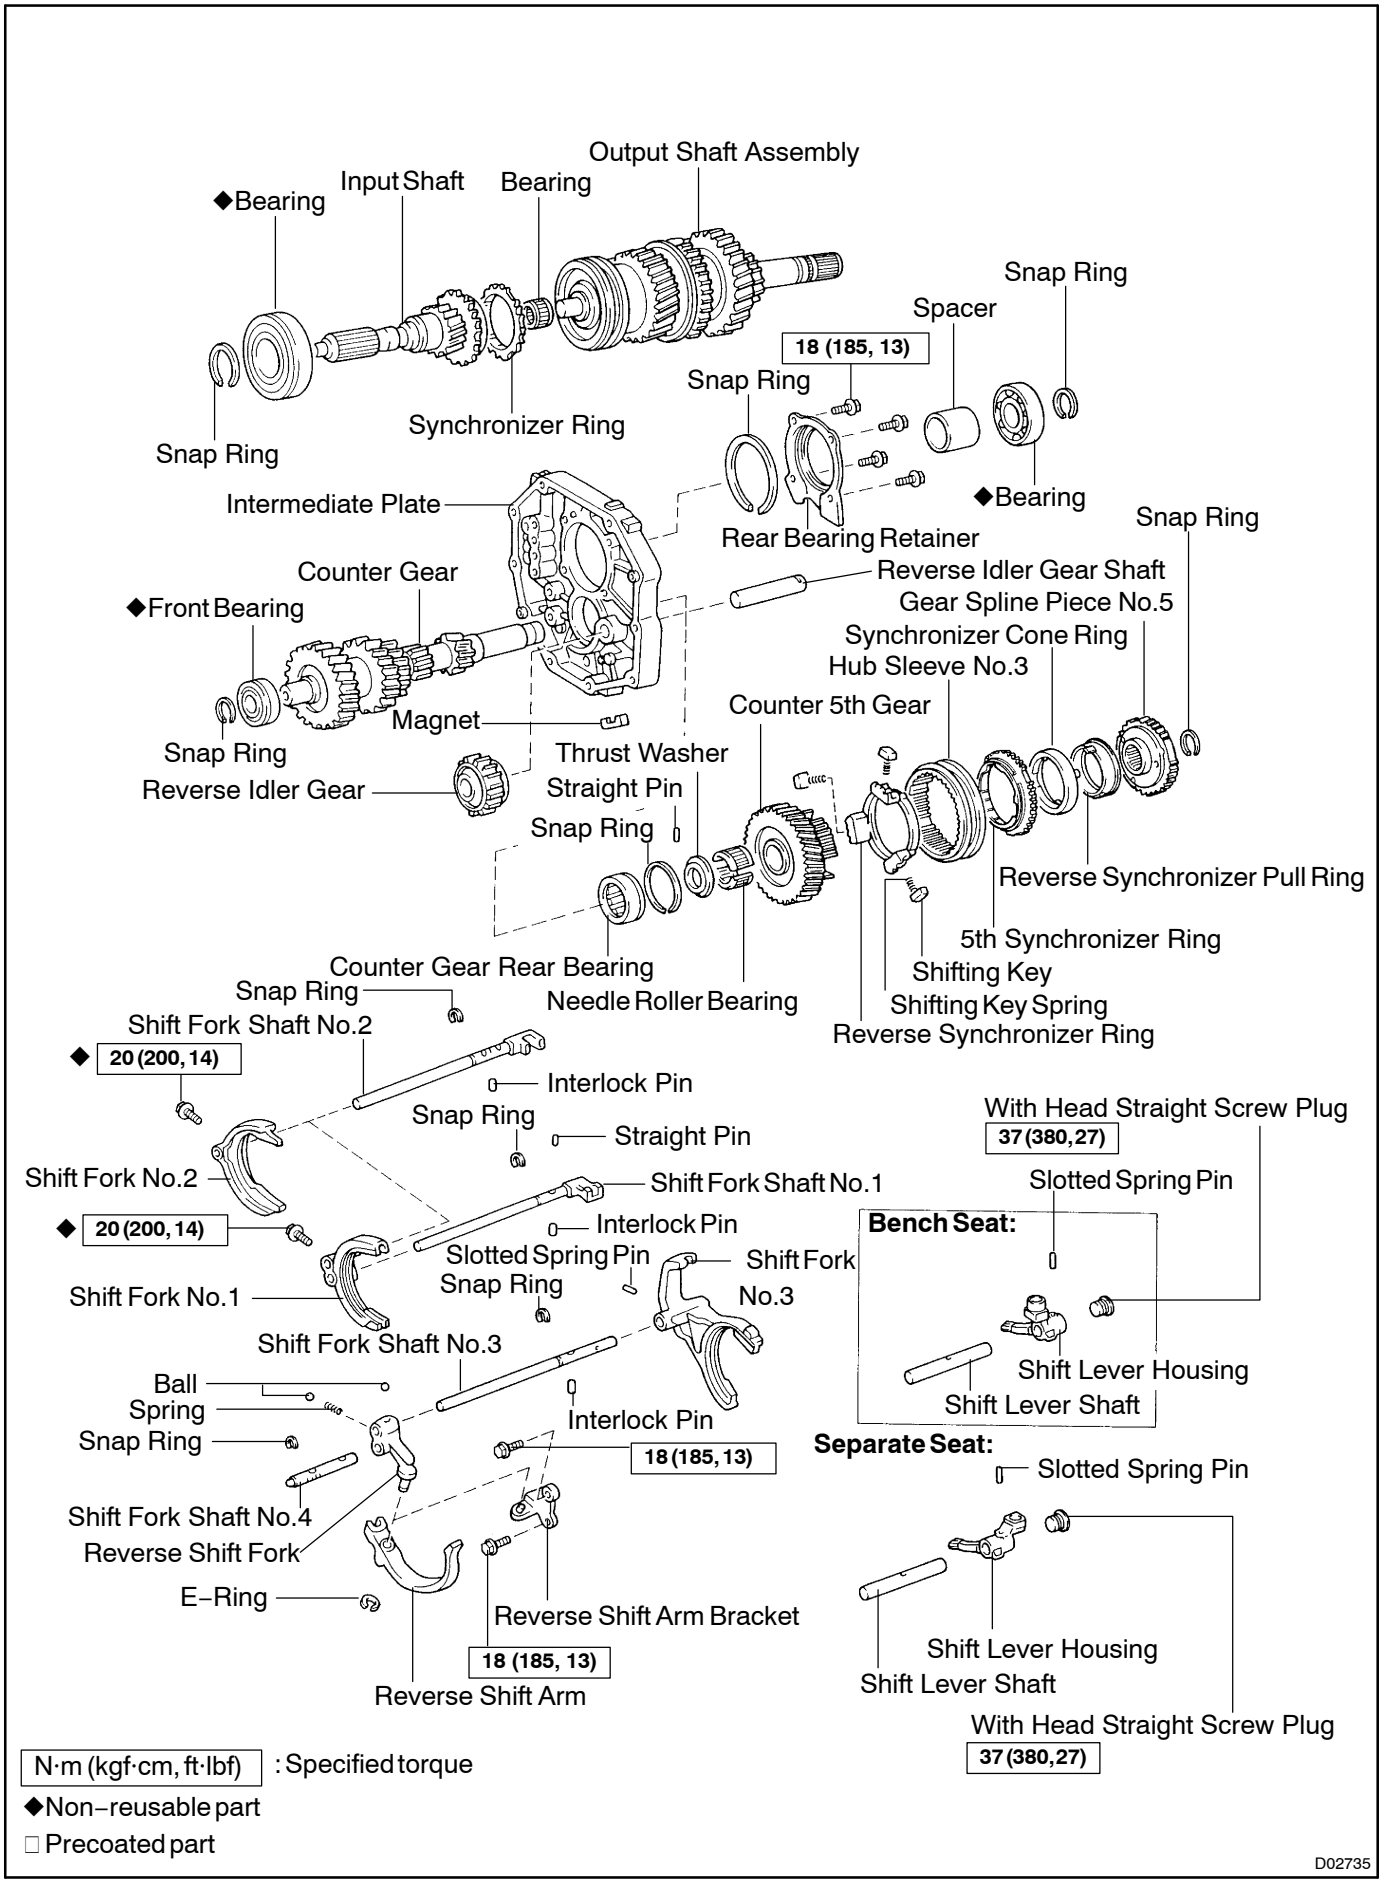
Output Shaft Assembly
Input Shaft
Bearing
◆Bearing
Snap Ring
Synchronizer Ring
Snap Ring
Spacer
18 (185, 13)
Snap Ring
◆Bearing
Intermediate Plate
Rear Bearing Retainer
Snap Ring
Counter Gear
Reverse Idler Gear Shaft
Gear Spline Piece No.5
◆Front Bearing
Synchronizer Cone Ring
Hub Sleeve No.3
Counter 5th Gear
Magnet
Snap Ring
Thrust Washer
Reverse Idler Gear
Straight Pin
Snap Ring
Reverse Synchronizer Pull Ring
5th Synchronizer Ring
Counter Gear Rear Bearing
Shifting Key
Needle Roller Bearing
Shifting Key Spring
Reverse Synchronizer Ring
Snap Ring
Shift Fork Shaft No.2
◆ 20 (200, 14)
Interlock Pin
Snap Ring
Straight Pin
With Head Straight Screw Plug
37 (380, 27)
Shift Fork No.2
Shift Fork Shaft No.1
Slotted Spring Pin
◆ 20 (200, 14)
Interlock Pin
Bench Seat:
Slotted Spring Pin
Shift Fork No.3
Shift Fork No.1
Snap Ring
Shift Fork Shaft No.3
Shift Lever Housing
Ball
Spring
Shift Lever Shaft
Interlock Pin
Snap Ring
18 (185, 13)
Separate Seat:
Slotted Spring Pin
Shift Fork Shaft No.4
Reverse Shift Fork
E–Ring
Reverse Shift Arm Bracket
Shift Lever Housing
18 (185, 13)
Shift Lever Shaft
Reverse Shift Arm
With Head Straight Screw Plug
37 (380, 27)
N·m (kgf·cm, ft·lbf) : Specified torque
◆Non–reusable part
Precoated part
D02735