AIR CONDITIONING SYSTEM

LOCATION

AC3PW–01

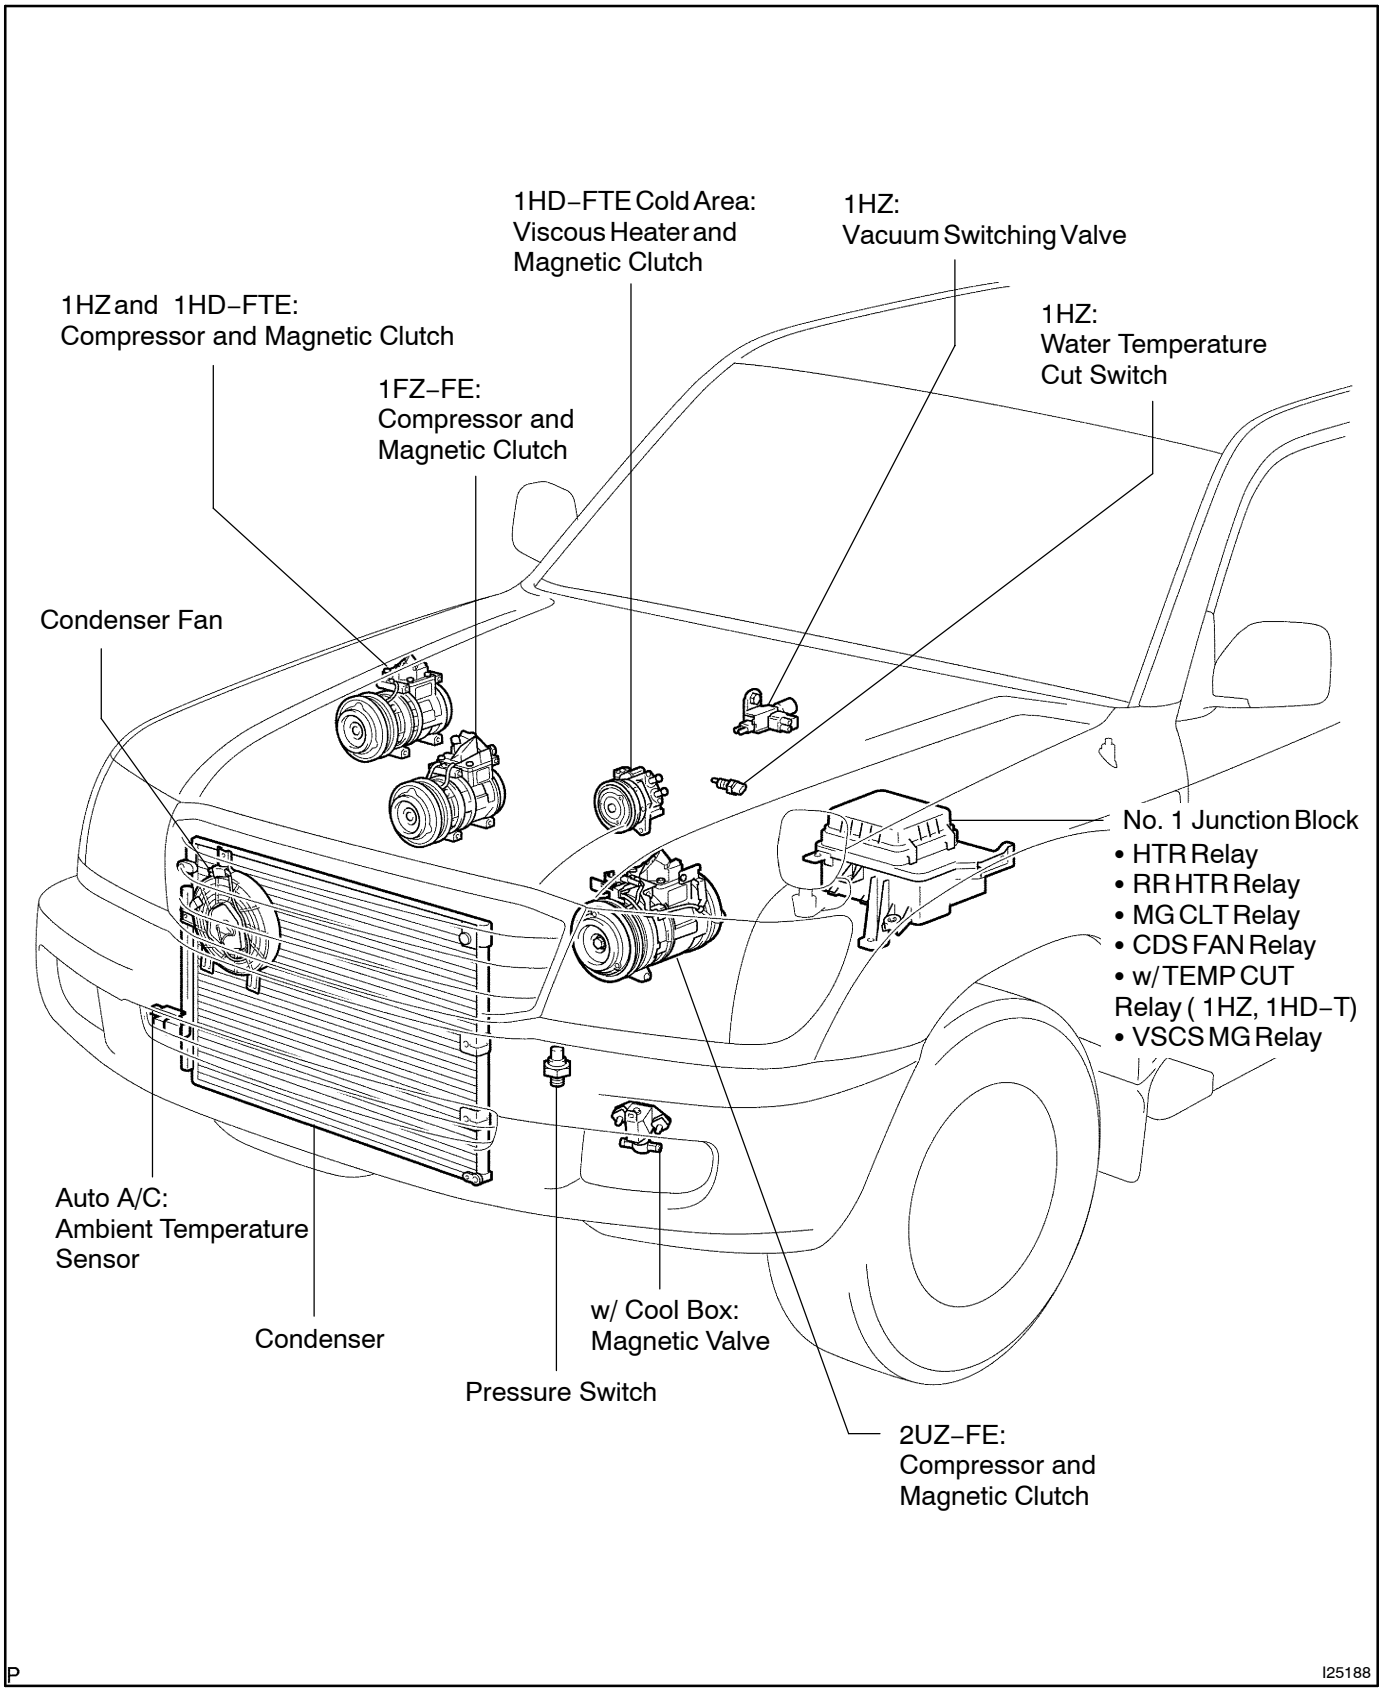

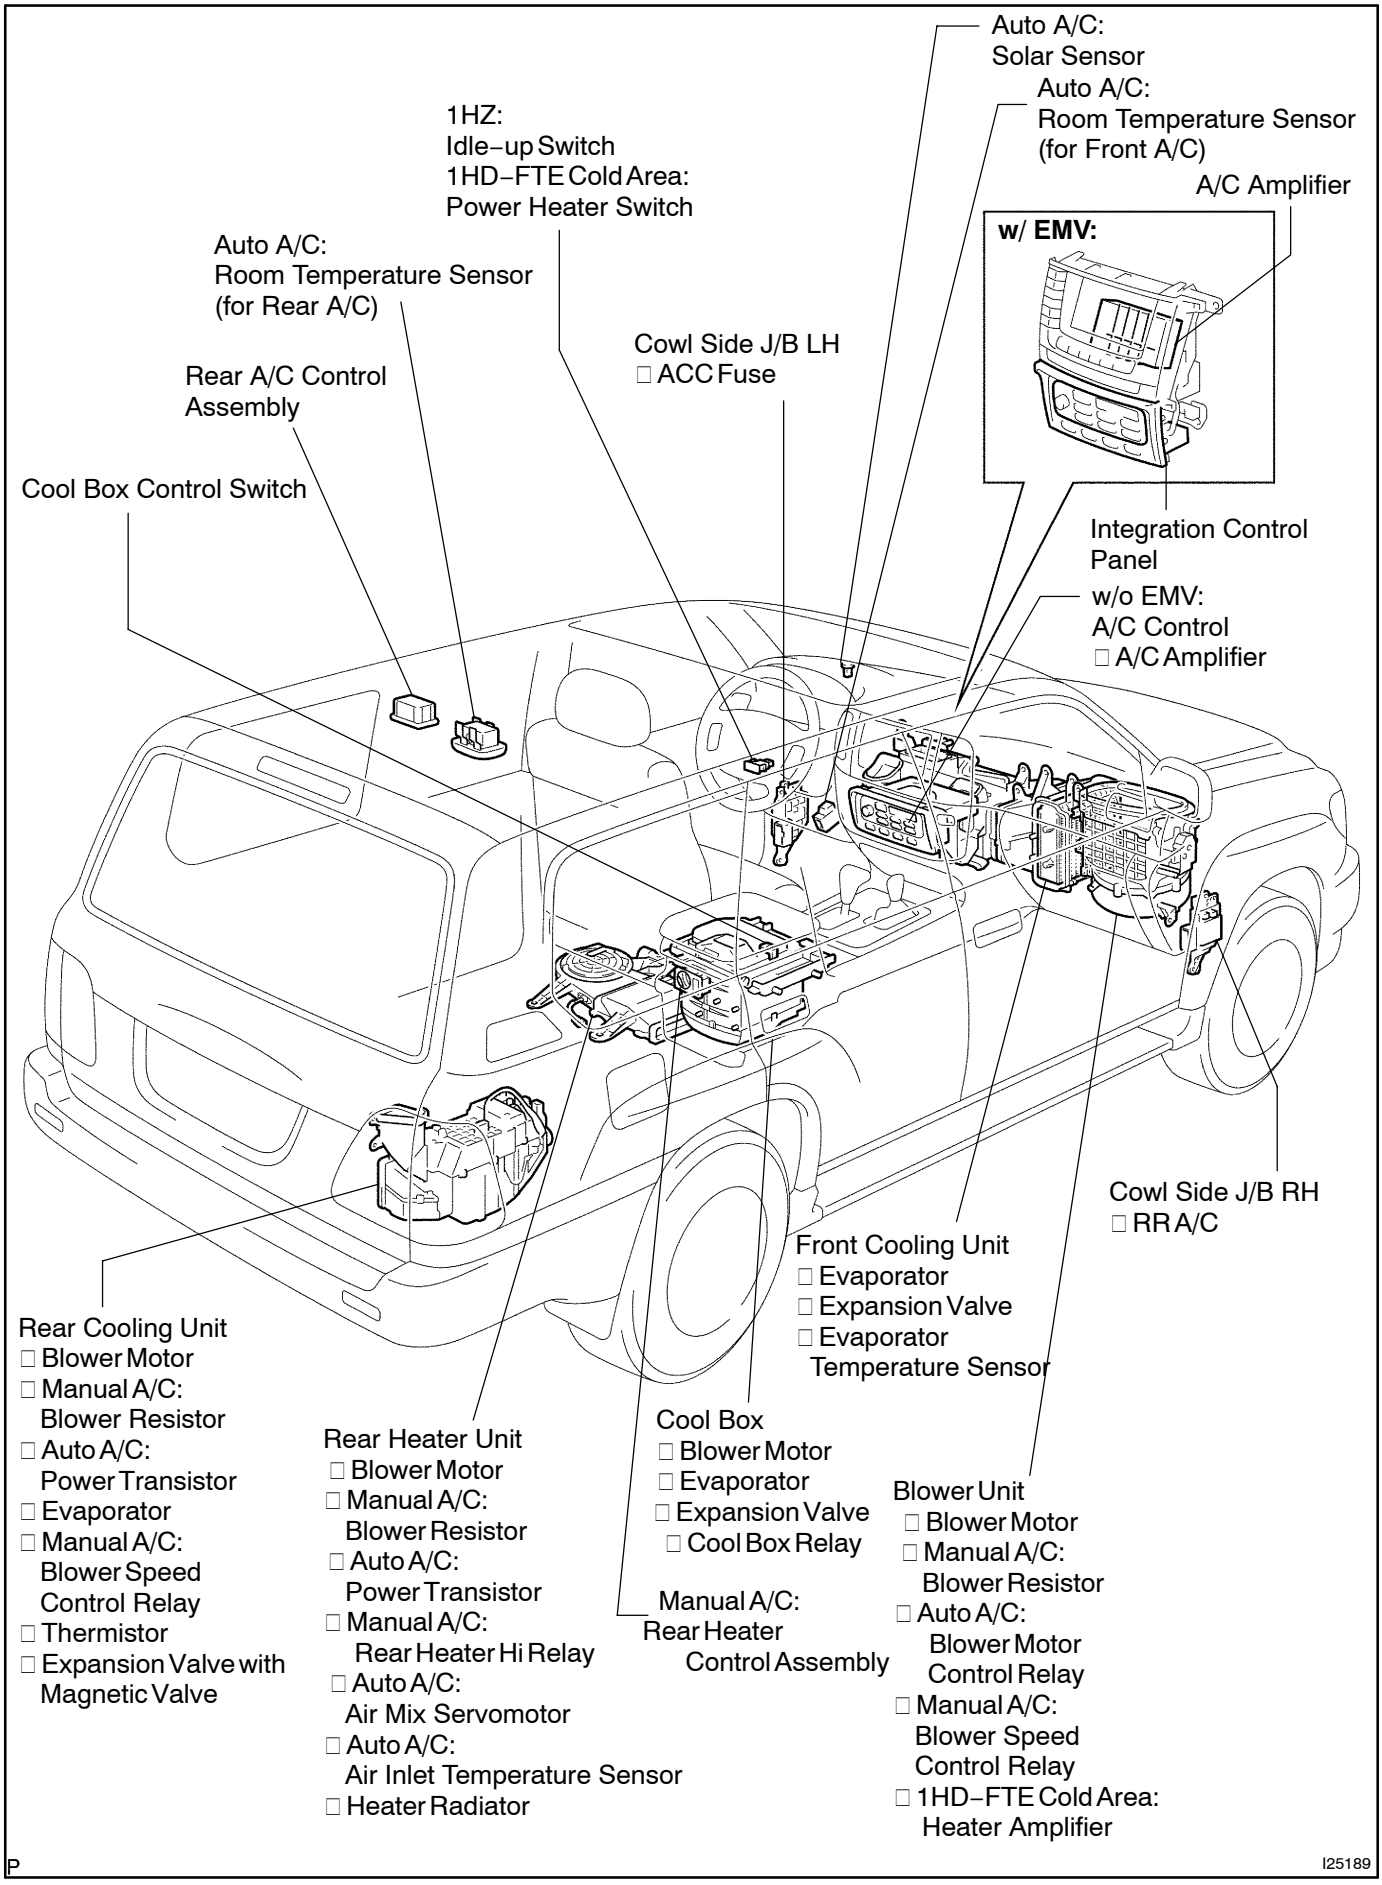
Auto A/C:
Solar Sensor
Auto A/C:
Room Temperature Sensor
(for Front A/C)
A/C Amplifier
w/ EMV:
1HZ:
Idle–up Switch
1HD–FTE Cold Area:
Power Heater Switch
Auto A/C:
Room Temperature Sensor
(for Rear A/C)
Cowl Side J/B LH
□ ACC Fuse
Rear A/C Control
Assembly
Cool Box Control Switch
Integration Control
Panel
w/o EMV:
A/C Control
□ A/C Amplifier
Cowl Side J/B RH
□ RR A/C
Front Cooling Unit
□ Evaporator
□ Expansion Valve
□ Evaporator
Temperature Sensor
Rear Cooling Unit
□ Blower Motor
□ Manual A/C:
Blower Resistor
□ Auto A/C:
Power Transistor
□ Evaporator
□ Manual A/C:
Blower Speed
Control Relay
□ Thermistor
□ Expansion Valve with
Magnetic Valve
Rear Heater Unit
□ Blower Motor
□ Manual A/C:
Blower Resistor
□ Auto A/C:
Power Transistor
□ Manual A/C:
Rear Heater Hi Relay
□ Auto A/C:
Air Mix Servomotor
□ Auto A/C:
Air Inlet Temperature Sensor
□ Heater Radiator
Cool Box
□ Blower Motor
□ Evaporator
□ Expansion Valve
□ Cool Box Relay
Manual A/C:
Rear Heater
Control Assembly
Blower Unit
□ Blower Motor
□ Manual A/C:
Blower Resistor
□ Auto A/C:
Blower Motor
Control Relay
□ Manual A/C:
Blower Speed
Control Relay
□ 1HD–FTE Cold Area:
Heater Amplifier
P
I25189