

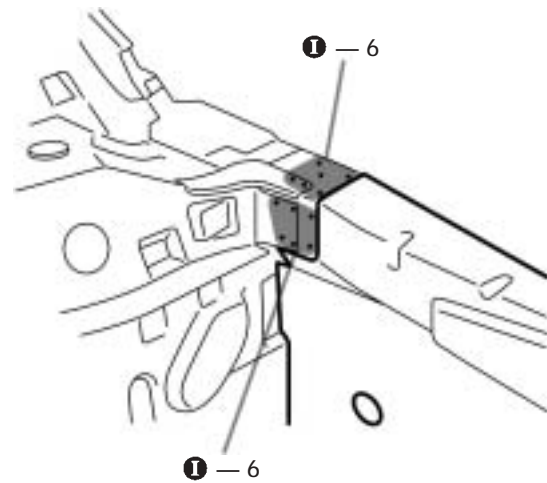
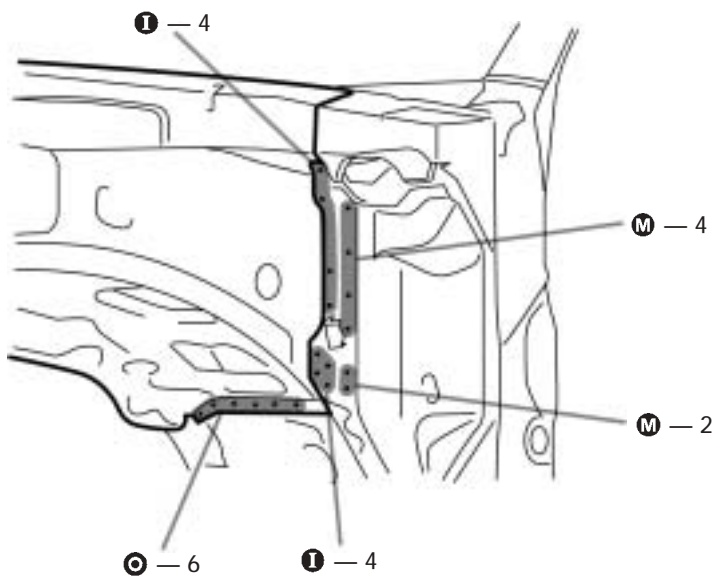
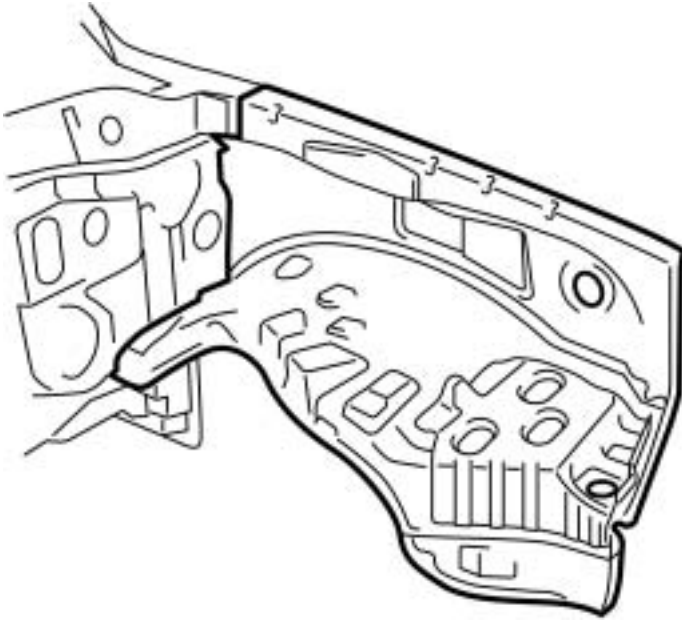
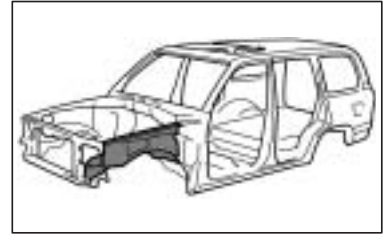
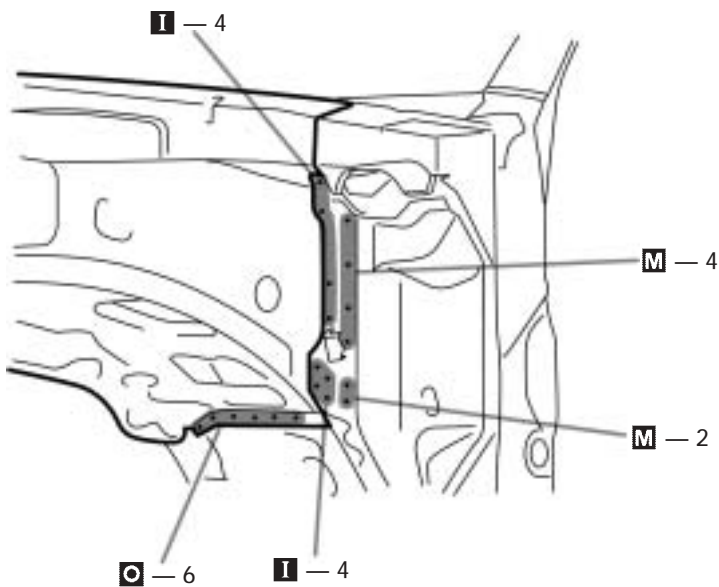


## FRONT FENDER APRON (ASSY)

**REMOVAL** (With the radiator support, cowl top side panel removed.)

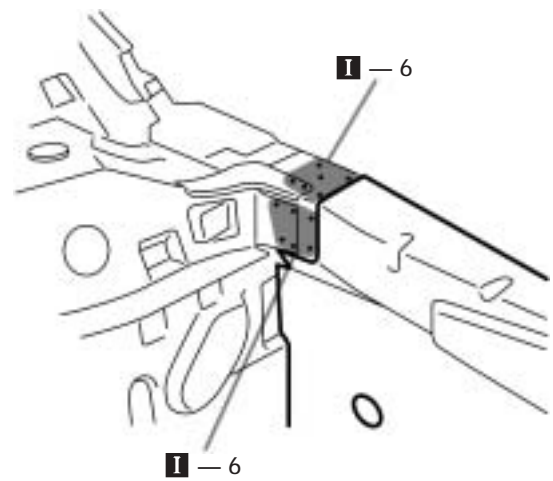

## INSTALLATION

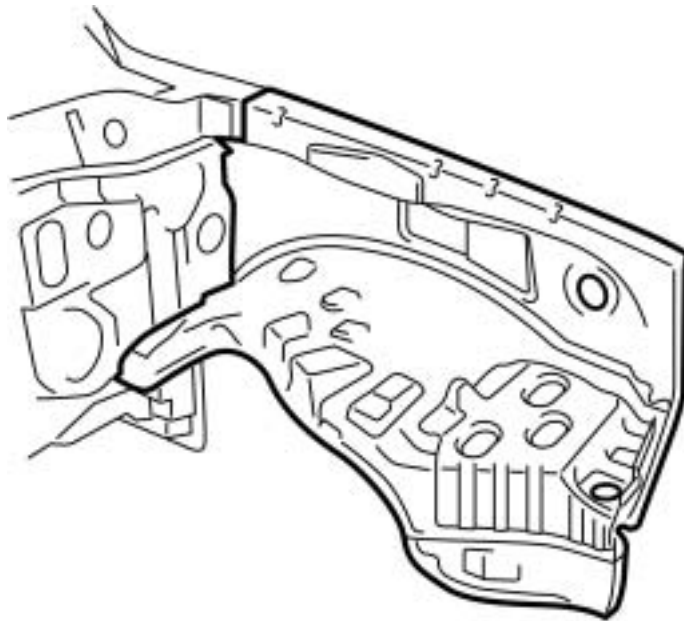

1. Temporarily install the new parts and measure each part in accordance with the body dimension diagram.
2. Temporarily install the front fender and hood, and check the fit.