

INSTALLATION

1. CLEAN BODY MOUNTING SURFACE

- (a) Using a heat light, heat the body mounting surface to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the body excessively.

- (b) Wipe off stains with cleaner.

2. CLEAN MOULDING

If reusing the moulding.


- (a) Using a heat light, heat the moulding surface to 20 – 30 °C (68 – 86 °F).

NOTICE:


Do not heat the moulding excessively.

- (b) Remove the adhesive tape from the moulding.
 (c) Wipe off stains with cleaner.
 (d) Apply a new adhesive tape to the moulding as shown in the illustration.

Wide Type:

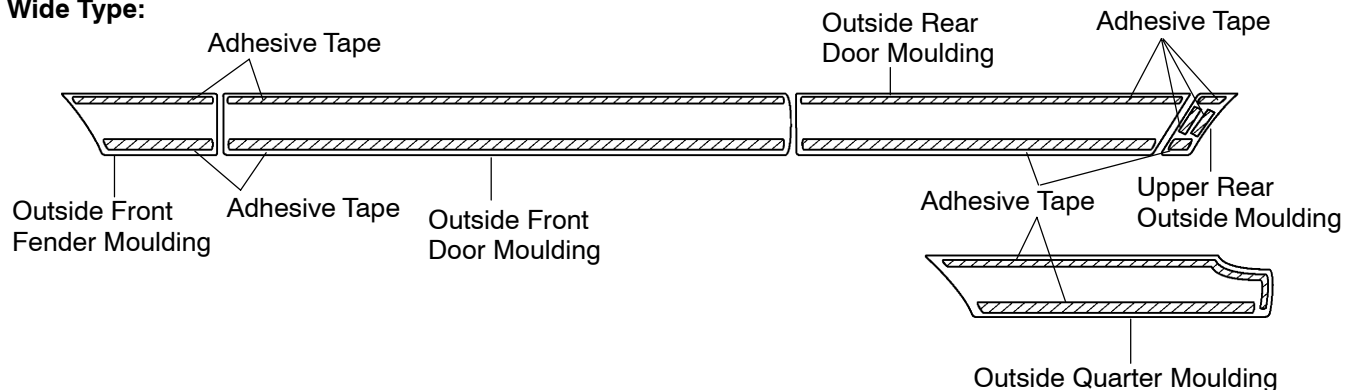

Narrow Type:

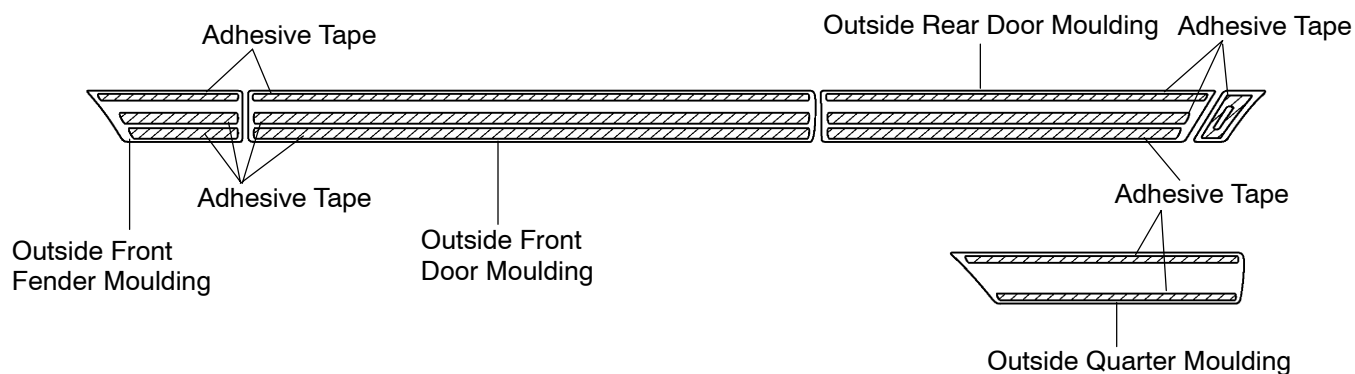


3. Narrow Type: APPLY ADHESIVE

Apply adhesive the moulding as shown in the illustration.

NOTICE:

Install the moulding within 30 minutes after applying the adhesive.

Part No.08850-00801 or equivalent

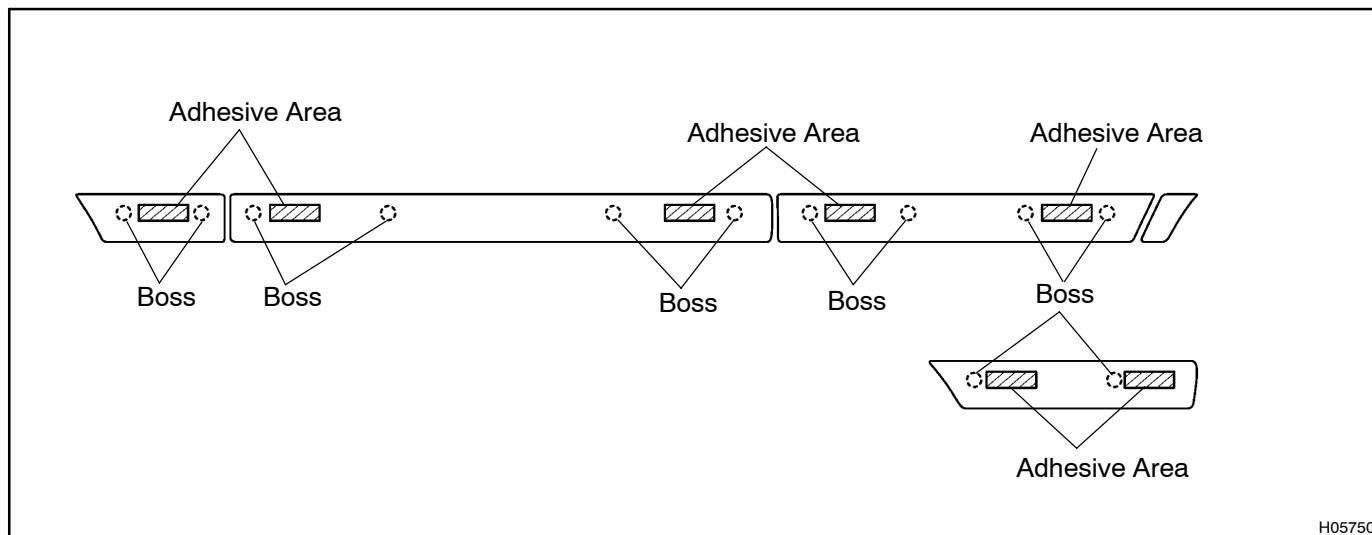

H05750

4. INSTALL MOULDING

- (a) Using a heat light, heat the body and moulding.

Body: 40 – 60 °C (104 – 104 °F)

Moulding: 20 – 30 °C (68 – 86 °F)

NOTICE:

Do not heat the body and moulding excessively.


- (b) Lift moulding release sheet from the face of moulding.

NOTICE:

- When the moulding release sheet is removed, make sure that no dirt or dust can get onto the uncoated area.
 - Do not apply excessive force onto the moulding, but steady pressure with your thumbs.
- (c) Align the bosses on the moulding with the body holes, and push the moulding to the body.

NOTICE:

- Be sure that the body and moulding are heated to the proper temperature.
- Do not depress the adhesive-coated parts excessively, just hold them down with your thumb.
- Scrape of any overflowing adhesive with a plastic spatula and clean the surface with a dry rag.
- After installation, do not wash the vehicle for 24 hours.

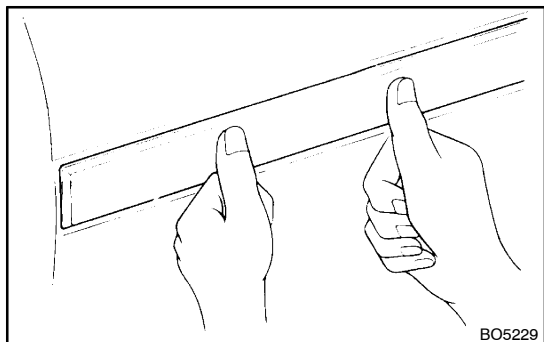

BO5229