


INSTALLATION

1. PLACE THERMOSTAT IN CYLINDER BLOCK

- (a) Install a new gasket to the thermostat.
- (b) Install the thermostat with the jiggle valve upward.

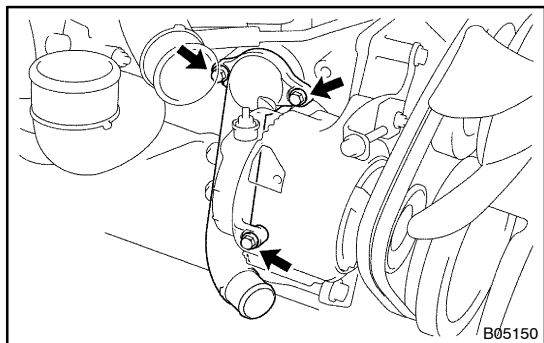

2. INSTALL WATER INLET

- (a) Temporarily install the water inlet with the 3 bolts.
- (b) Alternately tighten the 3 bolts in several passes.

Torque: 19.6 N·m (200 kgf·cm, 14 ft·lbf)

3. FILL WITH ENGINE COOLANT

4. START ENGINE AND CHECK FOR COOLANT LEAKS