
BO4JA-01

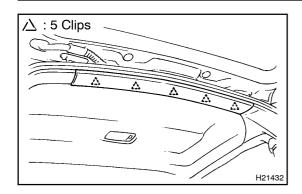


# REMOVAL

## 1. REMOVE ROOF HEADLINING REAR TRIM

Using a screwdriver, remove the roof headlining rear trim. HINT:

Tape up the screwdriver tip before use.

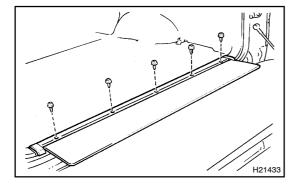


## 2. REMOVE REAR MAT SET PLATE

- (a) Remove the 5 screws.
- (b) Using a screwdriver, remove the rear mat set plate.

### HINT:


Tape up the screwdriver tip before use.

- 3. w/ TONNEAU COVER: REMOVE TONNEAU COVER
- 4. REMOVE REAR MAT
- 5. REMOVE REAR NO. 1 SEAT OUTER BELT FLOOR AN-CHOR
- 6. REMOVE REAR DOOR SCUFF PLATE
- 7. REMOVE REAR DOOR OPENING TRIM

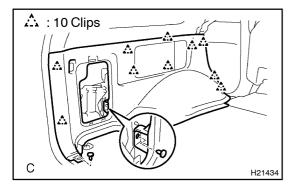

# 8. REMOVE QUARTER TRIM PANEL

- (a) Remove the quarter trim jack cover.
- (b) Using a clip remover, remove the 2 clips.
- (c) Remove the quarter trim panel, then disconnect the connector.
- 9. REMOVE NO.1 SEAT OUTER BELT SHOULDER ANCHOR

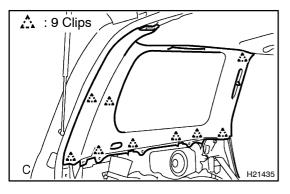


10. REMOVE UPPER ROOF SIDE INNER GARNISH


- (a) Using a clip remover, remove the clip.
- (b) Using a screwdriver, remove the upper roof side inner garnishes.

### HINT:

Tape up the screwdriver tip before use.

LAND CRUISER (W/G) SUP (RM970E)

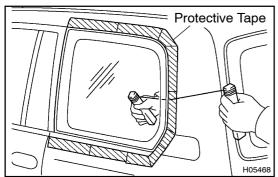

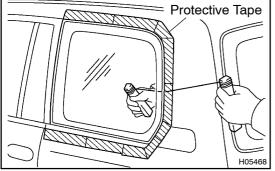

#### **REMOVE QUARTER WINDOW GLASS** 11.


- (a) Push a piano wire through from the interior.
- (b) Tie both wire ends to wooden blocks or similar object.

## HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.


## **NOTICE:**

When separating the glass, take care not to damage the paint and the interior.

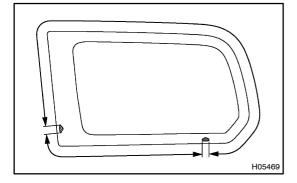

Cut the adhesive by pulling the piano wire around it. (c) HINT:

Cut the adhesive areas as shown in the illustration, leaving the adhesive where the clips are.

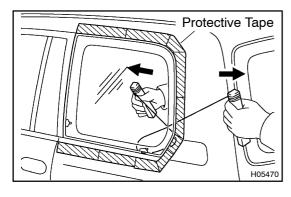

- Push the piano wire through as shown in the illustration, cut off the adhesive on the clips.
- Remove the glass. (e)

## **NOTICE:**

Leave as much adhesive on the body as possible when cutting off the glass.