
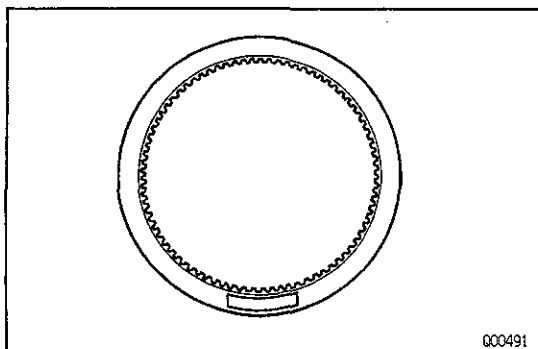


# FIRST AND REVERSE BRAKE COMPONENTS

AT093-01

AT

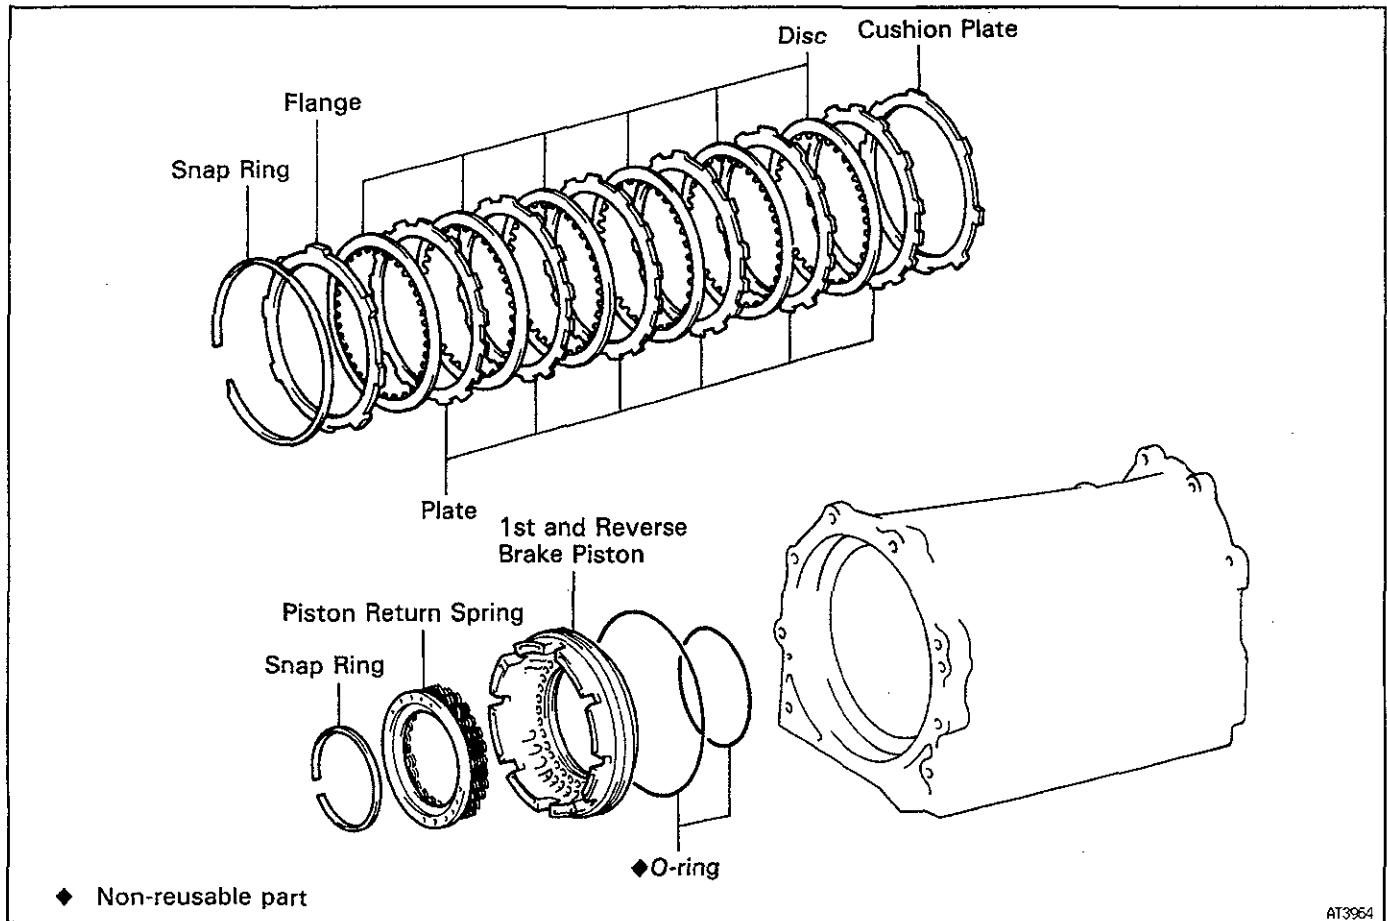

## FIRST AND REVERSE BRAKE INSPECTION

AT08J-01

### INSPECT DISCS, PLATES AND CUSHION PLATE

Check to see if the sliding surface of the disc, plate and flange are worn or burnt. If necessary, replace them.

#### HINT:

- If the lining of the disc is peeling off or discolored, or even if parts of the printed numbers are defaced, replace all discs.
- Before assembling new discs, soak them in ATF for at least fifteen minutes.