

REMOVAL

1. REMOVE OUTSIDE FRONT FENDER MOULDING

- (a) Wide Type:
Remove the screw.
- (b) Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the moulding excessively.

- (c) Wide Type:
Cut the adhesive tape with a knife.

NOTICE:

- **If reusing the moulding, take care not to damage the moulding.**
 - **Do not damage the body.**
- (d) Narrow Type:
Cut the adhesive and adhesive tape with a knife.


NOTICE:

- **If reusing the moulding, take care not to damage the moulding.**
- **Do not damage the body.**

- (e) Using a screwdriver, remove the moulding.

HINT:

Tape the screwdriver tip before use.

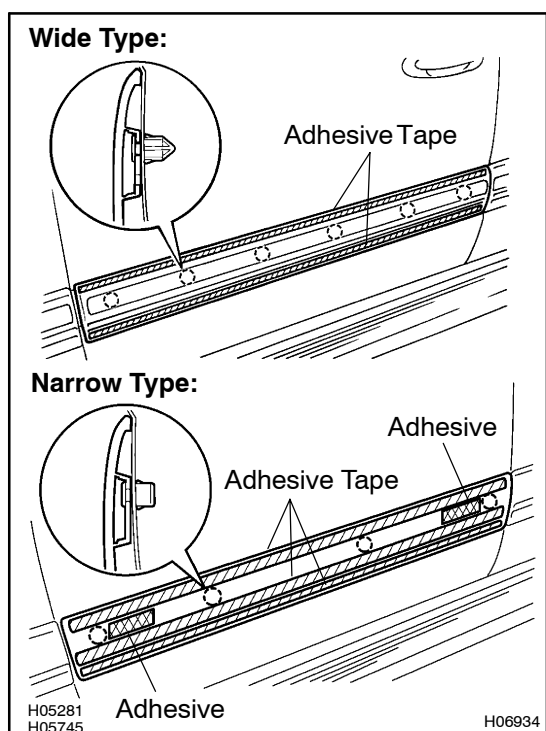

2. REMOVE OUTSIDE FRONT DOOR MOULDING

- (a) Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the moulding excessively.

- (b) Wide Type:
Cut the adhesive tape with a knife.

NOTICE:

- **If reusing the moulding, take care not to damage the moulding.**
- **Do not damage the body.**

- (c) Narrow Type:
Cut the adhesive and adhesive tape with a knife.


NOTICE:

- **If reusing the moulding, take care not to damage the moulding.**
- **Do not damage the body.**

- (d) Using a screwdriver, remove the moulding.

HINT:

Tape the screwdriver tip before use.

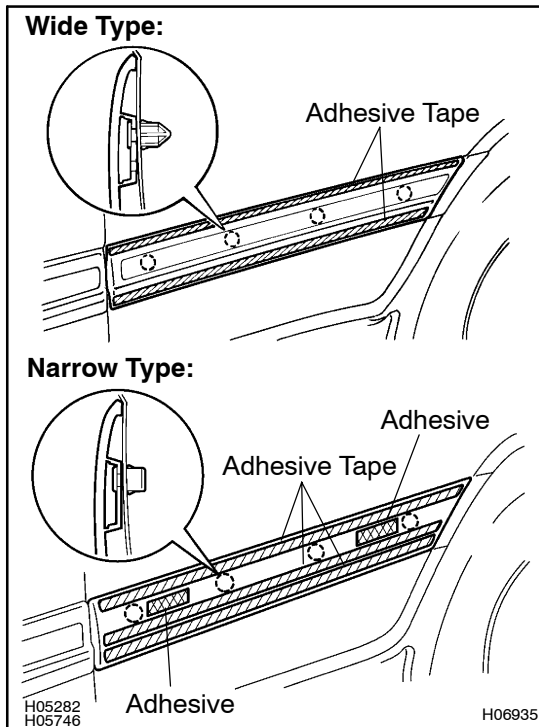

3. REMOVE OUTSIDE REAR DOOR MOULDING

- (a) Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the moulding excessively.

- (b) Wide Type:
Cut the adhesive tape with a knife.

NOTICE:

- If reusing the moulding, take care not to damage the moulding.
- Do not damage the body.

- (c) Narrow Type:
Cut the adhesive and adhesive tape with a knife.

NOTICE:

- If reusing the moulding, take care not to damage the moulding.
- Do not damage the body.

- (d) Using a screwdriver, remove the moulding.

HINT:

Tape the screwdriver tip before use.

4. REMOVE UPPER REAR OUTSIDE REAR DOOR MOULDING

- (a) Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the moulding excessively.

- (b) Cut the adhesive tape with a knife.


NOTICE:


- If reusing the moulding, take care not to damage the moulding.
- Do not damage the body.

- (c) Using a screwdriver, remove the moulding.

HINT:

Tape the screwdriver tip before use.

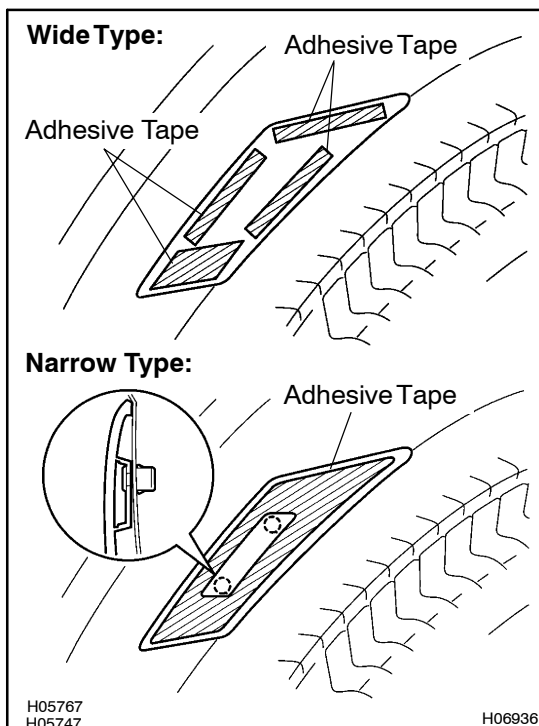

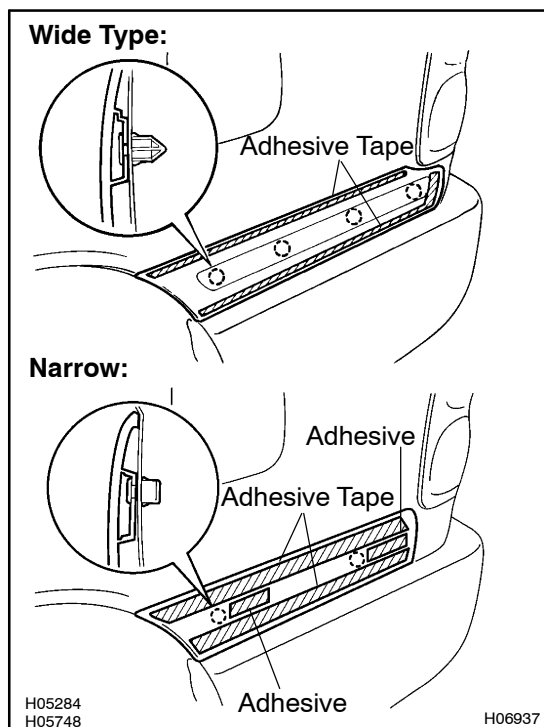

5. REMOVE OUTSIDE QUARTER MOULDING

- (a) Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the moulding excessively.

- (b) Wide Type:

Cut the adhesive tape with a knife.

NOTICE:

- **If reusing the moulding, take care not to damage the moulding.**
- **Do not damage the body.**

- (c) Narrow Type:

Cut the adhesive tape with a knife.

NOTICE:

- **If reusing the moulding, take care not to damage the moulding.**
- **Do not damage the body.**

- (d) Using a screwdriver, remove the moulding.

HINT:

Tape the screwdriver tip before use.