


FUEL CUT RPM INSPECTION

1. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

2. CONNECT TACHOMETER, HAND –HELD TESTER OR OBDII SCAN TOOL (See page EM-3)

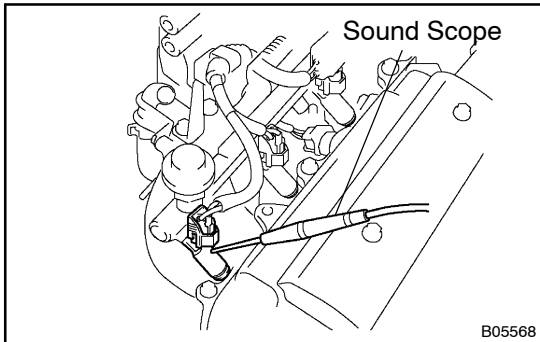

3. INSPECT FUEL CUTOFF RPM OPERATION

- (a) Increase the engine speed to at 2,500 rpm or more.
- (b) Check for injector operating noise.
- (c) Check that when the throttle lever is released, injector operation noise stops momentarily and then resumes.

HINT:

- The vehicle should be stopped.
- Measure with the A/C OFF.

Fuel return speed: 1,800 rpm

4. DISCONNECT TOYOTA HAND –HELD TESTER OR OBDII SCAN TOOL