

PARKING BRAKE LEVER ON-VEHICLE INSPECTION


1. CHECK PARKING BRAKE LEVER TRAVEL

Pull the parking brake lever all the way up, and count the number of clicks.

Parking brake lever travel at 196 N (20 kgf, 44 lbf):

4 – 6 clicks

If incorrect, adjust the parking brake.

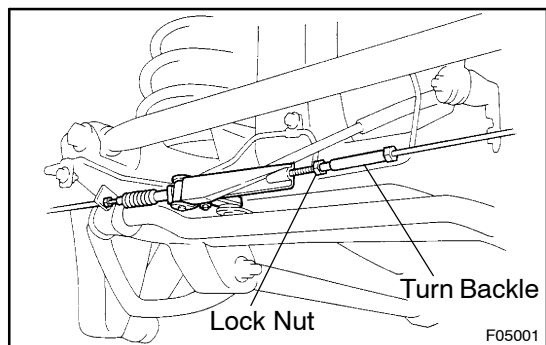


2. IF NECESSARY, ADJUST PARKING BRAKE

HINT:

Before adjusting the parking brake, make sure that the rear brake shoe clearance has been adjusted. For shoe clearance adjustment [see page BR-47](#) or [BR-62](#).

- (a) Loosen the lock nut and turn the turn backle until the lever travel is correct.
- (b) Tighten the lock nut.

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

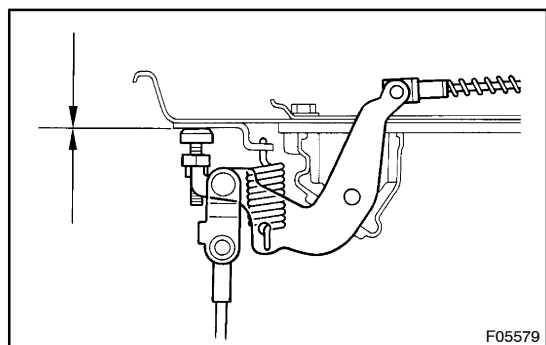

3. CHECK BELLCRANK

- (a) Check that the adjusting bolt on the bellcrank is not apart from the backing plate.
- (b) When the adjusting bolt on the bellcrank is apart from the backing plate adjust the parking brake cable once again.