


<b>DTC</b>	<b>P07 10/38</b>	<b>Transmission Fluid Temperature Sensor Malfunction (ATF Temperature Sensor)</b>
------------	------------------	---


## CIRCUIT DESCRIPTION

The ATF temperature sensor converts fluid temperature into a resistance value which is input into the Engine and ECT ECU.

DTC No.	DTC Detecting Condition	Trouble Area
P0710/38	<p>Either (a) or (b) is detected for 0.5 sec. or more. (2-trip detection logic)</p> <p>(a) Temperature sensor resistance is less than 79 <math>\Omega</math></p> <p>(b) After the engine has been operating for 15 minutes or more, the resistance at the temp. sensor is more than 156 k <math>\Omega</math></p>	<ul style="list-style-type: none"> <li>• Open or short in ATF temperature sensor</li> <li>• ATF temperature sensor</li> <li>• Engine and ECT ECU</li> </ul>

## WIRING DIAGRAM

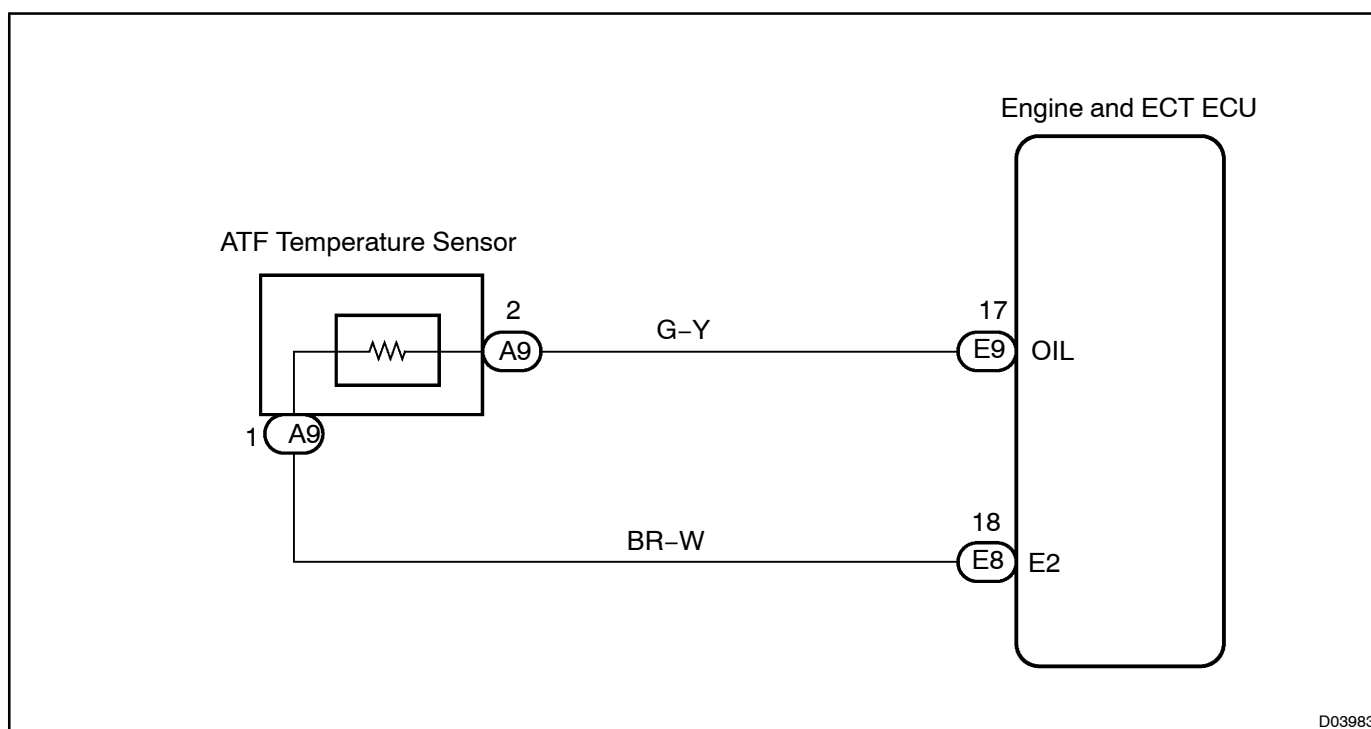

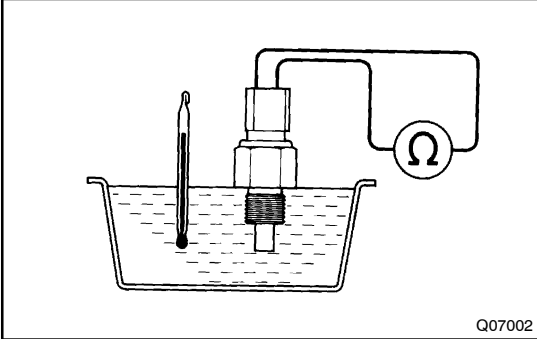**INSPECTION PROCEDURE****1 Check ATF temperature sensor.****PREPARATION:**

- (a) Remove the ATF temperature sensor connector.
- (b) Remove the ATF temperature sensor  
([See page AT-8](#)).

**CHECK:**

Measure resistance between terminals of ATF temperature sensor at 20 °C (68 °F) and 120 °C (248 °F).

**OK:**

**Resistance (Approx.):**

20 °C (68 °F): 12.1 k $\Omega$

120 °C (248 °F): 616  $\Omega$

**NG****Replace the ATF temperature sensor.****OK****2 Check harness and connector between ATF temperature sensor and Engine and ECT ECU ([See page IN-35](#)).****NG****Repair or replace the harness or connector.****OK**

**Check and replace the Engine and ECT ECU**  
([See page IN-35](#)).