


O/D Main Switch & O/D OFF Indicator Light Circuit

CIRCUIT DESCRIPTION

The O/D main switch contacts go open when the switch is pushed in and go closed when it is pushed out. In O/D main switch at OFF position, the O/D OFF indicator light lights up, and the Engine and ECT ECU prohibits shifting overdrive.

WIRING DIAGRAM

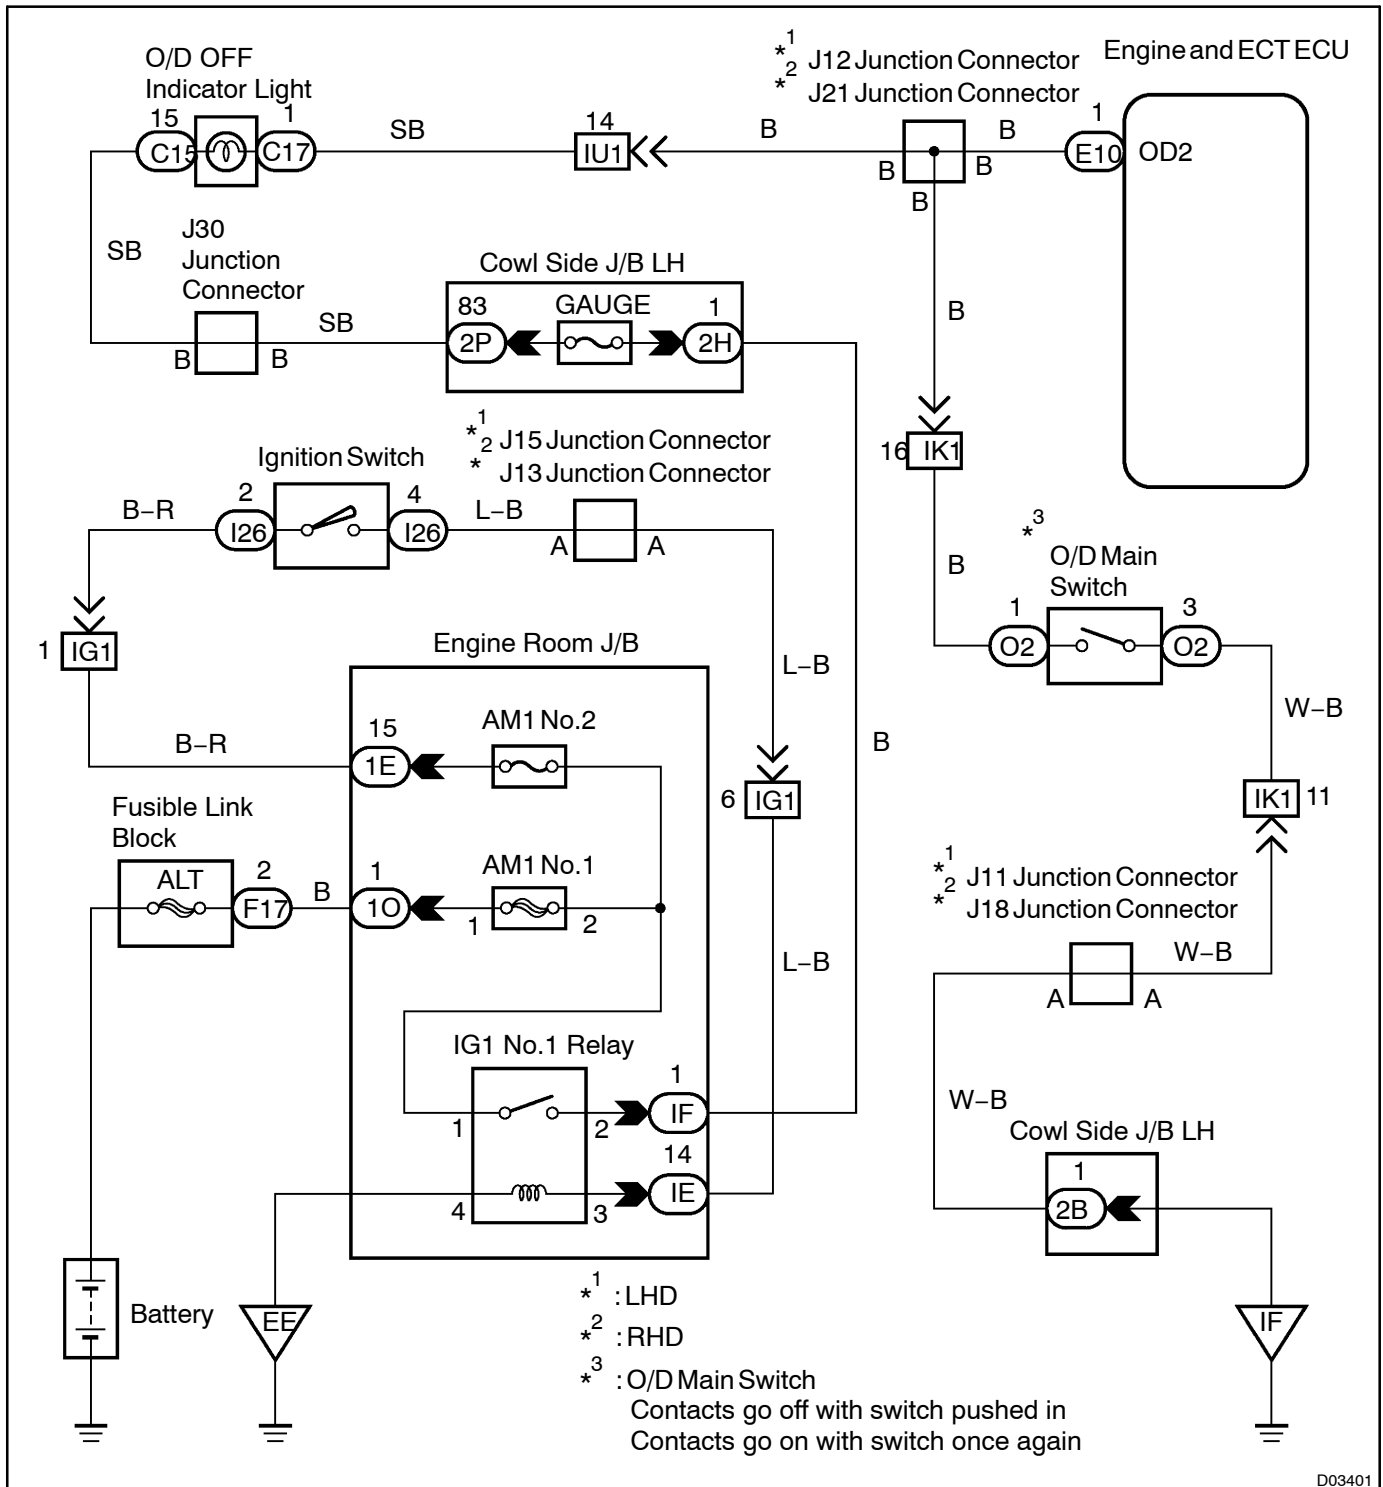


D03401

INSPECTION PROCEDURE

O/D OFF indicator light does not light up

1	Check O/D main switch.
---	------------------------

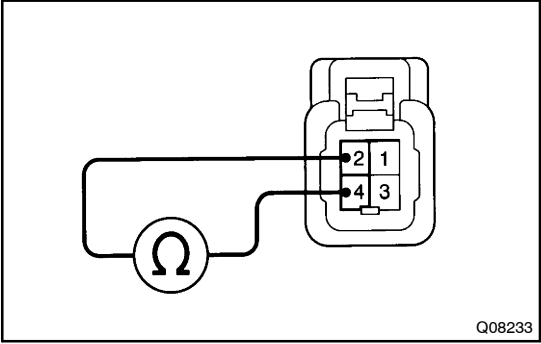

PREPARATION:
Disconnect the O/D main switch connector.

CHECK:
Check continuity between terminals 2 and 4 of O/D main switch connector.

OK:

O/D main switch	Specified condition
ON	No continuity
OFF	Continuity

NG	Replace the O/D main switch.
----	------------------------------

OK

2	Check and replace combination meter (See page BE-2).
---	--

NG	Replace the combination meter.
----	--------------------------------

OK

3 Check OVRDRIVE CUT SW2 signal.

When using hand-held tester

PREPARATION:


- (a) Remove the fuse box cover.
- (b) Connect a hand-held tester to the DLC3.
- (c) Turn the ignition switch ON and hand-held tester main switch ON.

CHECK:

Read the OVRDRIVE CUT SW2 signal on the hand-held tester.

OK:

O/D main switch condition	OVRDRIVE CUT SW2 signal
O/D ON (Pushed in)	OFF
O/D OFF (Pushed once again)	ON

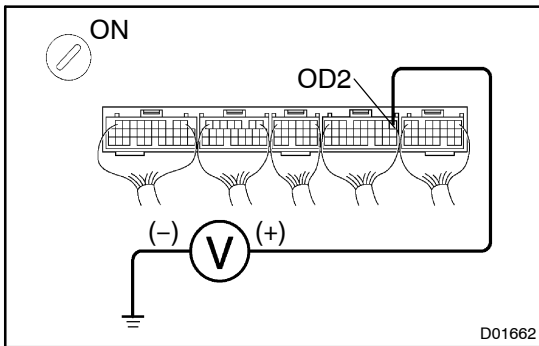

When not using hand-held tester

PREPARATION:

Turn the ignition switch ON.

CHECK:

Check voltage between terminal OD2 of Engine and ECT ECU and body ground.

OK:

O/D main switch condition	Voltage
O/D ON (Pushed in)	9.0 – 14 V
O/D (Pushed once again)	Below 1.5 V

OK

Proceed to next circuit inspection shown in symptom problems table (See page DI-22).

NG


4 Check harness and connector between O/D OFF indicator light and Engine and ECT ECU (See page IN-35).

NG

Repair or replace the harness or connector.

OK

Check and replace the Engine and ECT ECU (See page IN-35).

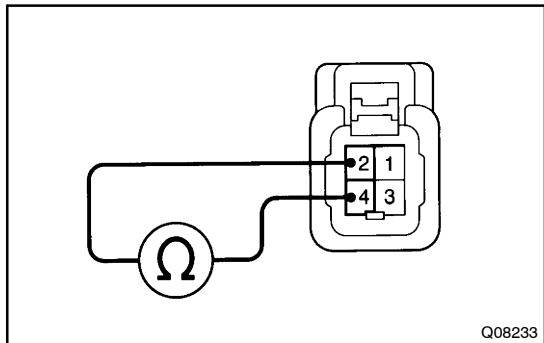INSPECTION PROCEDURE**O/D OFF indicator light remains ON****1 Check O/D main switch.****PREPARATION:**

Disconnect the O/D main switch connector.

CHECK:

Check continuity between terminals 2 and 4 of O/D main switch connector.

OK:

O/D main switch	Specified condition
ON	No continuity
OFF	Continuity

NG**Replace the O/D main switch.****OK****2 Check harness and connector between O/D OFF indicator light and O/D main switch, O/D OFF indicator light and Engine and ECT ECU (See page IN-35).****NG****Repair or replace the harness or connector.****OK**

Check and replace the Engine and ECT ECU (See page IN-35).