

## REMOVAL


### 1. REMOVE REAR WHEEL

Torque:

Steel wheel: 209 N·m (2, 131 kgf·cm, 154 ft·lbf)

Aluminum wheel: 131 N·m (1,340 kgf·cm, 97 ft·lbf)

### 2. SUPPORT REAR AXLE HOUSING WITH JACK

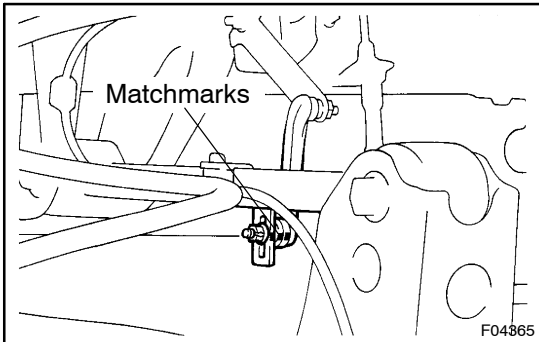

### 3. w/ AHC System – LH Side:

#### DISCONNECT HEIGHT CONTROL SENSOR LINK

- Place matchmarks on the height control sensor link and upper control arm.
- Remove the nut and disconnect the height control sensor link.

**Torque: 5.6 N·m (57 kgf·cm, 49 in·lbf)**

### 4. REMOVE UPPER CONTROL ARM


#### (a) w/ ABS:

Disconnect the ABS speed sensor wire harness.

#### (b) RH side:

Remove the bolt from the heat insulator.

**Torque: 18 N·m ( 185 kgf·cm, 13 ft·lbf)**

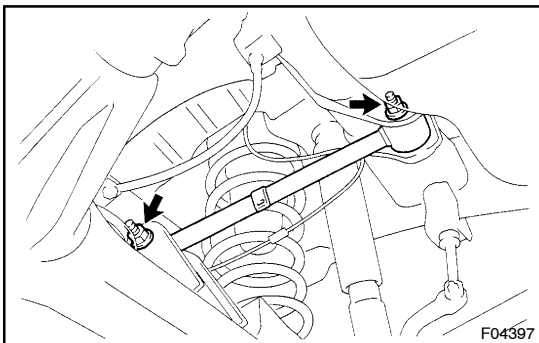


- Remove the 2 nuts, washers, bolts, and upper control arm.

**Torque: 150 N·m ( 1,530 kgf·cm, 111 ft·lbf)**

#### HINT:

At the time of installation, please refer to the following items.

- Replace the used 2 nuts with new ones.
- After stabilizing the suspension, torque the nuts.

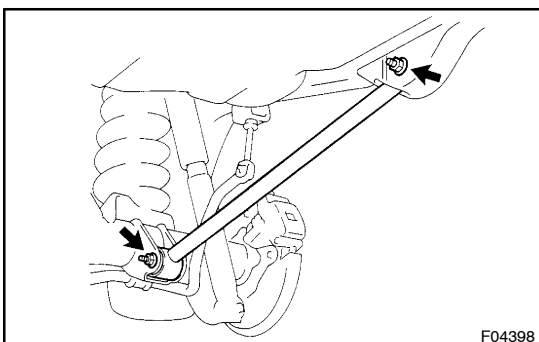

### 5. REMOVE LOWER CONTROL ARM

Remove the 2 nuts, washers, bolts and lower control arm.

**Torque: 150 N·m ( 1,530 kgf·cm, 111 ft·lbf)**

#### HINT:

At the time of installation, please refer to the following items.

- Replace the used 2 nuts with new ones.
- After stabilizing the suspension, torque the nuts.