


CIRCUIT DESCRIPTION

The lift amount of EGR valve is controlled by the vacuum which is regulated by the E engine ECU. –VRV operated by the

Under the following conditions, EGR is cut to maintain driveability.

- Before the engine is warmed up
- During deceleration (Diesel throttle valve closed)
- Light engine load (amount of intake air very small)
- Engine speed over 3,000 rpm

[illegible]

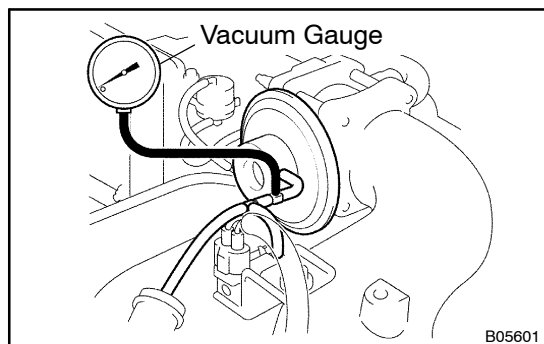INSPECTION PROCEDURE**When using hand -held tester****1 Check the connection of vacuum hose.****NG****Repair or replace.****OK****2 Check the vacuum between EGR valve and VSV for EGR at 1,500 rpm.****PREPARATION:**

(a) Using a 3 -way connector, connect a vacuum gauge to the hose between the VSV and EGR valve.

(b) Warm up the engine to above 80 °C (176 °F).

CHECK:


Check the vacuum at 1,500 rpm.

RESULT:

Type	Vacuum
I	0 kPa (0 mmHg, 0 in. Hg)
II	0 kPa (0 mmHg, in. Hg) ~ 28 kPa (210 mmHg, 8.3 in. Hg)
III	Above 28 kPa (210 mmHg, 8.3 in. Hg)

Type I**Go to step 7.****Type III****Go to step 10****Type II**

3 Check the VSV circuit for EGR.

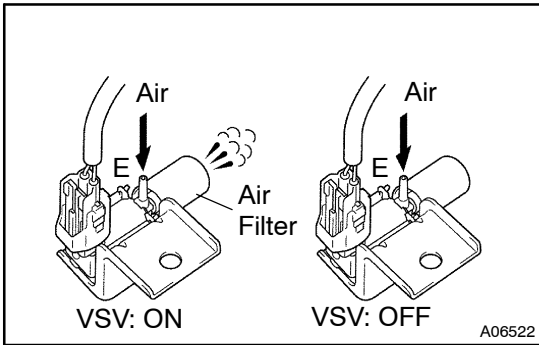

PREPARATION:

- Disconnect the vacuum hose from the VSV for EGR.
- Connect the hand-held tester to the DLC3.
- Turn the ignition switch ON and push the hand-held tester main switch ON.
- Select the ACTIVE TEST mode on the hand-held tester.

CHECK:

Check operation of VSV for EGR, when it is operated by the hand-held tester.

OK:

VSV is ON:

Air from pipe E flows out through air filter.

VSV is OFF:

Air does not flow from pipe E to air filter.

OK

Check the connection, damage and blockage of vacuum hose.

NG


4 Check VSV for EGR ([See page EC-9](#)).

NG

Replace VSV for EGR.

OK

5 Check voltage between terminal EGR of engine ECU and body ground.

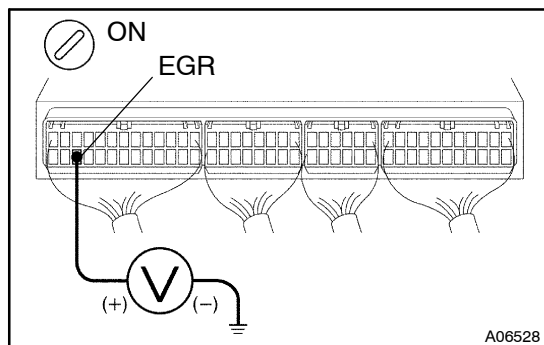

PREPARATION:


- Remove the glove compartment door.
- Turn the ignition switch ON.

CHECK:

Measure voltage between terminal EGR of engine ECU and body ground.

OK:

Voltage: 9 – 14 V

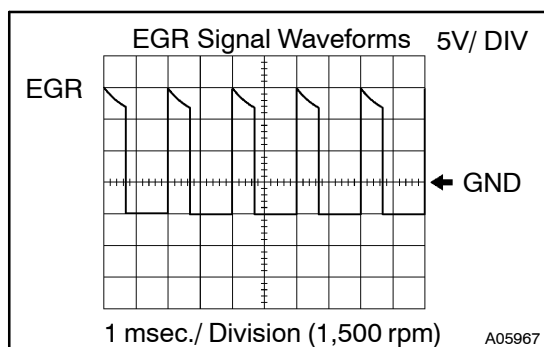

Reference: INSPECTION USING OSCILLOSCOPE

During EGR system is ON (engine speed 1,500 rpm), check waveform between terminals EGR and E1 of engine ECU.

HINT:

The correct waveform is as shown.

NG

Check and replace engine ECU
(See page IN-19).

OK


6 Check for open and short in harness and connector between VSV for EGR and engine ECU (See page IN-19).

NG

Repair or replace harness or connector.

OK

7 Check operation of E-VRV.

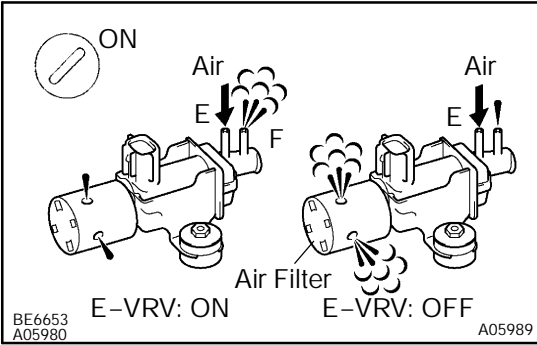

PREPARATION:

- Disconnect the vacuum hoses from the E-VRV.
- Connect the hand-held tester to the DLC3.
- Turn the ignition switch ON and the push hand-held tester main switch ON.
- Select the ACTIVE TEST mode on the hand-held tester.

CHECK:

Check operation of E-VRV, when it is operated by the hand-held tester.

OK:

E-VRV ON:

Air from pipe E is flowing out through pipe F.

E-VRV OFF:

Air from pipe E is flowing out through air filter.

OK

Go to step 10.

NG

8 Check E-VRV for EGR (See page EC-9).

NG

Replace E-VRV.

OK

9 Check for open and short in harness and connector between E-VRV and engine ECU, E-VRV and ECD main relay (Marking : ECD) (See page IN-19).

NG

Repair or replace harness or connector.

OK

10 Check EGR valve ([See page EC-9](#)).

NG

Replace the EGR valve.

OK

Check and replace engine ECU ([See page IN-19](#)).

When not using hand-held tester

1 Check the connection of vacuum hose.

NG

Repair or replace.

OK

2 Check the vacuum between EGR valve and VSV for EGR at 1,500 rpm ([See page DI-85](#), Step 2).

Type I

Go to step 6.

Type III

Go to step 9.

Type II

3 Check VSV for EGR ([See page EC-9](#)).

NG

Replace VSV for EGR.

OK

- 4 Check voltage between terminal EGR of engine ECU and body ground (See page DI-85, Step 5).

NG

Check and replace engine ECU (See page IN-19).

OK


- 5 Check for open and short in harness and connector between VSV for EGR and engine ECU (See page IN-19).

NG

Repair or replace harness or connector.

OK

- 6 Check operation of E-VRV.

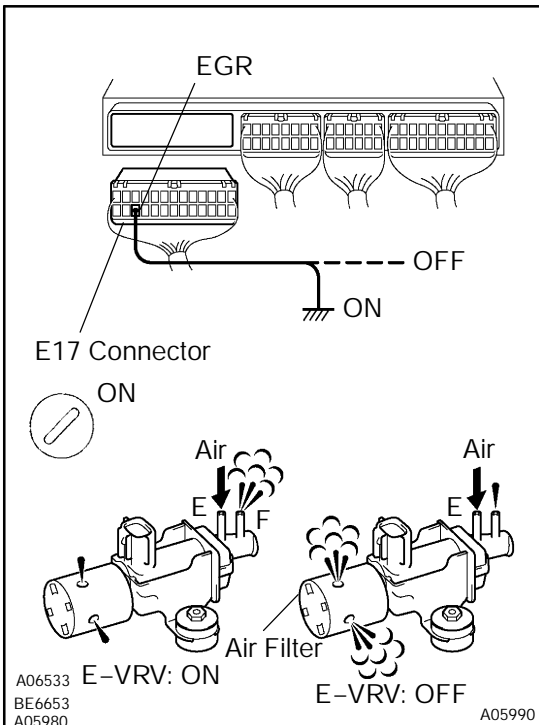

PREPARATION:

- Remove the glove compartment door.
- Disconnect the "E17" connector of engine ECU.
- Turn the ignition switch ON.

CHECK:

Check E-VRV operation.

- Connect between terminal EGR of engine ECU connector and body ground (ON).
- Disconnect between terminal EGR of engine ECU connector and body ground (OFF).

OK:

E-VRV ON:

Air from pipe E is flowing out through pipe F.

E-VRV OFF:

Air from pipe E is flowing out through air filter.

OK

Go to step 9.

NG

7 Check E-VRV ([See page EC-9](#)).

NG

Replace E-VRV.

OK

8 Check for open and short in harness and connector between E-VRV and engine ECU, E-VRV and ECD main relay (Marking : ECD) ([See page IN-19](#)).

NG

Repair or replace harness or connector.

OK

9 Check EGR valve ([See page EC-9](#)).

NG

Replace EGR valve.

OK

Check and replace engine ECU ([See page IN-19](#)).