

<b>DTC</b>	<b>RrDEF, F/D</b>	<b>Water Temperature Sensor Circuit</b>
------------	-------------------	---


<b>DTC</b>	<b>14</b>	<b>Water Temperature Sensor Circuit</b>
------------	-----------	---

## CIRCUIT DESCRIPTION

This sensor detects the water temperature and sends the appropriate signals to the A/C amplifier.

Blinking light	Detection Item	Trouble Area
RrDEF F/D	Open or short in water temperature sensor circuit.	<ul style="list-style-type: none"> <li>• water temperature sensor</li> <li>• Harness or connector between water temperature sensor and ECM</li> <li>• Harness or connector between A/C Amplifier and ECM</li> <li>• A/C Amplifier</li> <li>• ECM</li> </ul>
DTC No.	Detection Item	Trouble Area
14	Open or short in water temperature sensor circuit.	<ul style="list-style-type: none"> <li>• water temperature sensor</li> <li>• Harness or connector between water temperature sensor and ECM</li> <li>• Harness or connector between A/C Amplifier and ECM</li> <li>• A/C Amplifier</li> <li>• ECM</li> </ul>


## WIRING DIAGRAM

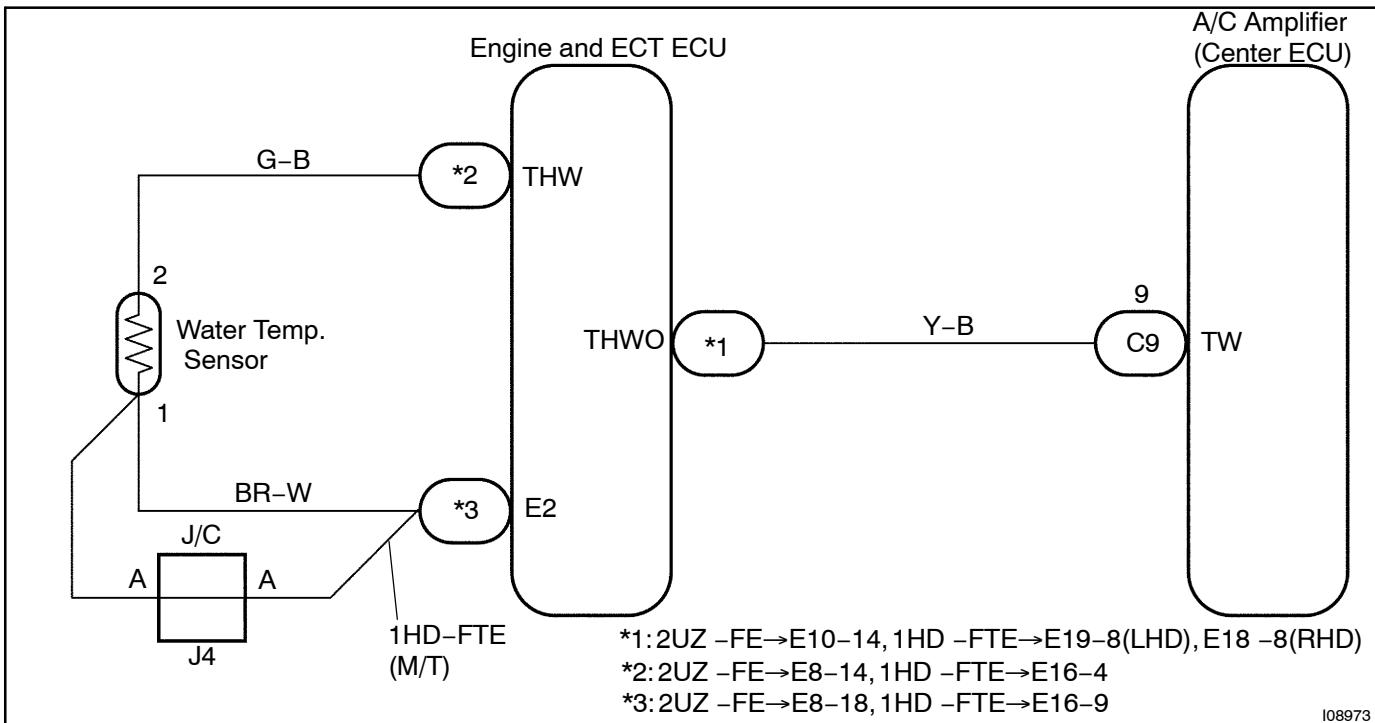

## INSPECTION PROCEDURE

- 1 Check voltage between terminals TW and GND of A/C amplifier connector.**

w/o Navigation system:

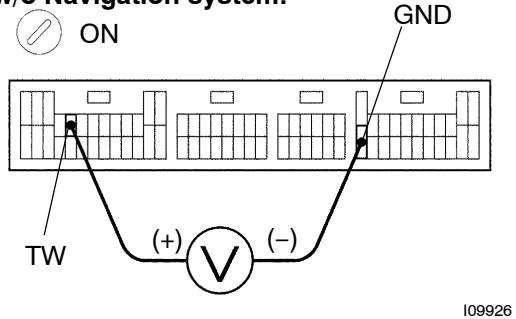

**PREPARATION:**

Remove A/C amplifier with connectors still connected.

**CHECK:**

- (a) Turn ignition switch to ON.
- (b) Measure voltage between terminals TW and GND of A/C amplifier connector at each water temperature.

**OK:**

**Voltage :**

at 25°C (77°F) : 1.8 – 2.2 V

at 40°C (104°F) : 1.2 – 1.6 V


**HINT:**

As the temperature increases, the voltage decreases.

**NG**

**Go to step 3.**

w/ Navigation system:

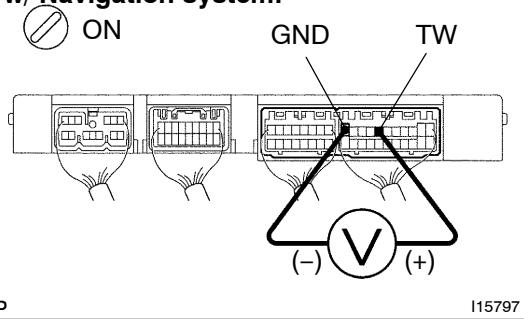

**OK**

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-130](#)). However, if RrDEF and F/D indicators light up (or DTC 14 is displayed), check and replace amplifier.

- 2 Check water temperature sensor circuit (Refer Engine Repair Manual).**

**NG**


**Replace water temperature sensor.**

**OK**

- 3 Check harness and connector between A/C amplifier and ECM  
**(See page IN-34).**

 NG

Repair or replace harness or connector.

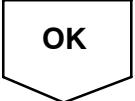 OK

Check and replace A/C amplifier.