


## INSPECTION

### 1. w/ Double locking system: INSPECT FRONT DOOR UNLOCK DETECTION SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (Door Lock set to LOCK)	–	No continuity
ON (Door Lock set to UNLOCK)	1 – 5	Continuity

If continuity is not as specified, replace the door lock assembly.

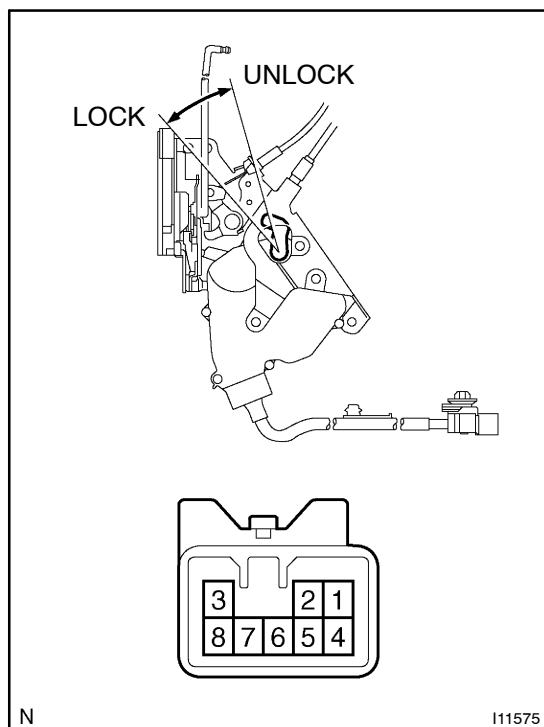



### 2. w/ Double locking system: INSPECT REAR DOOR UNLOCK DETECTION SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (Door Lock set to LOCK)	–	No continuity
ON (Door Lock set to UNLOCK)	1 – 5	Continuity

If continuity is not as specified, replace the door lock assembly.

### 3. INSPECT DOOR UNLOCK DETECTION SWITCH CIRCUIT (See page DI-1081)

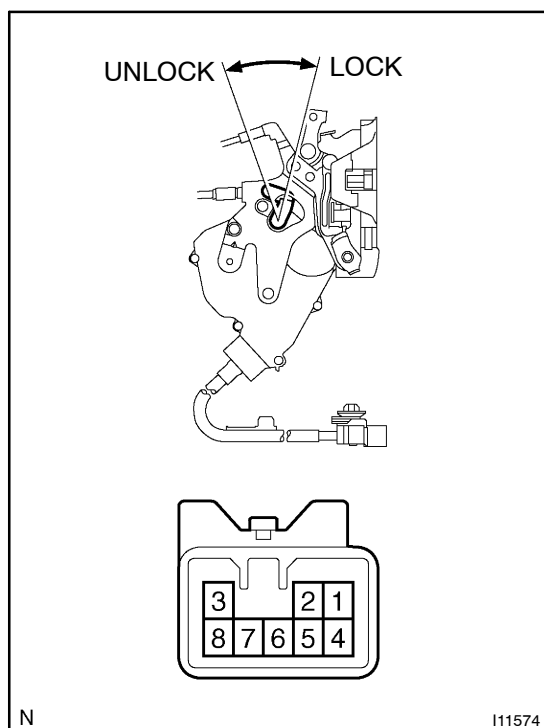

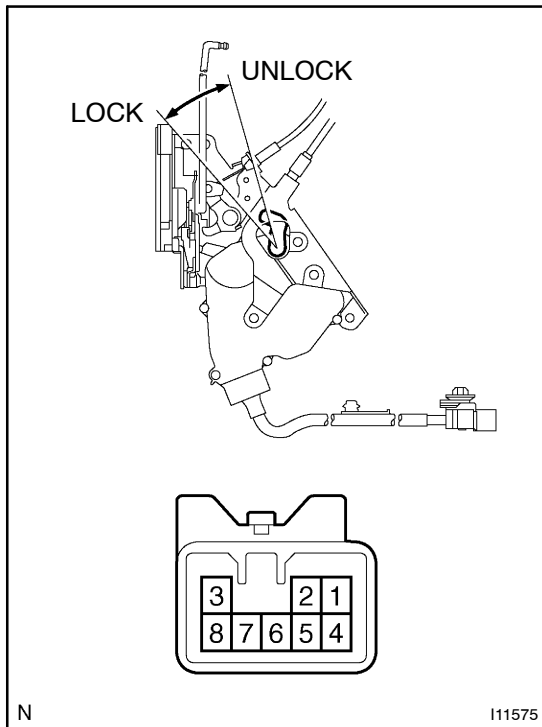


#### 4. w/ Double locking system:

##### INSPECT FRONT DOOR LOCK MOTOR OPERATION

- Connect the positive (+) lead from the battery to terminal 2 and the negative ( - ) lead to terminal 3, and check that the door lock link moves to LOCK position.
- Reverse the polarity and check that the door lock link moves to UNLOCK position.

If operation is not as specified, replace the door lock assembly.

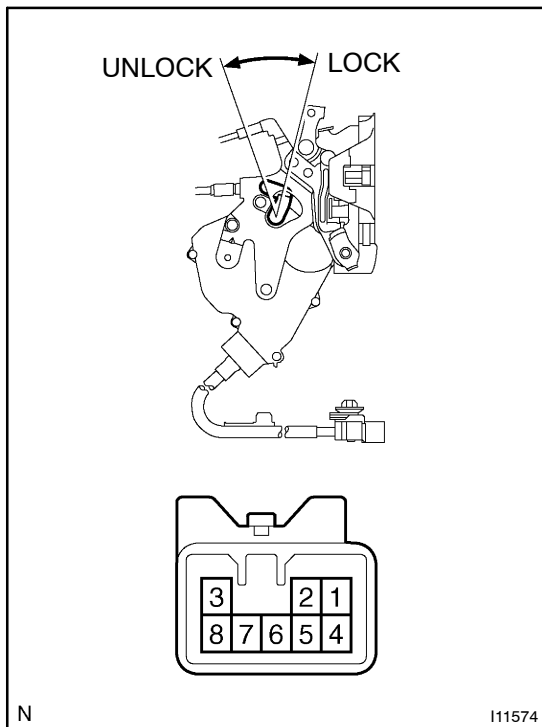

#### 5. w/ Double locking system:

##### INSPECT REAR DOOR LOCK MOTOR OPERATION

- Connect the positive (+) lead from the battery to terminal 2 and the negative ( - ) lead to terminal 3, and check that the door lock link moves to LOCK position.
- Reverse the polarity and check that the door lock link moves to UNLOCK position.

If operation is not as specified, replace the door lock assembly.