


DTC	C 1241 / 41	IG Power Source Circuit
-----	-------------	-------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1241 / 41	<p>Detection of any of conditions 1. through 4.:</p> <ol style="list-style-type: none"> Vehicle speed is 3 km/h (1.9 mph) or more and voltage of ECU terminal IG remains at below 9.5 V for more than 10 sec. While the condition that the solenoid relay is ON continues, ECU terminal IG1 voltage becomes 9.5 V or less, and the condition that the contact point of the solenoid relay is OFF continues for 0.2 sec. or more. The condition that ECU terminal IG1 voltage is more than 17.0 V continues for 1.2 sec. or more. While the solenoid relay outputs ON signal, ECU terminal IG1 voltage becomes more than 17.0 V, and the condition that the contact point of the solenoid relay is OFF continues for 0.2 sec. or more. 	<ul style="list-style-type: none"> Battery IC regulator Power source circuit

WIRING DIAGRAM

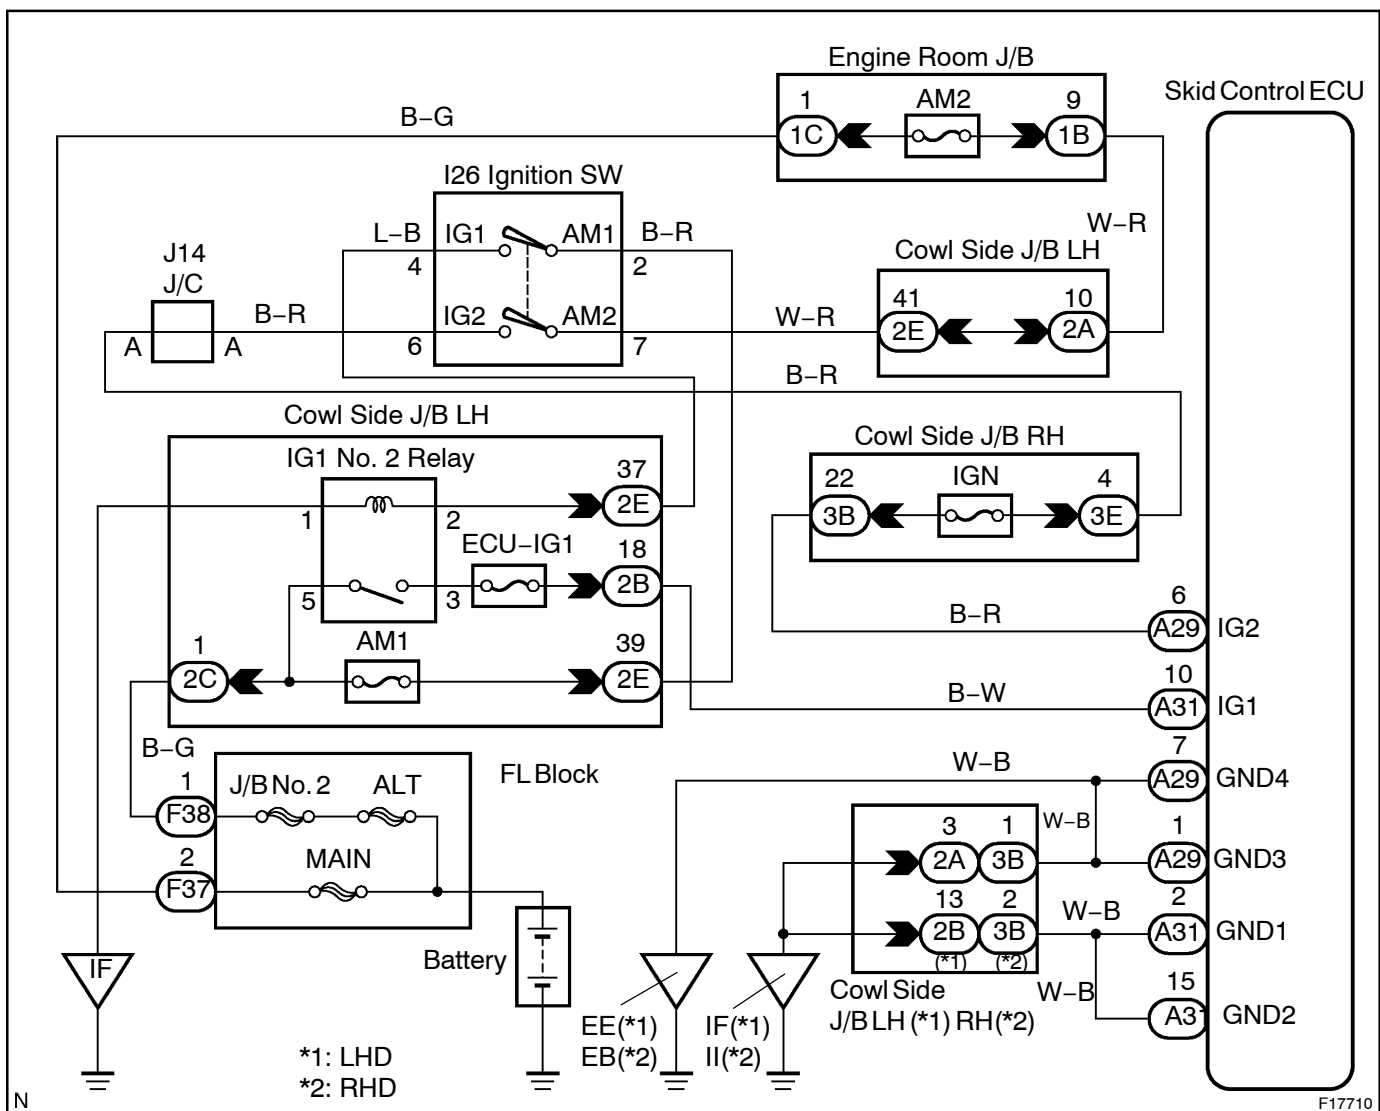

INSPECTION PROCEDURE

1	Check battery voltage.
---	------------------------

OK:

Voltage: 10 – 14 V

NG

Check and repair the charging system.

OK

2	Check voltage of the ECU IG power source.
---	---

In case of using the hand –held tester:

PREPARATION:

- (a) Connect the hand –held tester to the DLC3.
- (b) Turn the ignition switch ON and push the hand –held tester main switch ON.
- (c) Select the DATALIST mode on the hand –held tester.


CHECK:

Check the voltage condition output from the ECU displayed on the hand –held tester.

OK:

"Normal" is displayed.

In case of not using the hand –held tester:

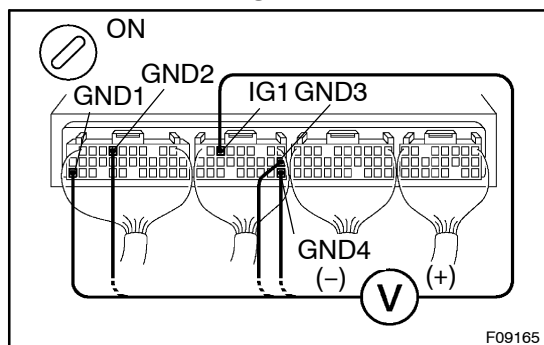

PREPARATION:

Remove skid control ECU with connectors still connected.

CHECK:

- (a) Turn the ignition switch ON.
- (b) Measure voltage between terminals IG1 and GND of skid control ECU connector.


OK:

Voltage: 10 – 14 V

OK

Turn ignition switch OFF, check and replace skid control ECU.


NG

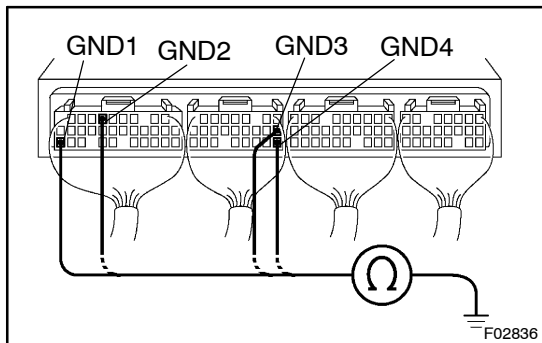3 Check continuity between terminal GND of skid control ECU connector and body ground.**CHECK:**

Measure resistance between terminal GND of skid control ECU connector and body ground.

OK:

Resistance: 1 Ω or less

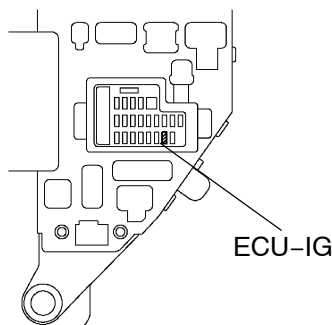NG**Repair or replace harness or connector.****OK****4 Check ECU-IG fuse.****Cowl Side J/B LH:****PREPARATION:**

Remove ECU-IG fuse from cowl side J/B LH.

CHECK:

Check continuity of ECU-IG fuse.

OK:

Continuity

NG**Check for short circuit in all the harness and components connected to ECU-IG fuse (See attached wiring diagram).****OK**

Check for open circuit in harness and connector between skid control ECU and battery (See page [IN-38](#)).