


DTC	C 1254 / 54	Pressure Switch Circuit
-----	-------------	-------------------------

## CIRCUIT DESCRIPTION


DTC No.	DTC Detecting Condition	Trouble Area
C1254/54	Either of the following 1. or 2. is detected: 1. After turning the ignition switch ON, short or open circuit in pressure switch (PL) continued for more than 1 sec. 2. After turning the ignition switch ON open in pressure switch (PH) continued for more than 1 sec.	<ul style="list-style-type: none"> <li>Pressure switch (PH or PL)</li> <li>Pressure switch circuit</li> </ul>

## WIRING DIAGRAM

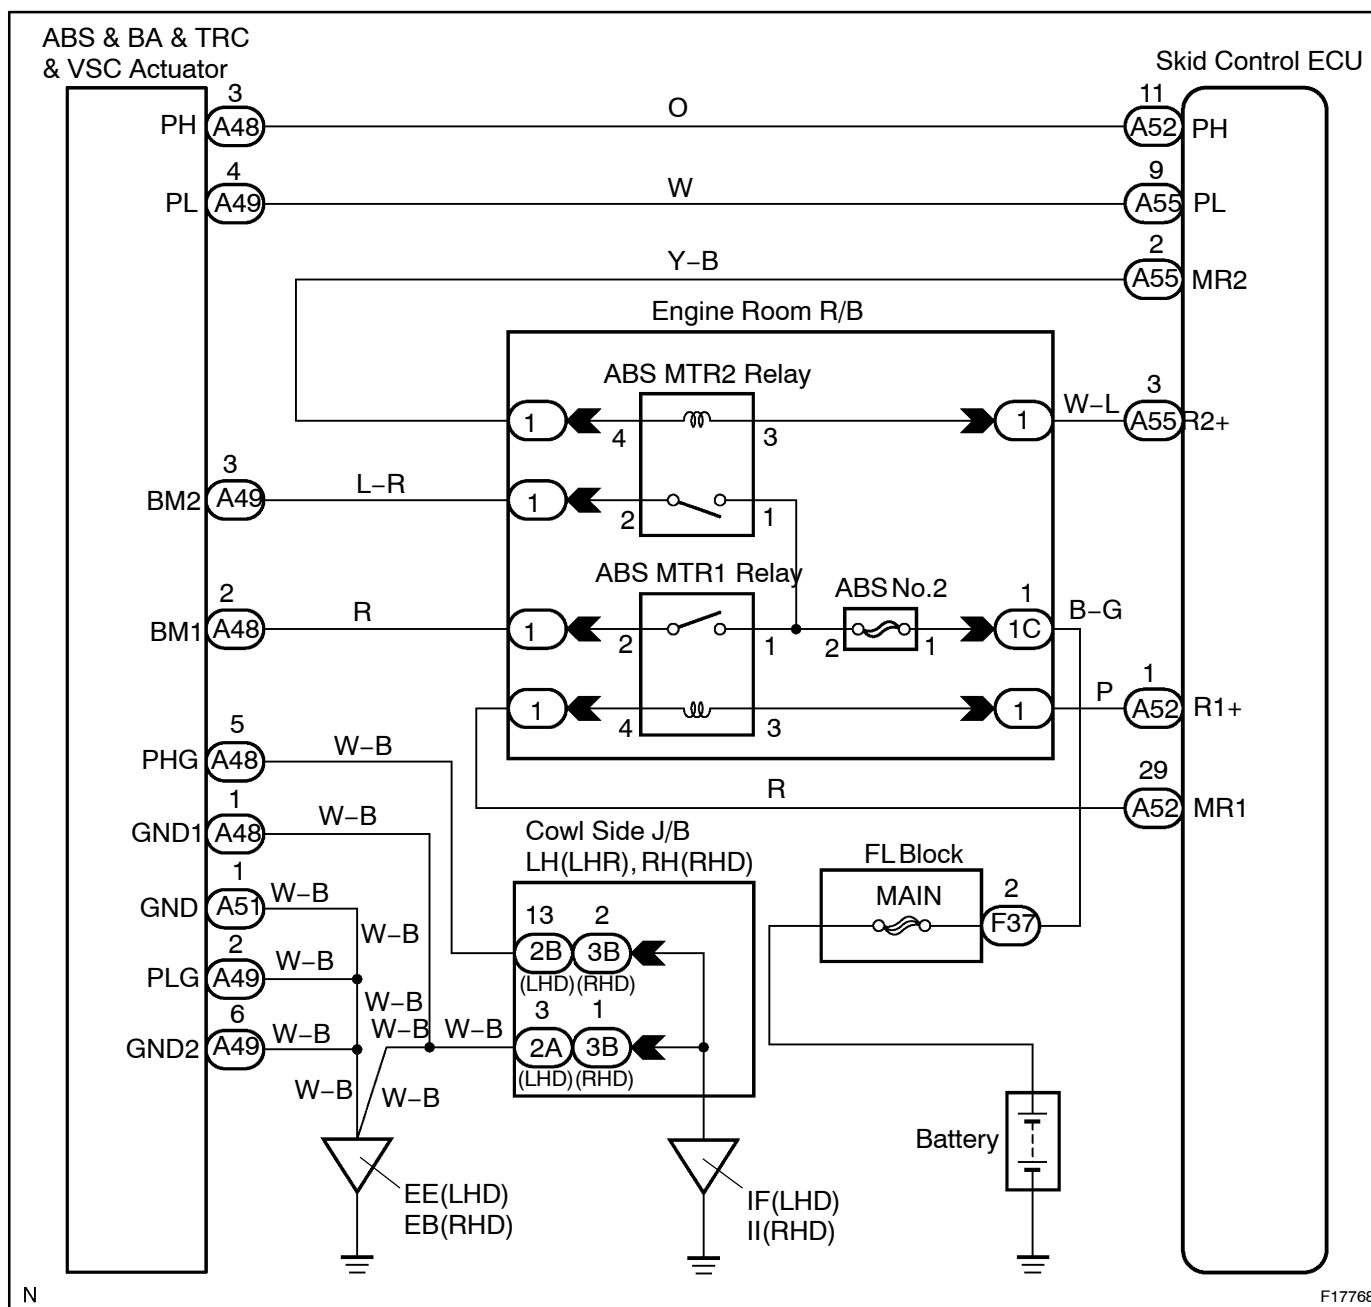

## INSPECTION PROCEDURE

### 1 Check pressure switch (PL) resistance.

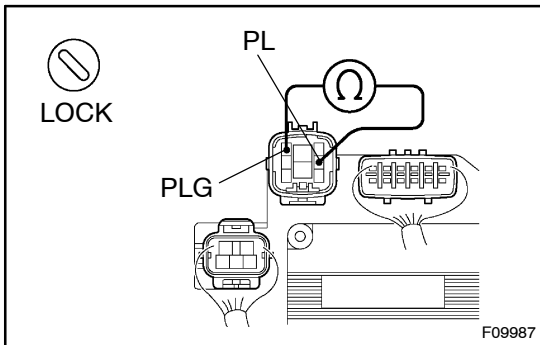

#### PREPARATION:

- Disconnect the connector (8P) from the hydraulic brake booster.
- With ignition switch OFF, depress the brake pedal more than 40 times to decrease the accumulator pressure.

#### HINT:

When a pressure in power supply system is released, reaction force becomes light and stroke becomes longer.

#### CHECK:

Measure resistance between terminals PL and PLG of hydraulic brake booster connector.

#### OK:

**Resistance: 5.1 – 6.3 kΩ**

#### HINT:


After inspection, connect the connector and clear the DTC ([See page DI-185](#)).

**NG**

**Replace hydraulic brake booster assembly.**

**OK**

### 2 Check pressure switch (PH) resistance.

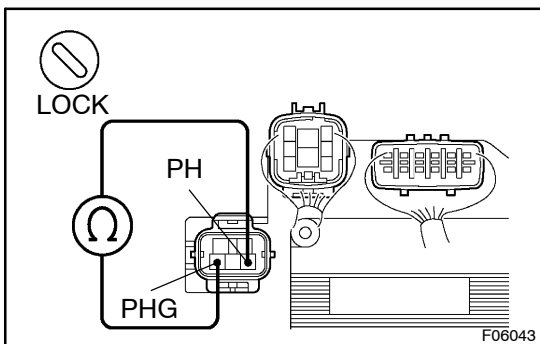

#### PREPARATION:

- Disconnect the connector (5P) from the hydraulic brake booster.
- With ignition switch OFF, depress the brake pedal more than 40 times to decrease the accumulator pressure.

#### HINT:

When a pressure in power supply system is released, reaction force becomes light and stroke becomes longer.

#### CHECK:

Measure resistance between terminals PH and PHG of hydraulic brake booster connector.

#### OK:

**Resistance: 0.9 – 1.1 kΩ**

#### HINT:

After inspection, connect the connector and clear the DTC ([See page DI-185](#)).

NG

Replace hydraulic brake booster assembly.

OK

3

Check for open and short circuit in harness and connector between pressure switch and skid control ECU ([See page IN-38](#)).

NG

Repair or replace harness or connector.

OK

Check and replace skid control ECU.