

<b>DTC</b>	<b>B0117/45</b>	<b>Short in Side Squib LH Circuit (to Ground)</b>
------------	-----------------	---

## CIRCUIT DESCRIPTION

The side squib LH circuit consists of the airbag sensor assembly and the side airbag assembly LH. It causes the SRS to deploy when the SRS deployment conditions are satisfied.

For details of the function of each component, see OPERATION on [page RS-3](#).

DTC B0 117/45 is recorded when ground short is detected in the side squib LH circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B0117/45	<ul style="list-style-type: none"> <li>• Short in side squib LH circuit (to ground)</li> <li>• Side squib LH malfunction</li> <li>• Airbag sensor assembly malfunction</li> </ul>	<ul style="list-style-type: none"> <li>• Side airbag assembly LH (Side squib LH)</li> <li>• Airbag sensor assembly</li> <li>• Floor No. 1 wire</li> </ul>

HINT:


DTC B0 117/45 is indicated only for the vehicle equipped with the side airbag.

## WIRING DIAGRAM


See [page DI-499](#).

## INSPECTION PROCEDURE

<b>1</b>	<b>Prepare for inspection (See step 1 on <a href="#">page DI-764</a>).</b>
----------	--



<b>2</b>	<b>Check floor No. 1 wire (side squib LH circuit).</b>
----------	--

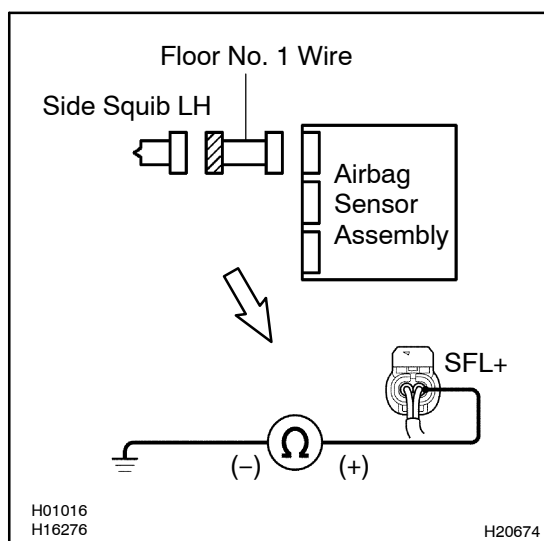

### **CHECK:**

Measure the resistance between the body ground and SFL+ of the floor No. 1 wire connector on the side airbag assembly LH (side squib LH) side.


### **OK:**

**Resistance: 1 MΩ or Higher**

**NG** Repair or replace floor No. 1 wire.

**OK**

### 3 Check airbag sensor assembly.

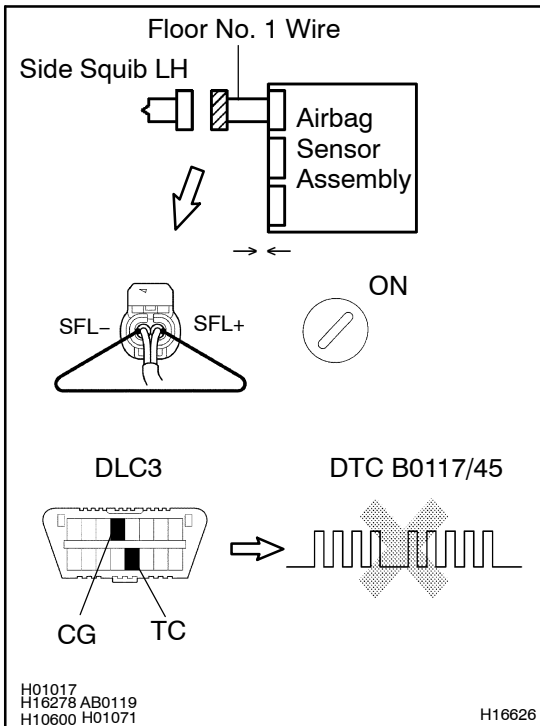

#### PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect SFL+ and SFL- of the floor No. 1 wire connector on the side airbag assembly LH (side squib LH) side.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.

#### CHECK:

- Turn the ignition switch to ON, and wait at least for 10 seconds.
- Clear the DTC stored in memory ([See page DI-432](#)).
- Turn the ignition switch to LOCK, and wait at least for 10 seconds.
- Turn the ignition switch to ON, and wait at least for 10 seconds.
- Check the DTC ([See page DI-432](#)).

#### OK:

**DTC B0 117/45 is not output.**

#### HINT:


Codes other than code B0 117/45 may be output at this time, but they are not relevant to this check.

**NG**

**Replace airbag sensor assembly.**

**OK**

# 4 Check side squib LH.

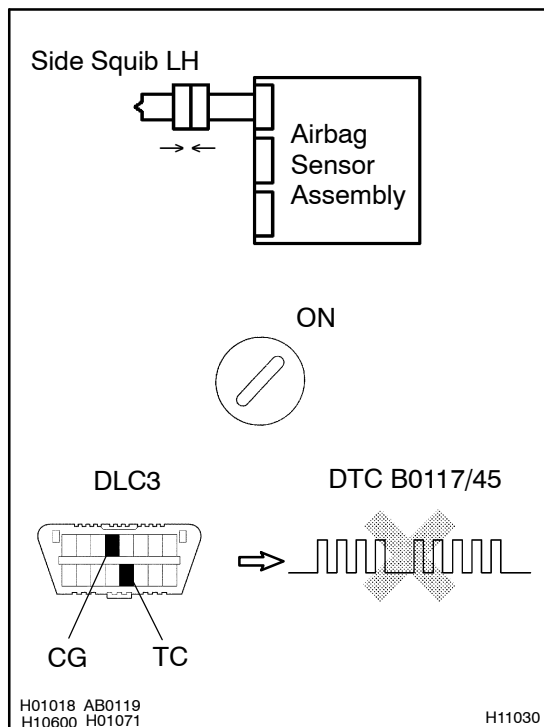

## PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the side airbag assembly LH (side squib LH) connector.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.

## CHECK:

- Turn the ignition switch to ON, and wait at least for 10 seconds.
- Clear the DTC stored in memory ([See page DI-432](#)).
- Turn the ignition switch to LOCK, and wait at least for 10 seconds.
- Turn the ignition switch to ON, and wait at least for 10 seconds.
- Check the DTC ([See page DI-432](#)).

## OK:

**DTC B0 117/45 is not output.**

## HINT:

Codes other than code B0 117/45 may be output at this time, but they are not relevant to this check.

**NG**

**Replace side airbag assembly LH (side squib LH).**

**OK**

**From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check. If the malfunctioning part can not be detected by the simulation method, replace all SRS components including the wire harness.**