

DTC	B1135/24	Half Connection in Airbag Sensor Assembly Connector
------------	-----------------	--

CIRCUIT DESCRIPTION

The airbag sensor assembly detects partial connection of connector.

For details of the function of each component, see OPERATION on [page RS-3](#).

DTC B 1135/24 is recorded when the airbag sensor assembly detects an open in the electrical connection check mechanism of the airbag sensor connector or in the airbag sensor circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B1135/24	<ul style="list-style-type: none"> • Malfunction of electrical connection check mechanism of airbag sensor assembly connector • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Electrical connection check mechanism • Airbag sensor assembly

INSPECTION PROCEDURE

1	Are connectors of airbag sensor assembly properly connected?
----------	---


NO

Connect connectors.

YES

2	Prepare for inspection (See step 1 on page DI-764).
----------	--

3 Check airbag sensor assembly.

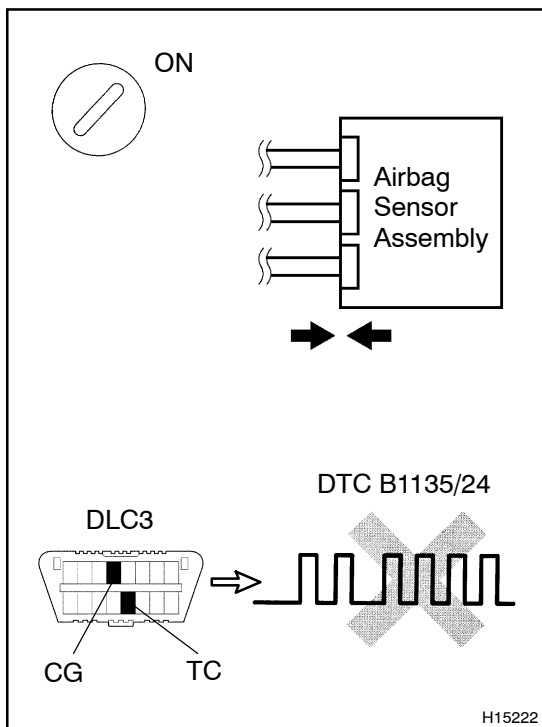

PREPARATION:

- Connect the connectors to the airbag sensor assembly.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 10 seconds.
- Clear the DTC stored in memory ([See page DI-432](#)).
- Turn the ignition switch to LOCK, and wait at least for 10 seconds.
- Turn the ignition switch to ON, and wait at least for 10 seconds.
- Check the DTC ([See page DI-432](#)).

OK:

DTC B 1135/24 is not output.

HINT:


Codes other than code B 1135/24 may be output at this time, but they are not relevant to this check.

OK

Complete.

NG

4 Perform a visual check of the disconnection detection pin.

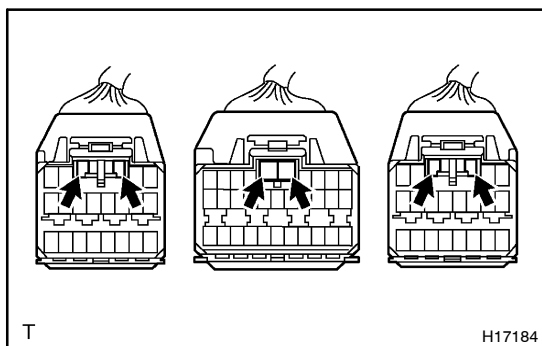

OK:

No deformation is identified.

HINT:

Compare it with the other 2 connector pins.

NG

Repair or replace wire harness.

OK

Replace airbag sensor assembly.