

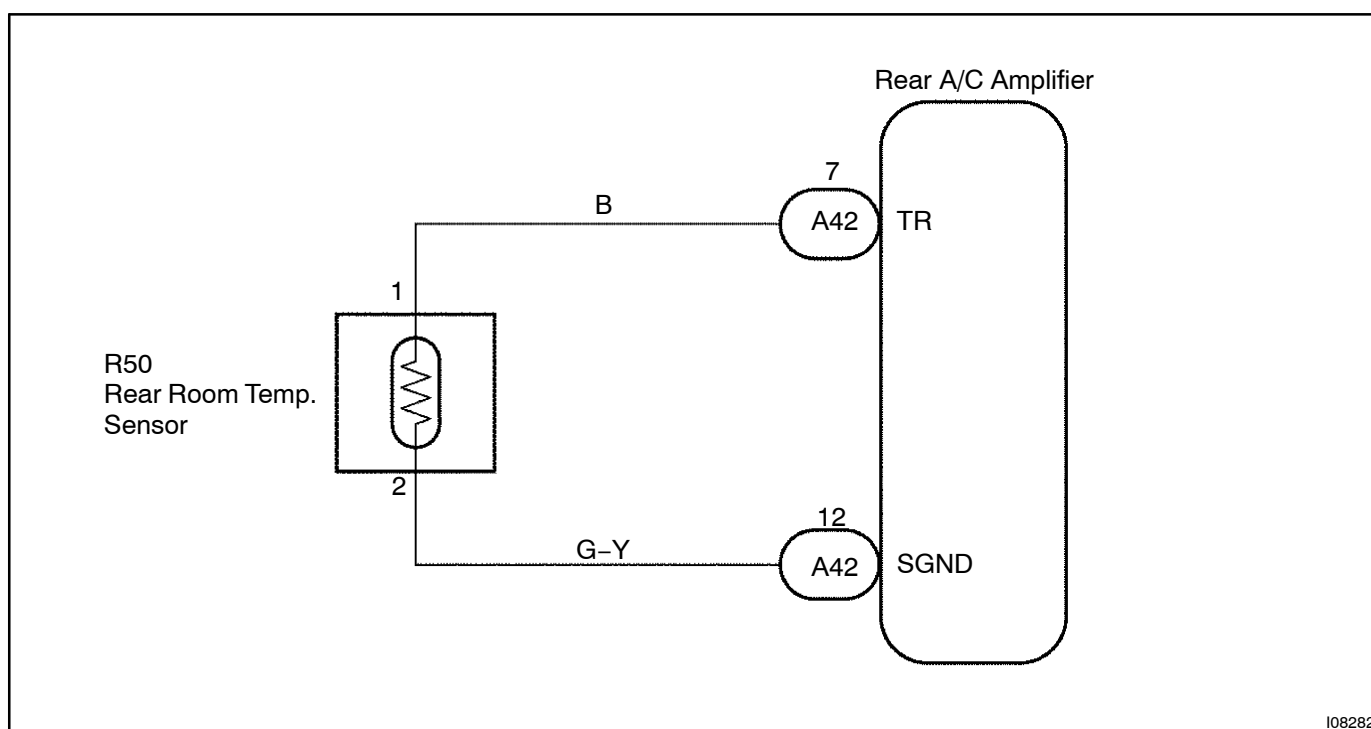
<b>DTC</b>	<b>19</b>	<b>Rear Room Temperature Sensor Circuit</b>
------------	-----------	---

## CIRCUIT DESCRIPTION

This sensor detects the temperature inside the cabin (rear side) and sends the appropriate signals to the rear A/C amplifier.

DTC No.	Detection Item	Trouble Area
19	Open or short in rear room temperature sensor circuit	<ul style="list-style-type: none"> <li>•Rear room temp. sensor</li> <li>•Harness or connector between rear room temp. sensor and rear A/C amplifier</li> <li>•Rear A/C amplifier</li> </ul>

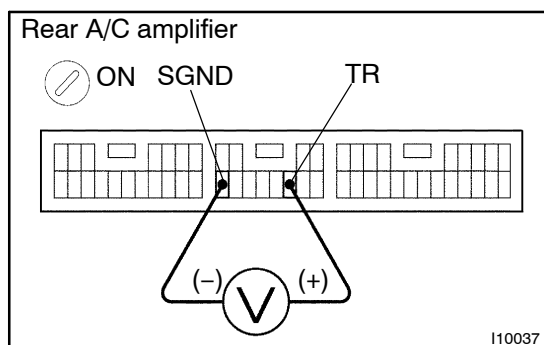
## WIRING DIAGRAM



I08282

## INSPECTION PROCEDURE

<b>1</b>	<b>Check voltage between terminals TR and SGND of A/C amplifier.</b>
----------	--

**PREPARATION:**

Remove rear A/C amplifier with connectors still connected.

**CHECK:**

- (a) Turn ignition switch to ON.
- (b) Measure voltage between terminals TR and SGND of rear A/C amplifier connector at each temperature.

**OK:**

**Voltage :**

**at 25° C (77° F) : 1.8 – 2.2 V**

**at 40° C (104° F) : 1.2 – 1.6 V**

**HINT:**

As the temperature increases, the voltage decreases.

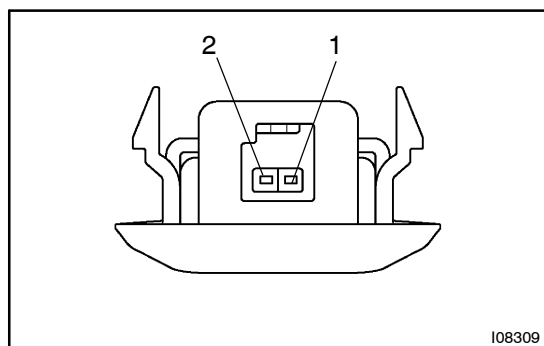
**NG**

**Go to step 2.**

**OK**

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1238). However, if DTC 19 is displayed, check and replace A/C amplifier.

<b>2</b>	<b>Check rear room temperature sensor.</b>
----------	--

**PREPARATION:**

Disconnect rear room temperature sensor connector.

**CHECK:**

Measure resistance between terminals 1 and 2 of room temperature sensor connector at each temperature.

**OK:**

**Resistance :**

**at 25° C (77° F) : 1.65 – 1.75 k  $\Omega$**

**at 50° C (122° F) : 0.55 – 0.65 k  $\Omega$**

**HINT:**

As the temperature increases, the resistance decreases.

**NG**

**Replace rear room temperature sensor.**

**OK**

**3****Check harness and connector between rear A/C amplifier and rear room temperature sensor ([See page IN-38](#)).****NG****Repair or replace harness or connector.****OK****Check and replace A/C amplifier.**