


INSTALLATION

NOTICE:

- Never use SRS parts from another vehicle. When replacing parts, replace them with new ones.
- Never reuse the side and curtain shield airbag sensor assembly involved in a collision when the airbag has deployed.
- Never repair a sensor in order to reuse it.

HINT:

For step 3 to 9, refer to [page BO-97](#).

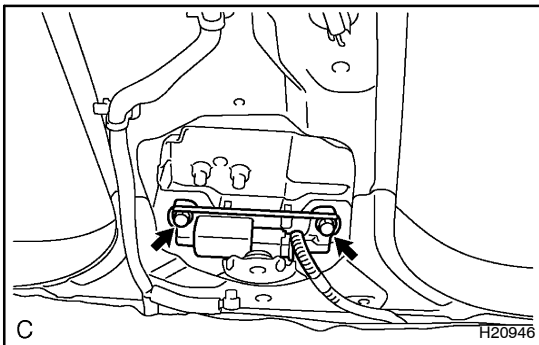

1. INSTALL SIDE AND CURTAIN SHIELD AIRBAG SENSOR ASSEMBLY

- (a) Connect the connector of the side and curtain shield airbag sensor assembly.
- (b) Install the side and curtain shield airbag sensor assembly with the 2 bolts.

Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

NOTICE:

- Connection of the connector is done after the sensor assembly has been installed.
- Make sure that the sensor assembly is installed with the specified torque.
- If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
- When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- After installation, shake the sensor assembly to check that there is no looseness.

2. INSTALL FRONT SEAT OUTER BELT ([See page BO-131](#))

Torque:

Upper bolt: 8.0 N·m (8.1 kgf·cm, 7.1 in·lbf)

3. INSTALL CENTER PILLAR LOWER GARNISH
4. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP
5. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP

6. **INSTALL FRONT SEAT OUTER BELT FLOOR ANCHOR**
Torque: 42 N·m (428 kgf·cm, 31 ft·lbf)
7. **INSTALL LAP BELT OUTER ANCHOR COVER**
8. **INSTALL FRONT DOOR SCUFF PLATE**
9. **INSTALL REAR DOOR SCUFF PLATE**
10. **INSPECT SRS WARNING LIGHT ([See page DI-432](#))**