


DTC	RrACSW, M 1	Rear Air Mix Damper Control Servomotor Circuit
------------	--------------------	---

CIRCUIT DESCRIPTION

The rear air mix damper control servomotor is controlled by the A/C control assembly and moves the air mix damper to the desired position.

Blinking light	Detection Item	Trouble Area
RrDEF M1	Air mix damper position sensor value does not change even if A/C control assembly operates air mix damper control servomotor.	<ul style="list-style-type: none"> • Rear air mix damper control servomotor. • Rear air mix damper position sensor. • Harness or connector between rear air mix control servomotor and A/C amplifier • A/C Amplifier


WIRING DIAGRAM

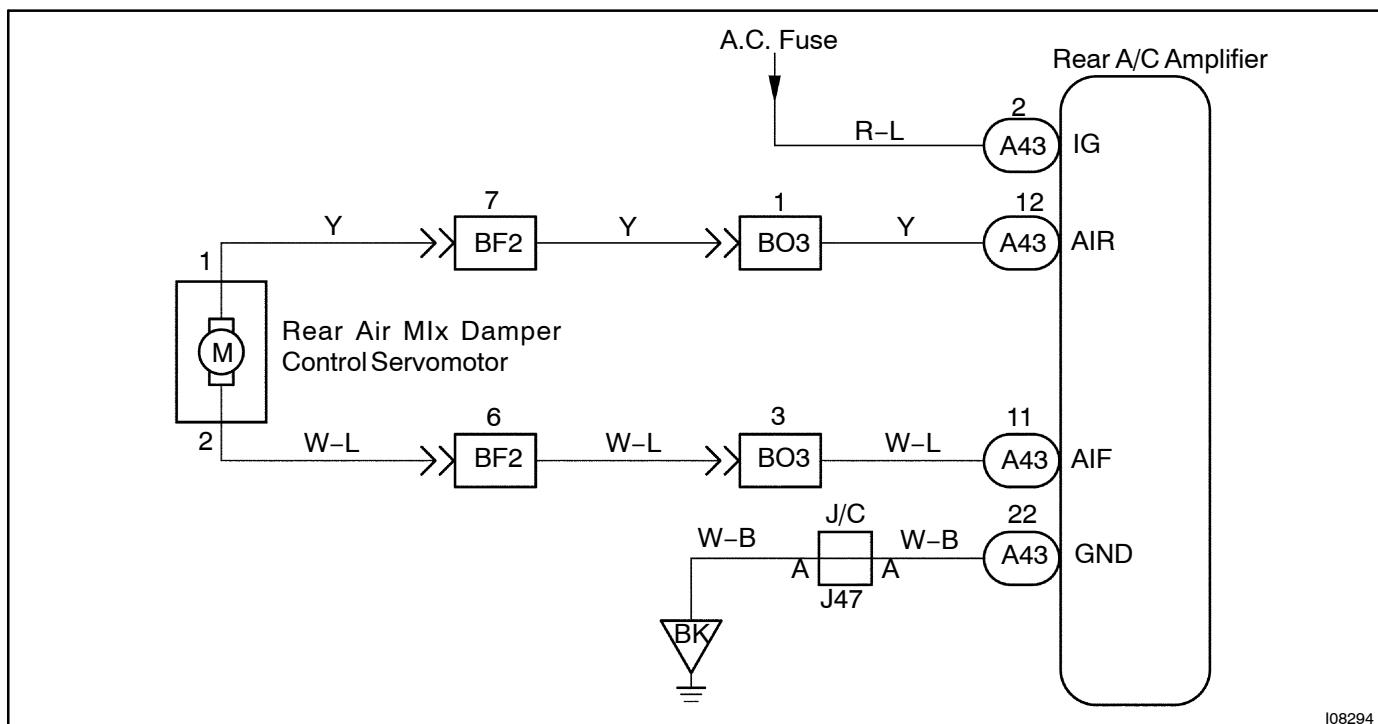

I08294

INSPECTION PROCEDURE

- 1** Check rear air mix damper control servomotor.

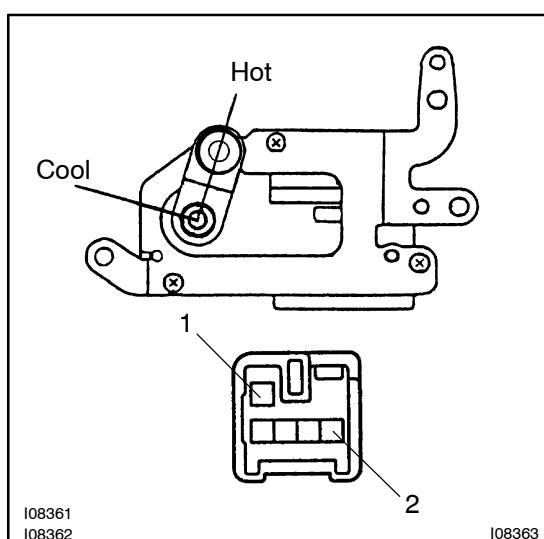

PREPARATION:

Remove heater unit ([See page AC-64](#)).

CHECK:

Connect positive (+) lead to terminal 1 and negative (-) lead to terminal 2.

OK:

The lever turns smoothly to Hot side.

CHECK:

Connect positive (+) lead to terminal 2 and negative (-) lead to terminal 1.

OK:

The lever turns smoothly to Cool side.

NG

Replace rear air mix damper control servomotor assembly.

OK

- 2** Check harness and connector between A/C amplifier and rear air mix damper control servomotor assembly ([See page IN-35](#)).

NG

Repair or replace harness or connector.

OK

Check and replace A/C amplifier.