

Pattern Select Switch Circuit (2nd Start Switch)

CIRCUIT DESCRIPTION

When 2nd start mode is selected with the pattern select switch, the Engine and ECT ECU controls the solenoid valves and the transmission starts from 2nd gear.


In D range, the transmission automatically shifts up through 3rd to 5th as usual.

In 2nd range, the transmission is held in 2nd gear.

[illegible]

INSPECTION PROCEDURE

1 Check pattern select switch (2nd start switch).

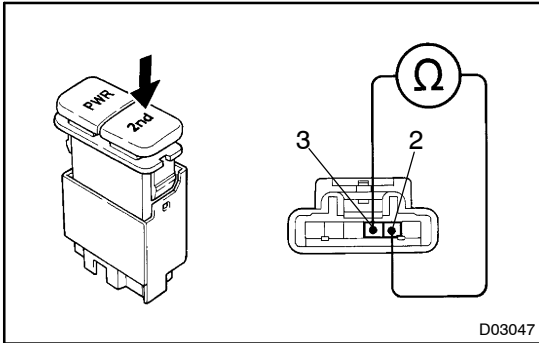

PREPARATION:

Disconnect the pattern select switch connector.

CHECK:

Check continuity between terminals 2 and 3 of pattern select switch connector when pattern select switch is set to 2nd start switch ON and OFF.

OK:


| 2nd start switch | Specified condition |
|---------------------------------|---------------------|
| Press continuously "2nd" switch | Continuity |
| Release "2nd" switch | No continuity |

NG

Replace the pattern select switch.

OK

2 Check voltage between terminal SNWI of Engine and ECT ECU and body ground.

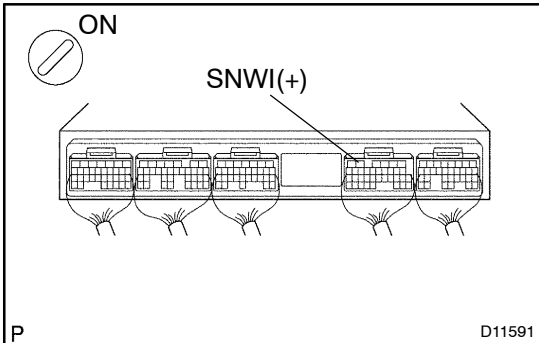

PREPARATION:

- Connect the pattern select switch connector.
- Turn the ignition switch ON.

CHECK:

Check voltage between terminal SNWI of Engine and ECT ECU and body ground when the select switch is set to 2nd start switch ON and OFF.

OK:

| 2nd start switch | Voltage |
|---------------------------------|-------------|
| Press continuously "2nd" switch | Below 1.5 V |
| Release "2nd" switch | 7.5 – 14 V |

OK

Proceed to next circuit inspection shown on matrix chart ([See page DI-26](#)).

NG

Repair or replace harness or connector
([See page IN-38](#)).