

DTC	B1249	Double lock communication stop
------------	--------------	---------------------------------------

CIRCUIT INSPECTION

This DTC is output when communication stops between the Double lock ECU and the Body ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1249	No communication from double lock ECU for more than 10 seconds.	<ul style="list-style-type: none">• Double lock ECU• Wire harness

WIRING DIAGRAM

[See page DI-1118.](#)

INSPECTION PROCEDURE

1	Check double lock ECU.
----------	-------------------------------

CHECK:

Check that the Double lock control system operates normally.

HINT:

With this inspection, whether or not the double lock ECU CPU functions normally can be diagnosed.

NG

Replace the double lock ECU ([See page IN-38](#)).

YES

2 Check wire harness. (See page IN-38)


PREPARATION:

Pull out the ECU connectors mentioned below.

Wire harness side connector of ECU	Terminal
Double lock ECU – Body ECU	MPX1 (D37-9) – MPX3 (B14-26)

CHECK:

Check continuity of the wire harness between the connectors.

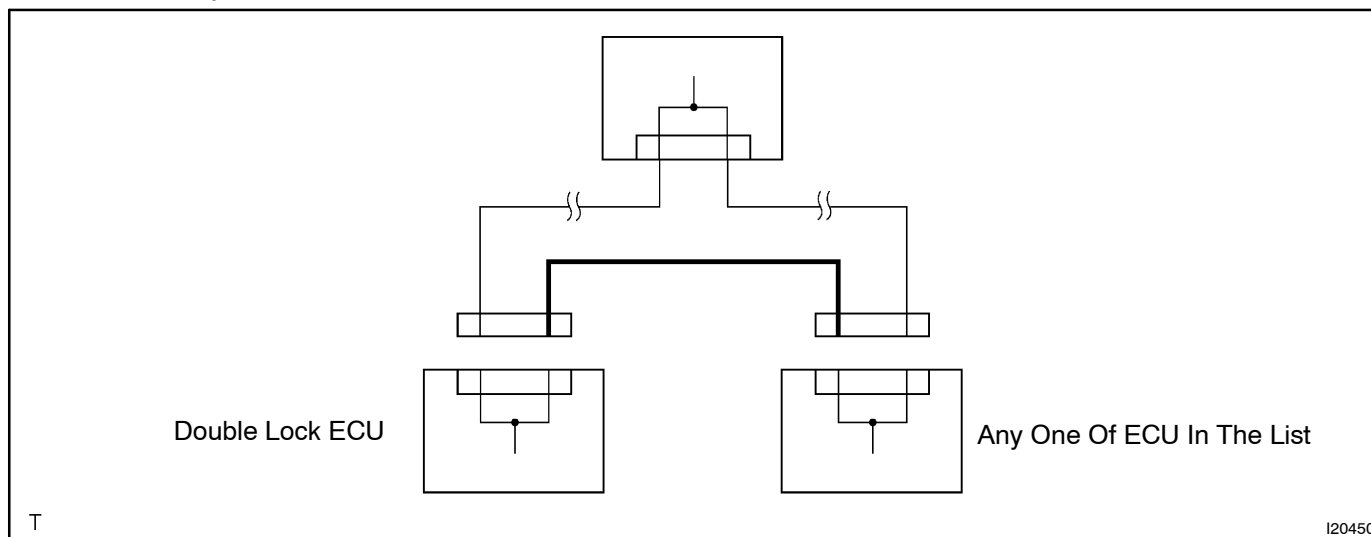

OK:

There is a continuity between the connectors.

HINT:

If there is OPEN in any wire harness, please repair it.

NG

Repair or replace wire harness.

OK

Replace double lock ECU (See page IN-38).